

MOX Systems - tehniline dokumentatsioon

assembly-manual-mps-e-en.pdf

Tehniline tõlge: vaadake mõõtmeid originaaljoonistelt ja viitelehtedelt.


Lähteleht 1

Mps-E KOOSTAMISE JUHEND


- 1 Valige õige profiil vastavalt põrandakatte paksusele.
 - 2 Kinnitage vuuk ja kinnitage profiilid vastavalt.
 - 3 Vajutage profiili, kuni see on liigendi külge kinnitatud.
 - 4 Kandke vuuk kohtadele, kuhu põrandakate asetatakse.
 - 5 Asetage ja joondage põrandakate profiiliga.
 - 6 Lõika profiilid välisnurkade jaoks 45 kraadi.
- Joondage profiilid välisnurkades ja suruge need ühenduskohta.
- 8 Asetage ja joondage põrandakate profiiliga.
 - 9 Lõika profiilid sisenurkade jaoks 45 kraadi.
 - 10 Joondage profiilid sisenurkades ja suruge need ühenduskohta.
 - 11 Asetage ja joondage põrandakate profiiliga.

Lehekülg 1/1


Originaaljoonised ja viitelehed

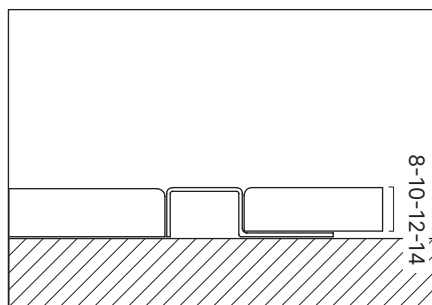


- 1** Pick the correct profile according to the flooring thickness.

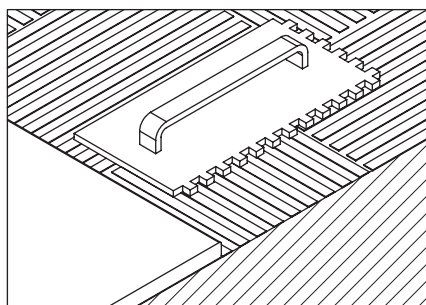


- 2** Apply joint and place the profiles anchor accordingly.

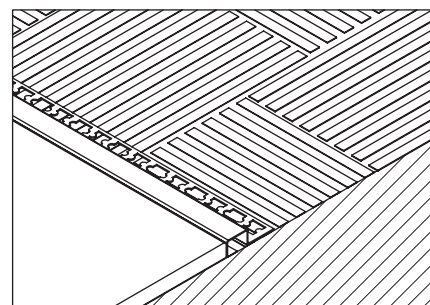


- 3** Press the profile until it is fixed to the joint.

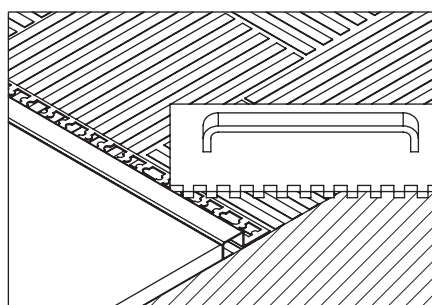


- 4** Apply joint to the places where the flooring will be placed.

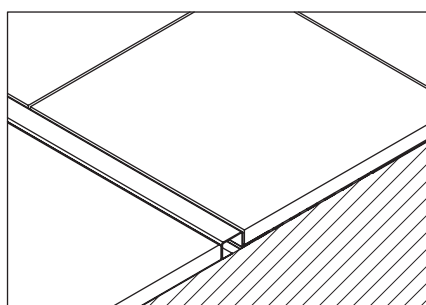


- 5** Place and align the flooring to the profile.

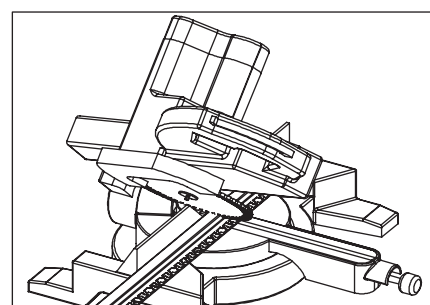


- 6** Cut profiles 45 degrees for external corners.

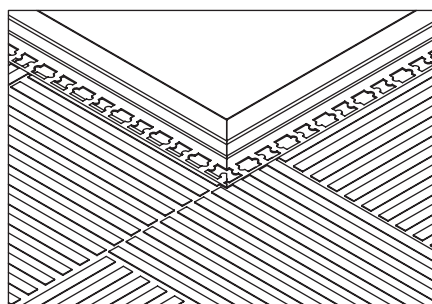


- 7** Align the profiles at the external corners and press them into the joint.

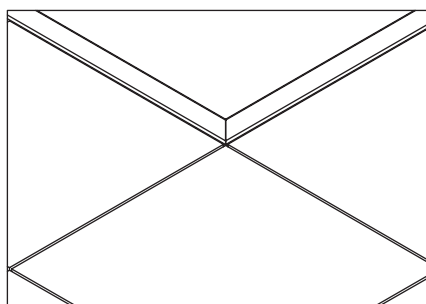


- 8** Place and align the flooring to the profile.

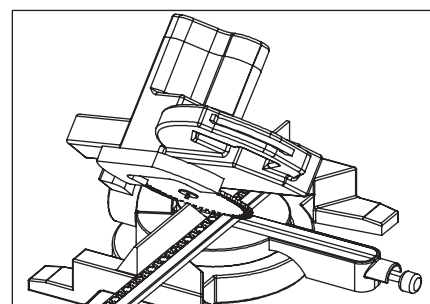

- 9** Cut profiles 45 degrees for internal corners.

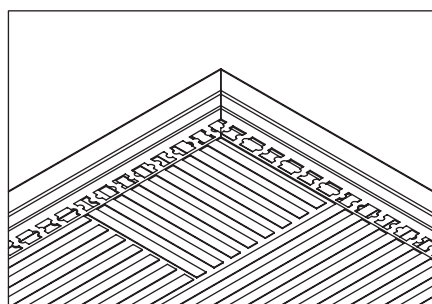

- 10** Align the profiles at the internal corners and press them into the joint.

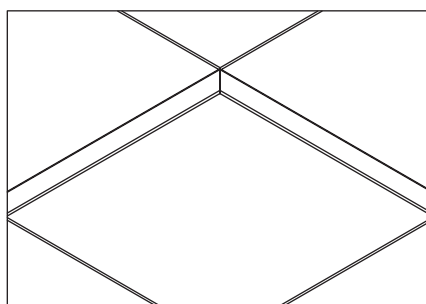

- 11** Place and align the flooring to the profile.