

MOX Systems - tehniline dokumentatsioon

assembly-manual-mps-n-en.pdf

Tehniline tõlge: vaadake mõõtmeid originaaljoonistelt ja viitelehtedelt.

Lähtelevt 1

Mps-N PAIGALDAMISJUHEND

Valige õige profiil vastavalt põranda paksusele.

2 Kinnitage vuuk ja kinnitage profiilid vastavalt.

3 Vajutage profiili, kuni see on liigendi külge kinnitatud.

4 Kandke vuuk kohtadele, kuhu põrandakate asetatakse.

5 Asetage ja joondage põrandakate profiiliga.

6 Lõika profiilid välisnurkade jaoks 45 kraadi.

Joondage profiilid välisnurkades ja suruge need ühenduskohta.

8 Asetage ja joondage põrandakate profiiliga.


9 Lõika profiilid sisenukade jaoks 45 kraadi.

10 Joondage profiilid sisenukades ja suruge need ühenduskohta.


11 Asetage ja joondage põrandakate profiiliga.

Lehekülg 1/1


Originaaljoonised ja viitelehed

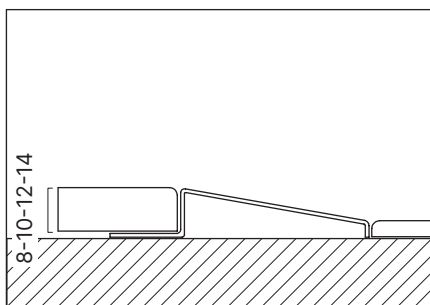


1 Pick the correct profile according to the flooring thickness.

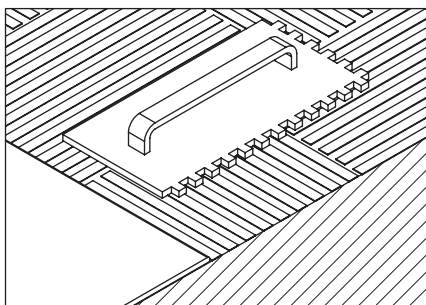


2 Apply joint and place the profiles anchor accordingly.

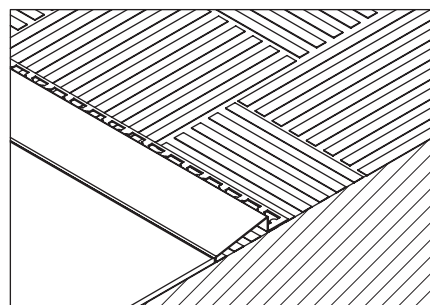


3 Press the profile until it is fixed to the joint.

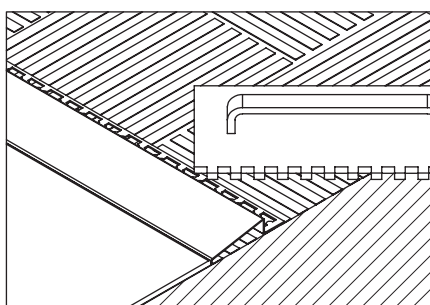


4 Apply joint to the places where the flooring will be placed.

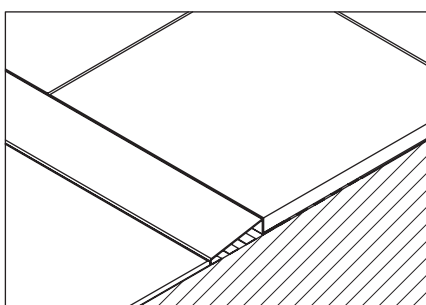


5 Place and align the flooring to the profile.

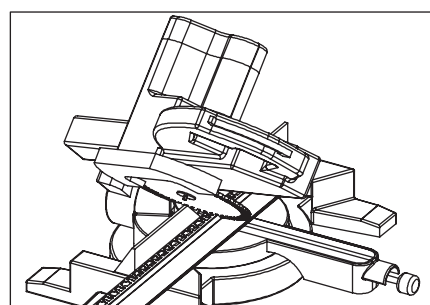


6 Cut profiles 45 degrees for external corners.

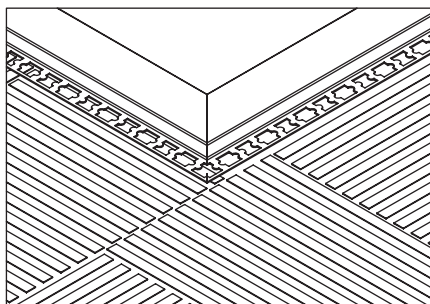


7 Align the profiles at the external corners and press them into the joint.

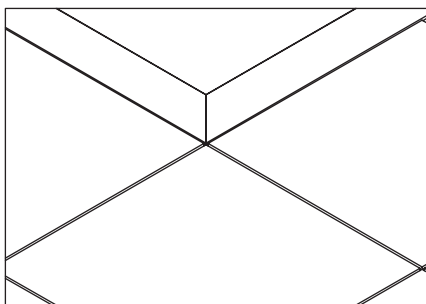


8 Place and align the flooring to the profile.

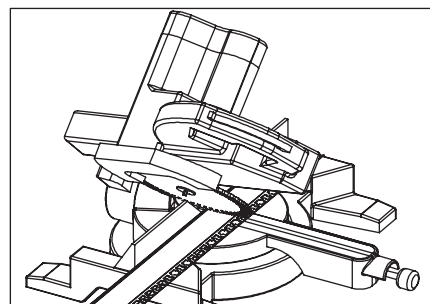

9 Cut profiles 45 degrees for internal corners.

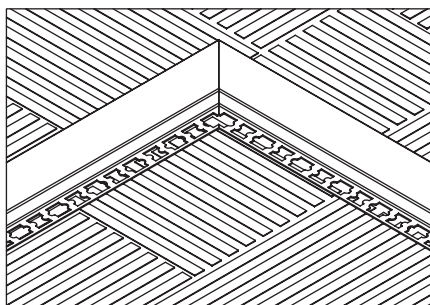

10 Align the profiles at the internal corners and press them into the joint.

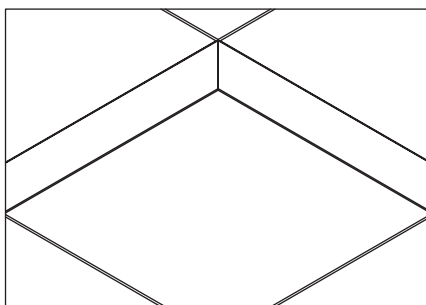

11 Place and align the flooring to the profile.