

MOX Systems - tehniline dokumentatsioon

assembly-manual-revio-en.pdf

Tehniline tõlge: vaadake mõõtmeid originaaljoonistelt ja viitelehtedelt.

Lähtelevt 1

Revio KOOSTAMISE JUHEND

Pealekandmine liimiga

- 1 Kandke profiilile silikoon või vuuk.
- 2 Kinnitage profiil pörandale külge ja vajutage seda.
- 3 Asetage vaip profiili külge.

Rakendus kruviga


- 11 Kinnitage profiil kruvidega.
- 2 Asetage vaip profiili külge.

Kõõe Birleřimleri


- 1 Lõika profiilid sisenurkade jaoks 45 kraadi.
- 2 Joondage profiilid sisenurkades ja asetage need ühenduskohta.
- 3 Asetage vaip profiili külge.
- 4 Lõika profiilid välisnurkade jaoks 45 kraadi.
- 5 Joondage profiilid välisnurkades ja asetage need ühenduskohta.
- 6 Asetage vaip profiili külge.

Originaaljoonised ja viitelehed


Application with Adhesive

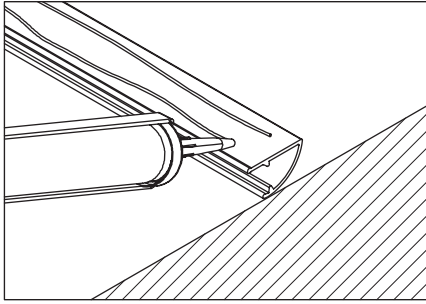

1 Apply silicone or joint to the profile.

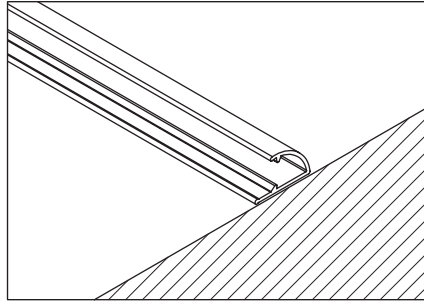


2 Fix the profile to the floor and press it.

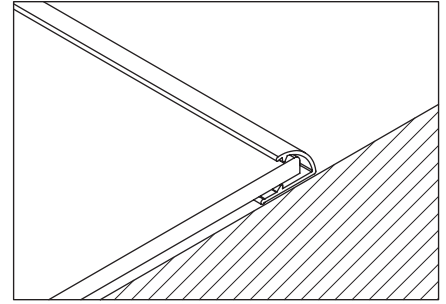


3 Place the carpet to the profile.

Application with Screw

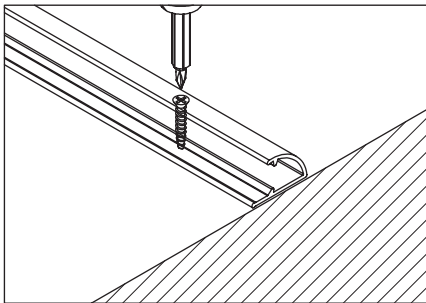


1 Fix the profile with screws.

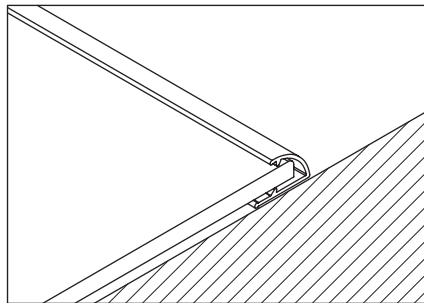


2 Place the carpet to the profile.


Köşe Birleşimleri

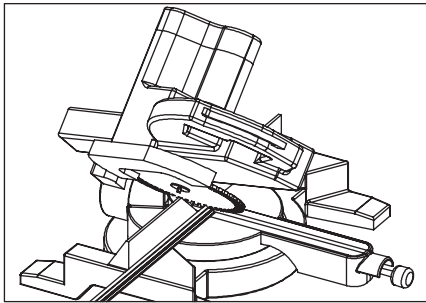


1 Cut profiles 45 degrees for internal corners.

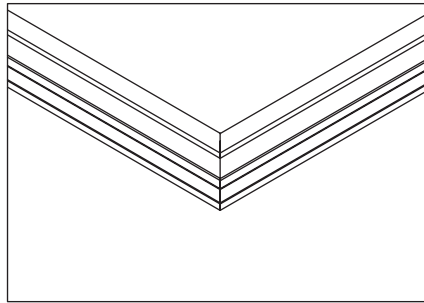


2 Align the profiles at the internal corners and place them into the joint.

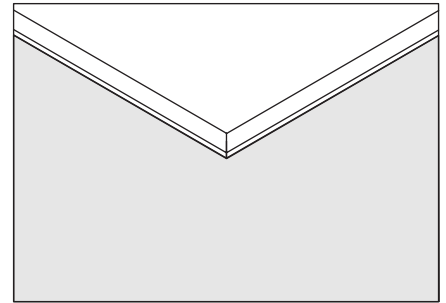


3 Place the carpet to the profile.

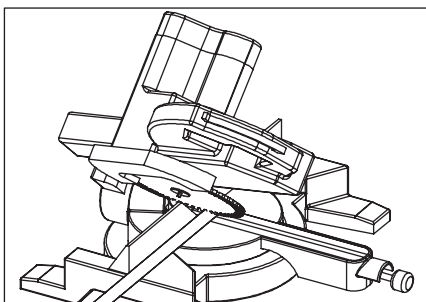

4 Cut profiles 45 degrees for external corners.

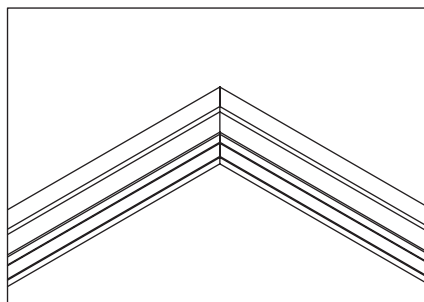

5 Align the profiles at the external corners and place them into the joint.

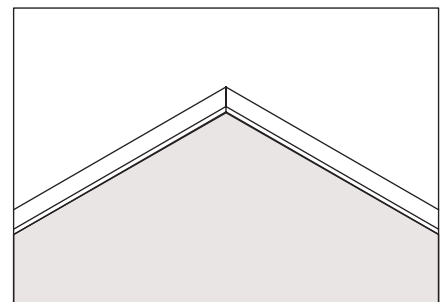

6 Place the carpet to the profile.