

MOX Systems - tehniline dokumentatsioon

assembly-manual-round-fix-en.pdf

Tehniline tõlge: vaadake mõõtmeid originaaljoonistelt ja viitelehtedelt.


Lähtelevt 1

Round-Fix KOOSTAMISE JUHEND


- 1 Valige õige profiil vastavalt plaadi paksusele.
- 2 Kinnitage vuuk ja kinnitage profiilid vastavalt.
- 3 Vajutage profiili, kuni see on liigendi külge kinnitatud.
- 4 Kandke vuuk kohtadele, kuhu keraamika asetatakse.
- 5 Asetage plaadid profiilile, veendudes, et nende servad sobivad profiiliga ja on tasased.
- 6 Lõigake kaks profiili 45 kraadi nurga all nurgaliidete jaoks.
- 7 Joondage profiilid sisenurkades ja suruge need ühenduskohta. 10
- 8 Asetage plaadid profiilile, veendudes, et nende servad sobivad profiiliga ja on tasased.

Lehekülg 1/1


Originaaljoonised ja viitelehed

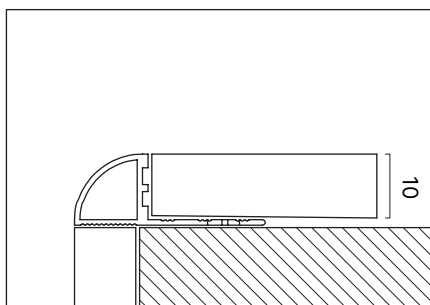


1 Pick the correct profile according to the tile thickness.

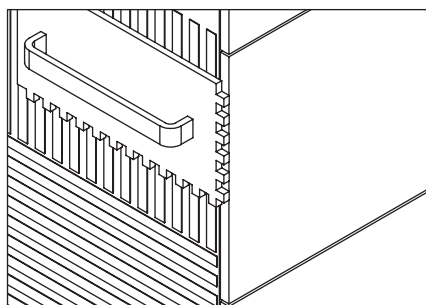


2 Apply joint and place the profiles anchor accordingly.

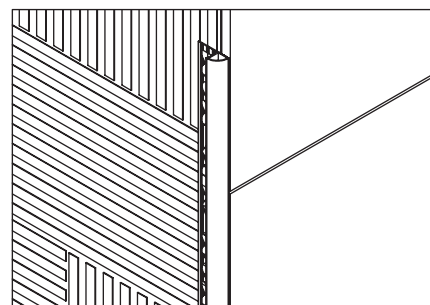


3 Press the profile until it is fixed to the joint.

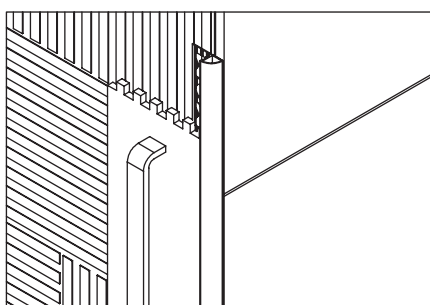


4 Apply joint to the places where the ceramics will be placed.

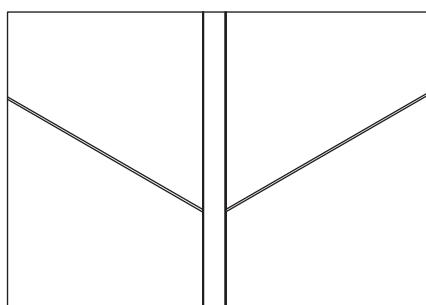


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

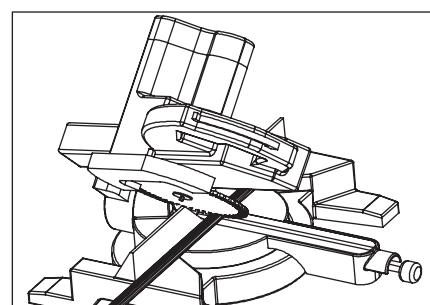

6 Cut two profiles at 45 degrees for corner joints.

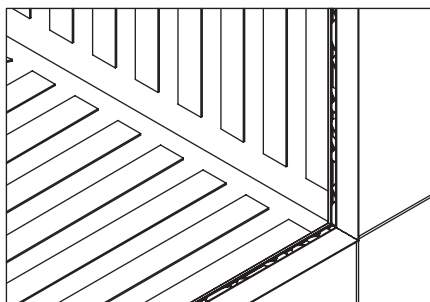

7 Align the profiles at the internal corners and press them into the joint.

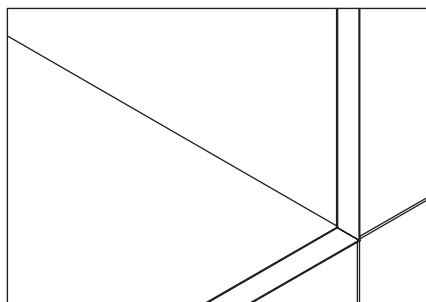

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.