

MOX Systems - tehniline dokumentatsioon

assembly-manual-visio-en.pdf

Tehniline tõlge: vaadake mõõtmeid originaaljoonistelt ja viitelehtedelt.


Lähteleht 1

Visio KOOSTAMISE JUHEND


- 1 Valige õige profiil vastavalt põrandakatte paksusele.
- 2 Kinnitage vuuk ja kinnitage profiilid vastavalt.
- 3 Vajutage profiili, kuni see on liigendi külge kinnitatud.
- 4 Asetage vaip profiili külge.
- 5 Lõika profiilid välisnurkade jaoks 45 kraadi.
- 6 Joondage profiilid välisnurkades ja asetage need ühenduskohta.
- 7 Asetage vaip profiili külge.
- 8 Lõika profiilid sisenurkade jaoks 45 kraadi.
- 9 Joondage profiilid sisenurkades ja asetage need liitekohta.
- 10 Asetage vaip profiili külge. 6 8

Lehekülg 1/1


Originaaljoonised ja viitelehed

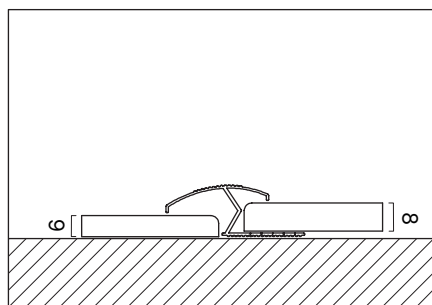


1 Pick the correct profile according to the flooring thickness.

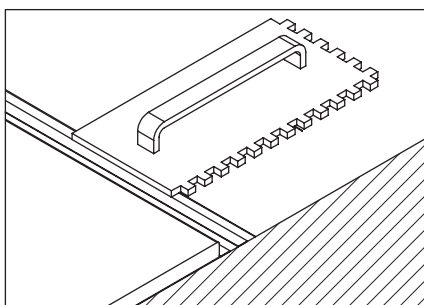


2 Apply joint and place the profiles anchor accordingly.

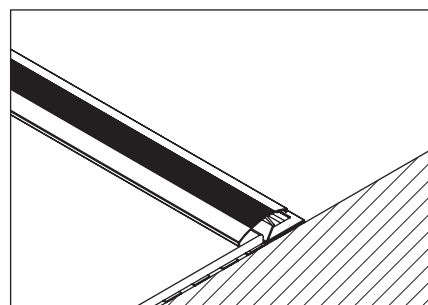


3 Press the profile until it is fixed to the joint.

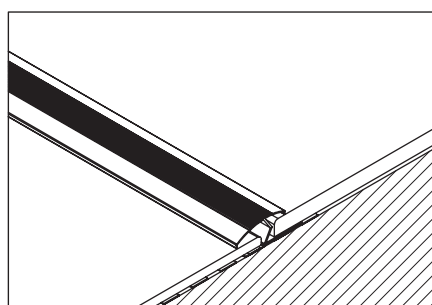


4 Place the carpet to the profile.

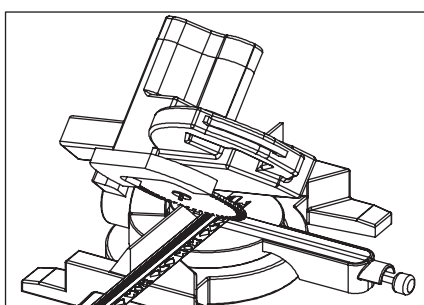


5 Cut profiles 45 degrees for external corners.

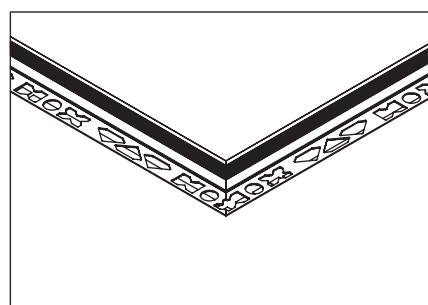


6 Align the profiles at the external corners and place them into the joint.

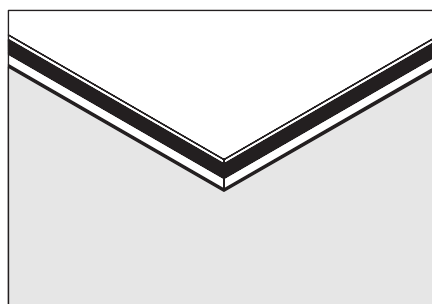


7 Place the carpet to the profile.

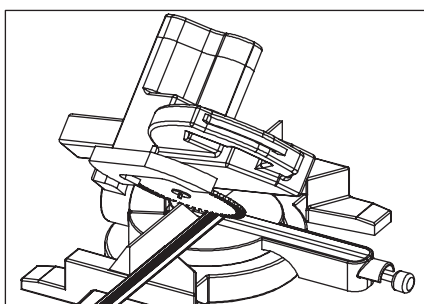

8 Cut profiles 45 degrees for internal corners.

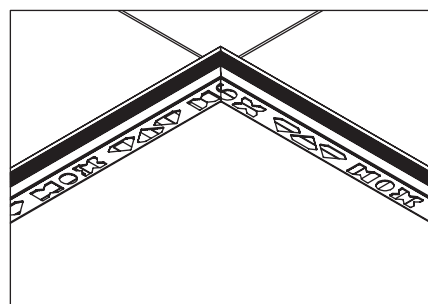

9 Align the profiles at the internal corners and place them into the joint.

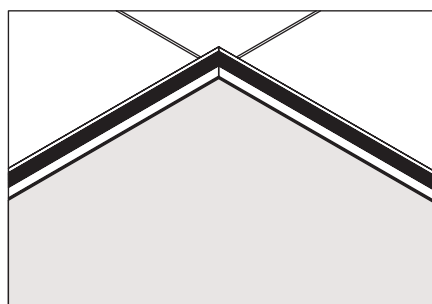

10 Place the carpet to the profile.