

MOX Systems - tekninen dokumentaatio

assembly-manual-crispo-en.pdf

Tekninen käännös: katso mitat alkuperäisistä piirustuksista ja viitesivuista.


Lähdesivu 1

Crispo ASENNUSOPAS


- 1 Aseta seinäkiinnitystyökalut 50 cm:n välein ja merkitse seinä ruuvirei'istä.
- 2 Poraa jo merkitsemäsi pisteet.
- 3 Aseta oikeat tapit seinämateriaalin mukaan porattuihin reikiin.
- 4 Ruuvaa seinäkiinnitystyökalut 50 cm:n välein porattuihin paikkoihin.
- 5 Asenna profiili seinäkiinnitystyökaluihin kuvan mukaisesti.
- 6 Varmista, että profiilinaulat ja kiinnitystyökalun naulat ovat täysin yhteydessä toisiinsa ja varmista, että profiilipohja on kiinnitetty lattiaan.
- 7 Leikkaa profiilit 45 astetta ulkokulmia varten.
- 8 Kiinnitä seinäkiinnitystyökalut kulmiin sulkeutuvalla tavalla ja kokoa 45 astetta leikkaamasi profiilit siihen.
- 9 Varmista, että 45 astetta leikatut profiilit ovat täysin kiinnittyneet toisiinsa ulkokulmista.
- 10 Leikkaa profiilit 45 astetta sisäkulmia varten.
- 11 Kiinnitä seinäkiinnitystyökalut kulmiin sulkeutuvalla tavalla ja kokoa 45 astetta leikkaamasi profiilit siihen.
- 12 Varmista, että 45 astetta leikatut profiilit ovat kiinnittyneet täysin toisiinsa sisäkulmista.

Sivu 1/1


Alkuperäiset piirustukset ja viitesivut

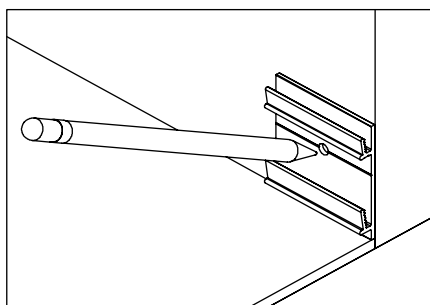


1 Place the wall fixation tools at 50cm intervals and mark the wall from the screw holes.

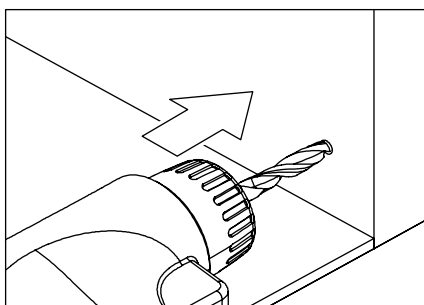


2 Drill the points that you have already marked.

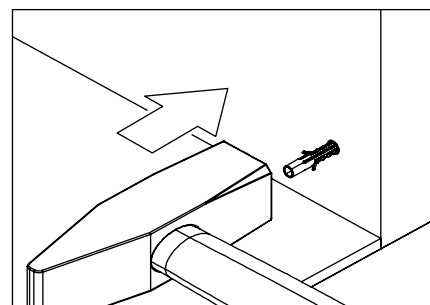


3 Place the correct dowels according to the wall material into the drilled holes.

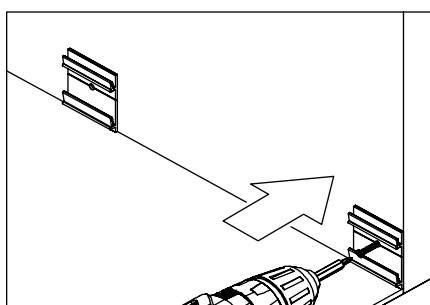


4 Screw the wall fixation tools to the places that are drilled at 50cm intervals.

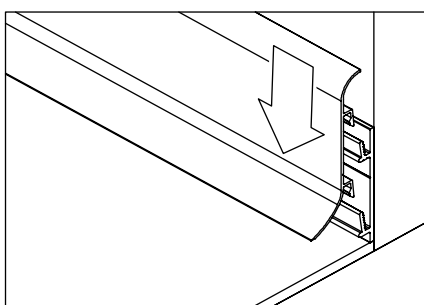


5 Assemble the profile on the wall fixation tools just like in the picture.

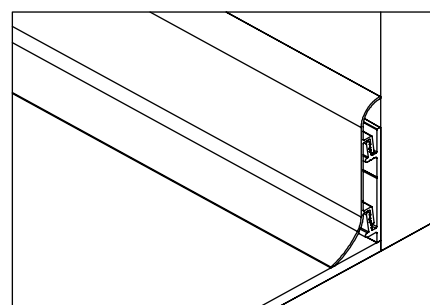


6 Make sure that the profile nails and the fixation tool's nails are completely connected to each other and be sure that the profile sole is fixed to the floor.

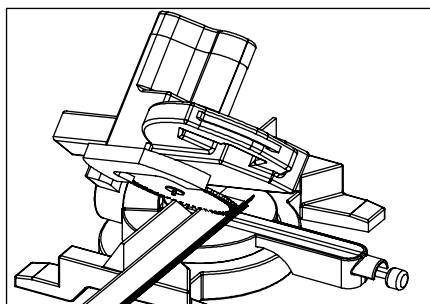


7 Cut profiles 45 degrees for external corners.

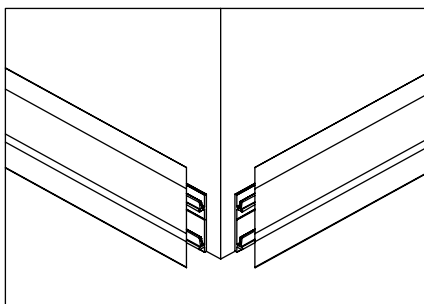


8 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

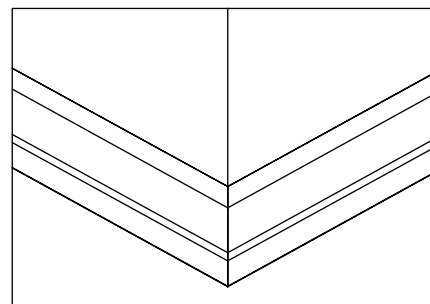


9 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

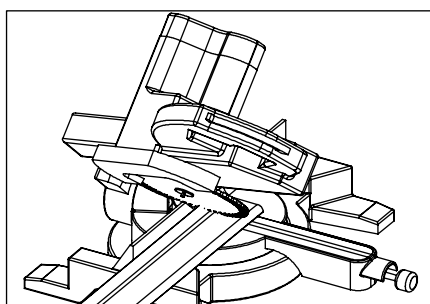

10 Cut profiles 45 degrees for internal corners.

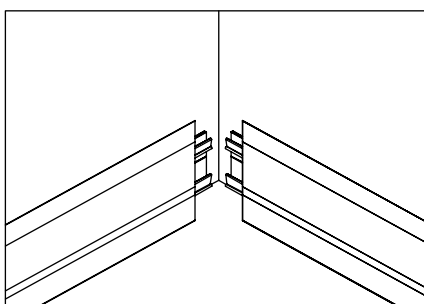

11 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

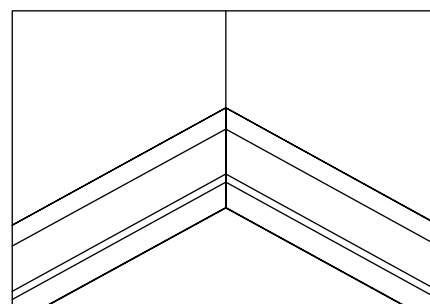

12 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.