

MOX Systems - tekninen dokumentaatio

assembly-manual-mps-e-en.pdf

Tekninen käännös: katso mitat alkuperäisistä piirustuksista ja viitesivuista.


Lähdesivu 1

Mps-E ASENNUSOPAS


- 1 Valitse oikea profiili lattian paksuuden mukaan.
- 2 Kiinnitä liitos ja kiinnitä profiilit vastaavasti.
- 3 Paina profiilia, kunnes se kiinnittyy liitokseen.
- 4 Levitä sauma paikkoihin, joihin lattia asennetaan.
- 5 Aseta ja kohdista lattia profiiliin.
- 6 Leikkaa profiilit 45 astetta ulkokulmia varten.
Kohdista profiilit ulkokulmista ja paina ne liitokseen.
- 8 Aseta ja kohdista lattia profiiliin.
- 9 Leikkaa profiilit 45 astetta sisäkulmia varten.
- 10 Kohdista profiilit sisäkulmissa ja paina ne liitokseen.
- 11 Aseta ja kohdista lattia profiiliin.

Sivu 1/1


Alkuperäiset piirustukset ja viitesivut

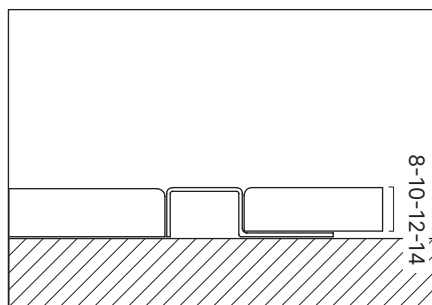


- 1** Pick the correct profile according to the flooring thickness.

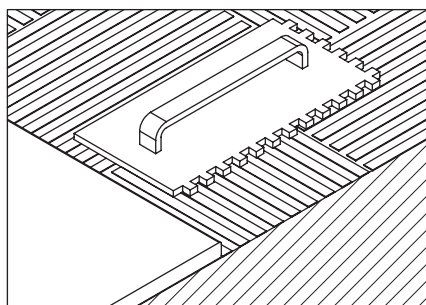


- 2** Apply joint and place the profiles anchor accordingly.

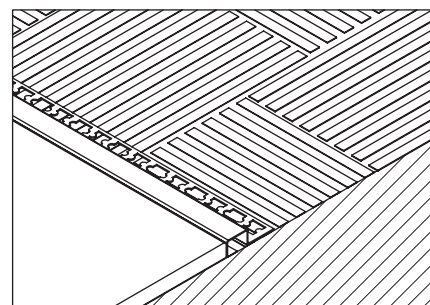


- 3** Press the profile until it is fixed to the joint.

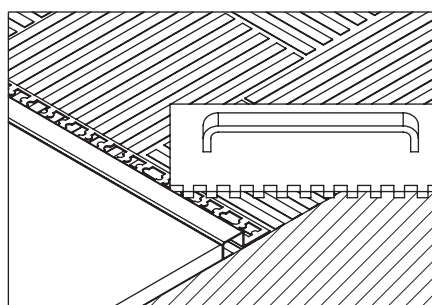


- 4** Apply joint to the places where the flooring will be placed.

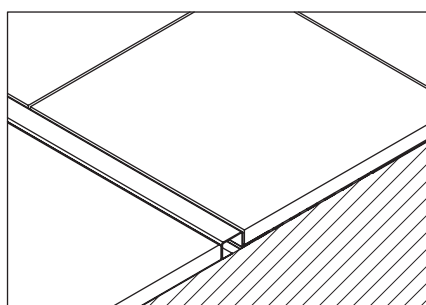


- 5** Place and align the flooring to the profile.

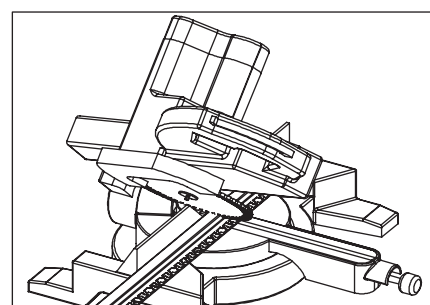


- 6** Cut profiles 45 degrees for external corners.

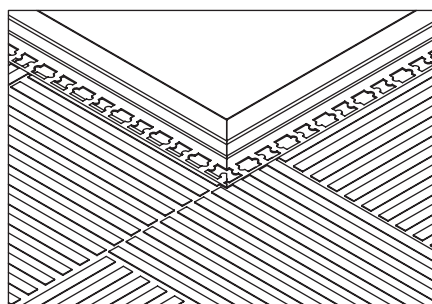


- 7** Align the profiles at the external corners and press them into the joint.

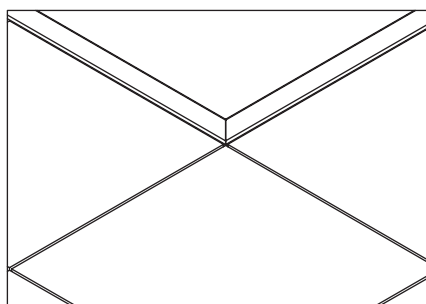


- 8** Place and align the flooring to the profile.

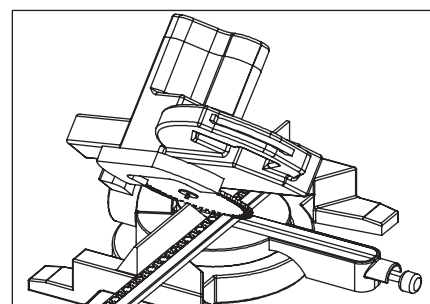

- 9** Cut profiles 45 degrees for internal corners.

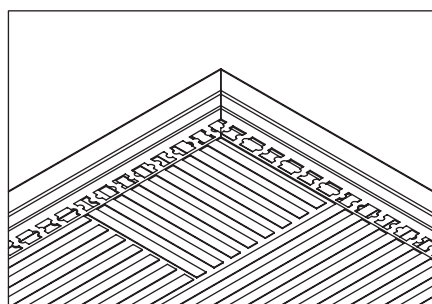

- 10** Align the profiles at the internal corners and press them into the joint.

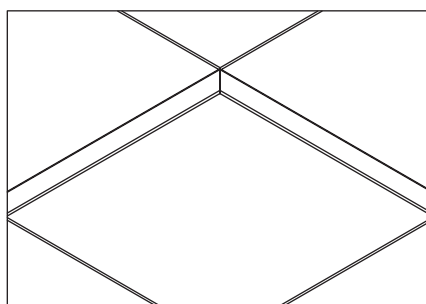

- 11** Place and align the flooring to the profile.