

MOX Systems - tekninen dokumentaatio

assembly-manual-mps-n-en.pdf

Tekninen käännös: katso mitat alkuperäisistä piirustuksista ja viitesivuista.

Lähdesivu 1

Mps-N ASENNUSOPAS

Valitse oikea profiili lattian paksuuden mukaan.

2 Kiinnitä liitos ja kiinnitä profiilit vastaavasti.

3 Paina profiilia, kunnes se kiinnittyy liitokseen.

4 Levitä sauma paikkoihin, joihin lattia asennetaan.

5 Aseta ja kohdista lattia profiiliin.

6 Leikkaa profiilit 45 astetta ulkokulmia varten.

Kohdista profiilit ulkokulmista ja paina ne liitokseen.

8 Aseta ja kohdista lattia profiiliin.


9 Leikkaa profiilit 45 astetta sisäkulmia varten.

10 Kohdista profiilit sisäkulmissa ja paina ne liitokseen.


11 Aseta ja kohdista lattia profiiliin.

Sivu 1/1


Alkuperäiset piirustukset ja viitesivut

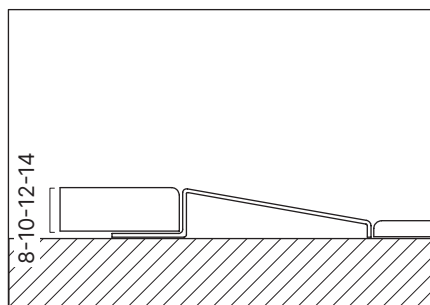


1 Pick the correct profile according to the flooring thickness.

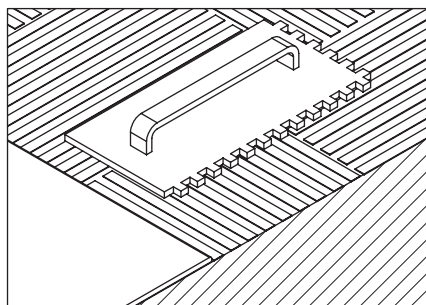


2 Apply joint and place the profiles anchor accordingly.

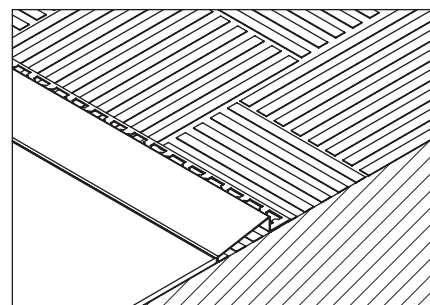


3 Press the profile until it is fixed to the joint.

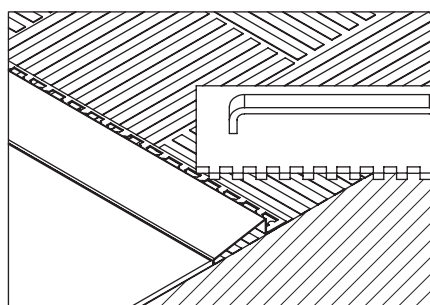


4 Apply joint to the places where the flooring will be placed.

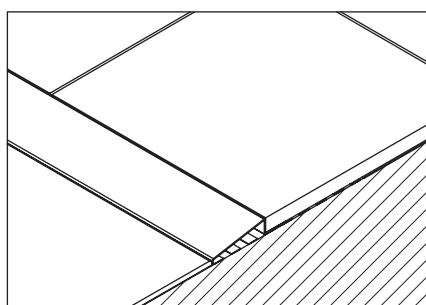


5 Place and align the flooring to the profile.

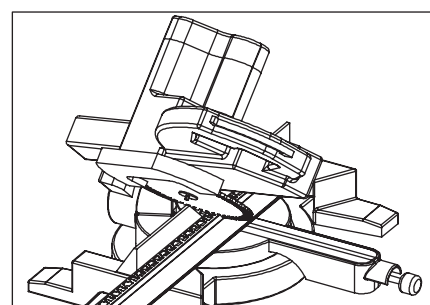


6 Cut profiles 45 degrees for external corners.

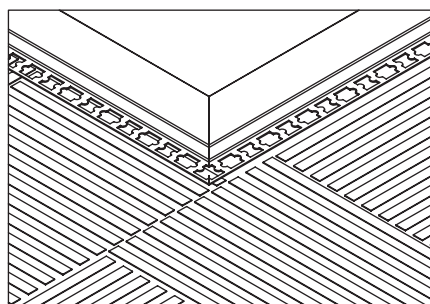


7 Align the profiles at the external corners and press them into the joint.

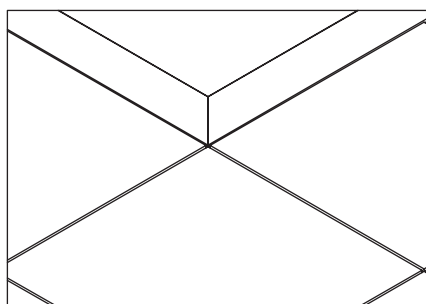


8 Place and align the flooring to the profile.

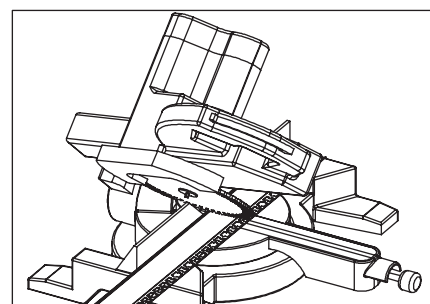

9 Cut profiles 45 degrees for internal corners.

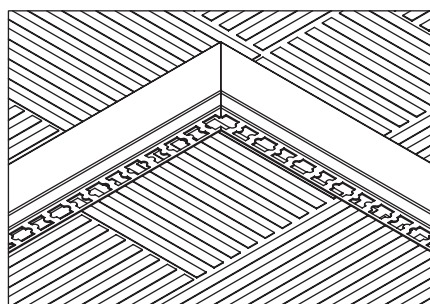

10 Align the profiles at the internal corners and press them into the joint.

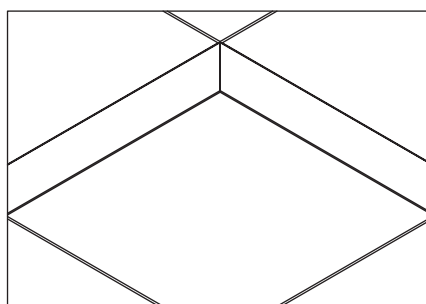

11 Place and align the flooring to the profile.