

MOX Systems - tekninen dokumentaatio

assembly-manual-mps-s-en.pdf

Tekninen käännös: katso mitat alkuperäisistä piirustuksista ja viitesivuista.

Lähdesivu 1

Mps-S ASENNUSOPAS

Valitse oikea profiili laatan paksuuden mukaan.

2 Kiinnitä liitos ja kiinnitä profiilit vastaavasti.

3 Paina profiilia, kunnes se kiinnittyy liitokseen.

Levitä sauma paikkoihin, joihin keramiikka asetetaan.

5 Aseta ja kohdista keramiikka profiiliin.

6 Leikkaa profiilit 45 astetta ulkokulmia varten.

Kohdista profiilit ulkokulmista ja paina ne liitokseen.

8 Aseta ja kohdista keramiikka profiiliin.


9 Leikkaa profiilit 45 astetta sisäkulmia varten.

10 Kohdista profiilit sisäkulmissa ja paina ne liitokseen.


11 Aseta ja kohdista keramiikka profiiliin.

Sivu 1/1


Alkuperäiset piirustukset ja viitesivut

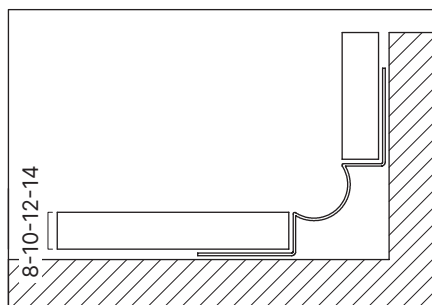


- 1** Pick the correct profile according to the tile thickness.

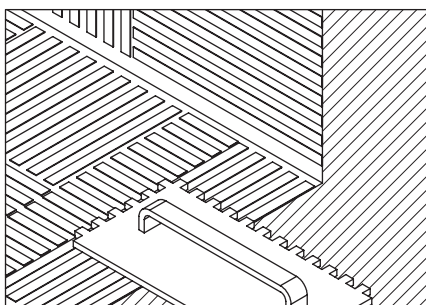


- 2** Apply joint and place the profiles anchor accordingly.

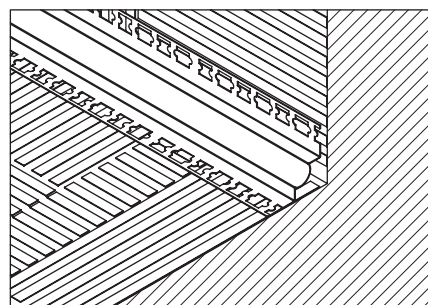


- 3** Press the profile until it is fixed to the joint.

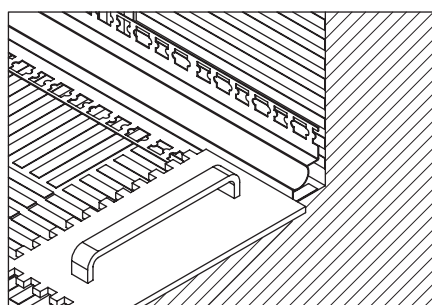


- 4** Apply joint to the places where the ceramics will be placed.

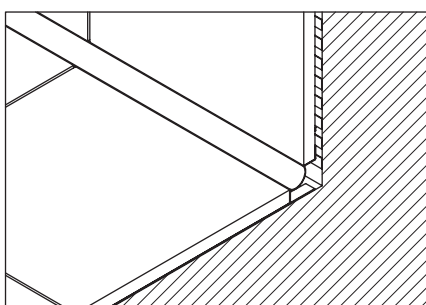


- 5** Place and align the ceramics to the profile.

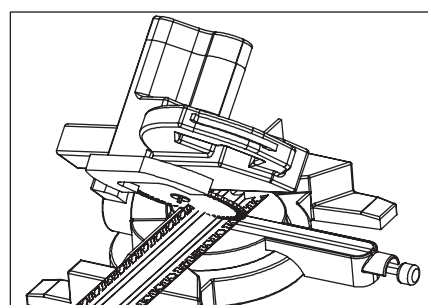


- 6** Cut profiles 45 degrees for external corners.

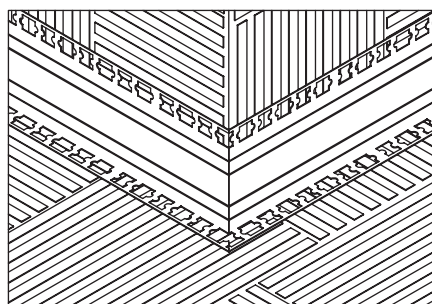


- 7** Align the profiles at the external corners and press them into the joint.

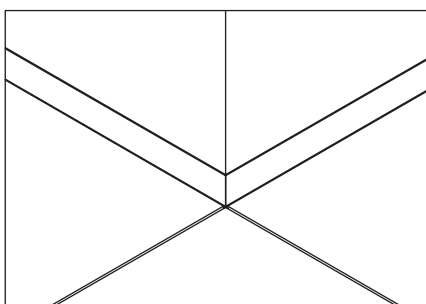


- 8** Place and align the ceramics to the profile.

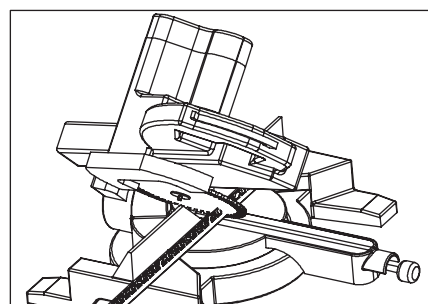

- 9** Cut profiles 45 degrees for internal corners.

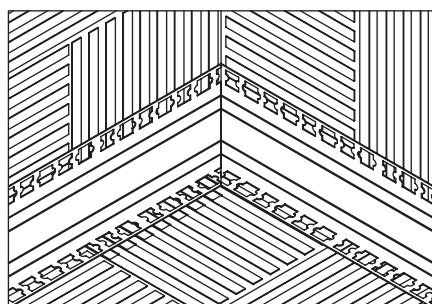

- 10** Align the profiles at the internal corners and press them into the joint.

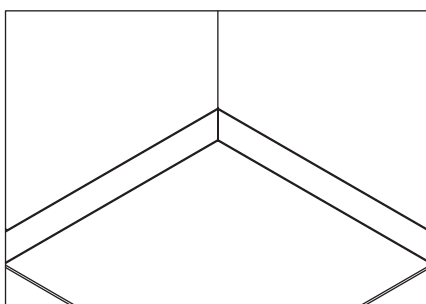

- 11** Place and align the ceramics to the profile.