

MOX Systems - tekninen dokumentaatio

assembly-manual-revio-en.pdf

Tekninen käännös: katso mitat alkuperäisistä piirustuksista ja viitesivuista.

Lähdesivu 1

Revio ASENNU SOPAS

Levitys liimalla

1 Levitä profiiliin silikonista tai saumaa.

2 Kiinnitä profiili lattiaan ja paina sitä.

3 Aseta matto profiiliin.

Sovellus ruuvilla

11 Kiinnitä profiili ruuveilla.

2 Aseta matto profiiliin.

Köşe Birleşimleri

1 Leikkaa profiilit 45 astetta sisäkulmia varten.

2 Kohdista profiilit sisäkulmissa ja aseta ne liitokseen.

3 Aseta matto profiiliin.


4 Leikkaa profiilit 45 astetta ulkokulmia varten.

5 Kohdista profiilit ulkokulmista ja aseta ne liitokseen.


6 Aseta matto profiiliin.

Alkuperäiset piirustukset ja viitesivut


Application with Adhesive

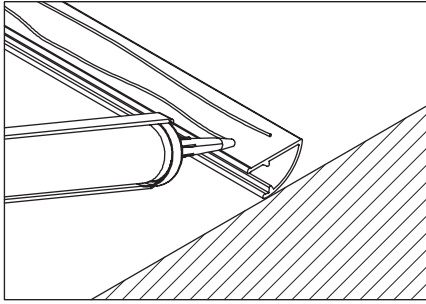

1 Apply silicone or joint to the profile.

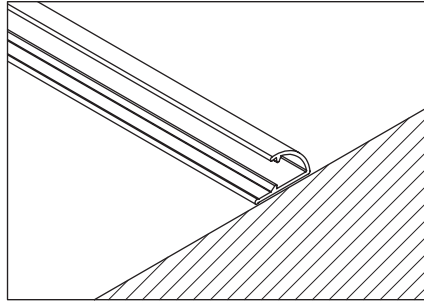


2 Fix the profile to the floor and press it.

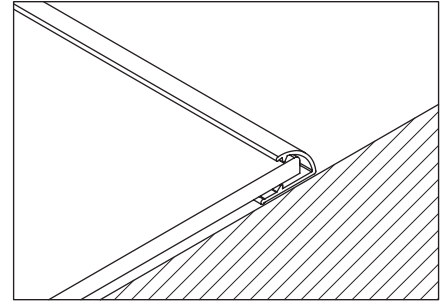


3 Place the carpet to the profile.

Application with Screw

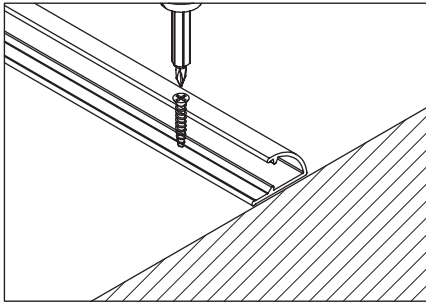


1 Fix the profile with screws.

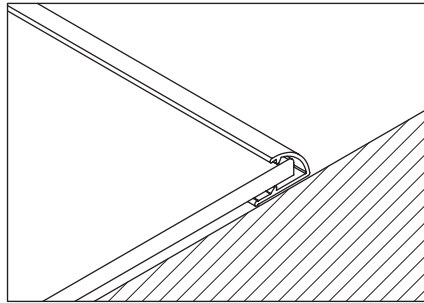


2 Place the carpet to the profile.


Köşe Birleşimleri

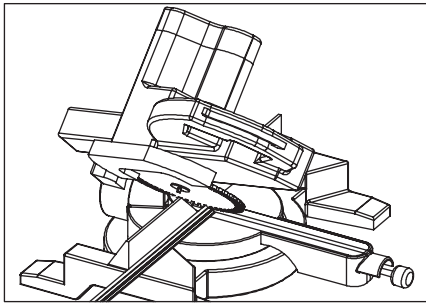


1 Cut profiles 45 degrees for internal corners.

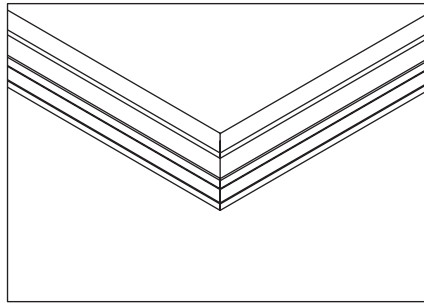


2 Align the profiles at the internal corners and place them into the joint.

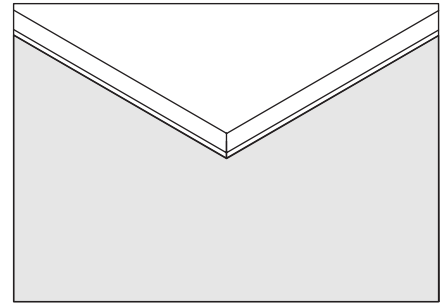


3 Place the carpet to the profile.

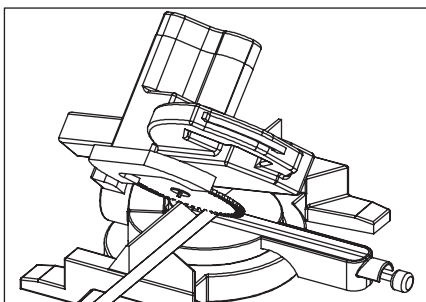

4 Cut profiles 45 degrees for external corners.

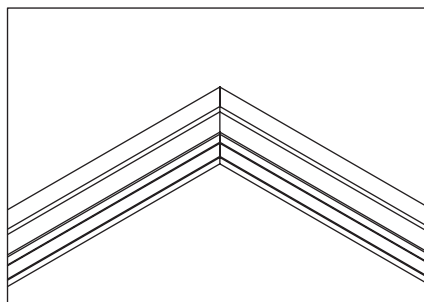

5 Align the profiles at the external corners and place them into the joint.

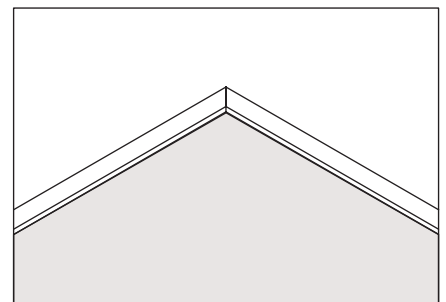

6 Place the carpet to the profile.