

MOX Systems - tekninen dokumentaatio

assembly-manual-round-fix-en.pdf

Tekninen käännös: katso mitat alkuperäisistä piirustuksista ja viitesivuista.


Lähdesivu 1

Round-Fix ASENNUSOPAS

- 1 Valitse oikea profiili laatan paksuuden mukaan.
- 2 Kiinnitä liitos ja kiinnitä profiilit vastaavasti.
- 3 Paina profiilia, kunnes se kiinnittyy liitokseen.
- 4 Levitä sauma paikkoihin, joihin keramiikka asetetaan.
- 5 Aseta laatat profiiliin varmistaen, että niiden reunat sopivat profiiliin ja ovat samalla tasolla.
- 6 Leikkaa kaksi profiilia 45 asteen kulmassa kulmaliitoksia varten.
- 7 Kohdista profiilit sisäkulmissa ja paina ne liitokseen. 10
- 8 Aseta laatat profiiliin varmistaen, että niiden reunat sopivat profiiliin ja ovat samalla tasolla.

Sivu 1/1


Alkuperäiset piirustukset ja viitesivut

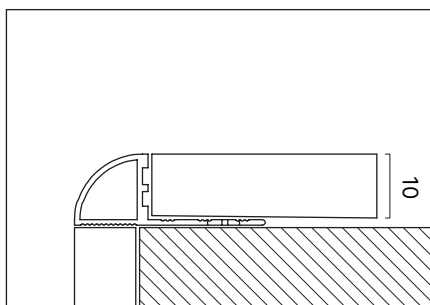


1 Pick the correct profile according to the tile thickness.




2 Apply joint and place the profiles anchor accordingly.

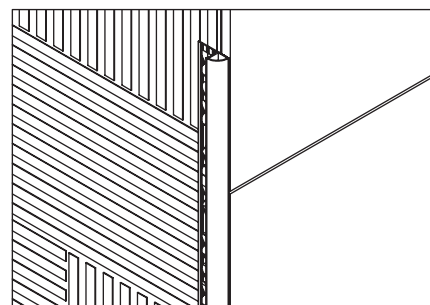


3 Press the profile until it is fixed to the joint.

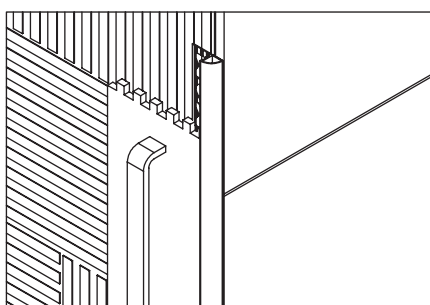


4 Apply joint to the places where the ceramics will be placed.

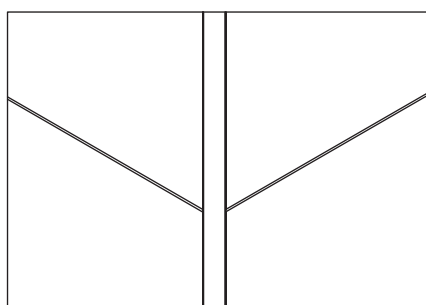


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

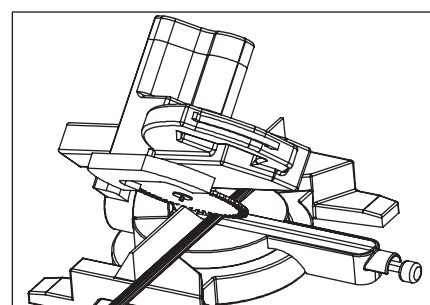

6 Cut two profiles at 45 degrees for corner joints.

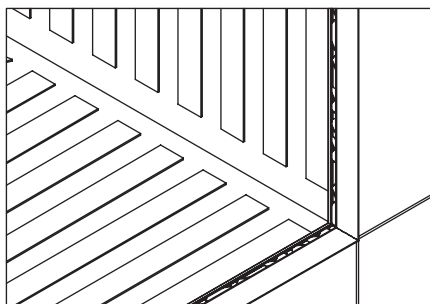

7 Align the profiles at the internal corners and press them into the joint.

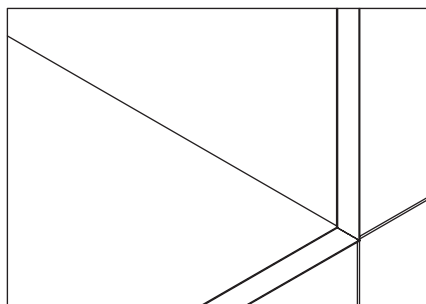

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.