

MOX Systems - tekninen dokumentaatio

assembly-manual-visio-en.pdf

Tekninen käännös: katso mitat alkuperäisistä piirustuksista ja viitesivuista.


Lähdesivu 1

Visio ASENNUSOPAS


- 1 Valitse oikea profiili lattian paksuuden mukaan.
- 2 Kiinnitä liitos ja kiinnitä profiilit vastaavasti.
- 3 Paina profiilia, kunnes se kiinnittyy liitokseen.
- 4 Aseta matto profiiliin.
- 5 Leikkaa profiilit 45 astetta ulkokulmia varten.
- 6 Kohdista profiilit ulkokulmista ja aseta ne liitokseen.
- 7 Aseta matto profiiliin.
- 8 Leikkaa profiilit 45 astetta sisäkulmia varten.
- 9 Kohdista profiilit sisäkulmissa ja aseta ne liitokseen.
- 10 Aseta matto profiiliin. 6 8

Sivu 1/1


Alkuperäiset piirustukset ja viitesivut

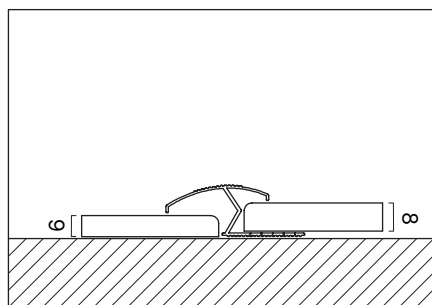


1 Pick the correct profile according to the flooring thickness.

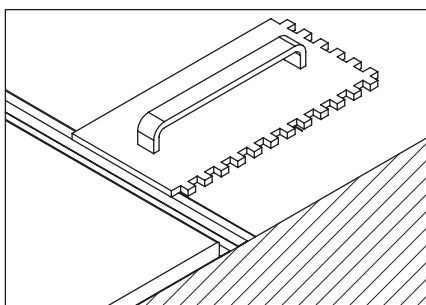


2 Apply joint and place the profiles anchor accordingly.

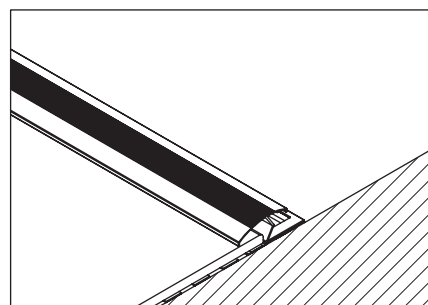


3 Press the profile until it is fixed to the joint.

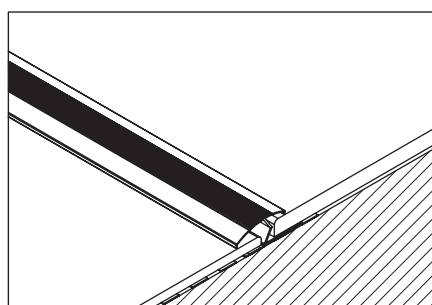


4 Place the carpet to the profile.

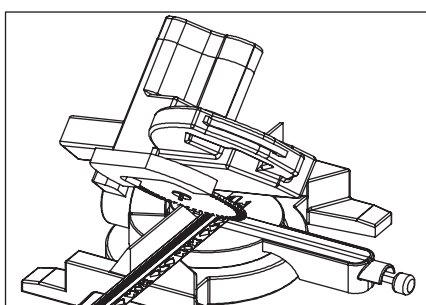


5 Cut profiles 45 degrees for external corners.

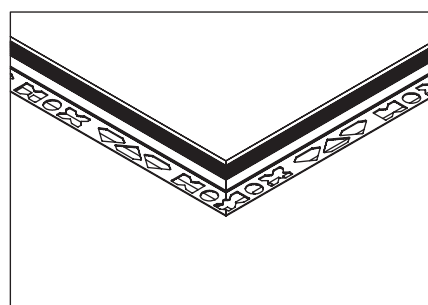


6 Align the profiles at the external corners and place them into the joint.

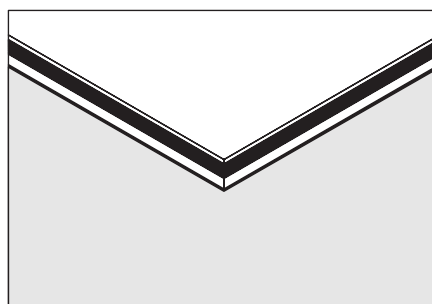


7 Place the carpet to the profile.

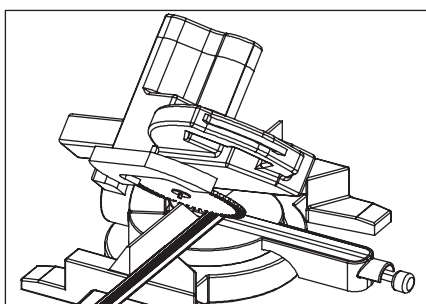

8 Cut profiles 45 degrees for internal corners.

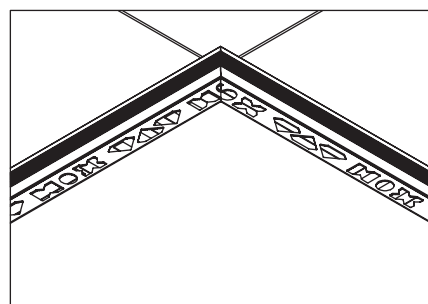

9 Align the profiles at the internal corners and place them into the joint.

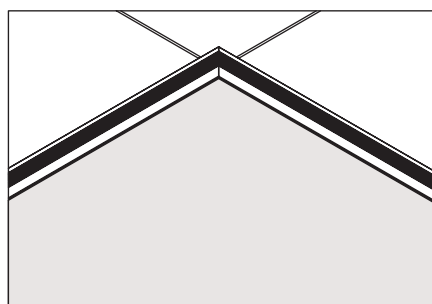

10 Place the carpet to the profile.