

Systèmes MOX - documentation technique

assembly-manual-mps-yd-en.pdf

Traduction technique : consultez les dessins originaux et les pages de référence pour les dimensions.

Page source 1

GUIDE D'ASSEMBLAGE Mps-Yd

Choisissez le profil approprié en fonction de l'épaisseur du revêtement de sol.

2 Appliquer le joint et placer l'ancrage des profilés en conséquence.

3 Appuyez sur le profilé jusqu'à ce qu'il soit fixé au joint.

4 Appliquer le joint aux endroits où le revêtement de sol sera posé.

5 Placer et aligner le revêtement de sol sur le profilé.


6 Coupez les profils à 45 degrés pour les coins.

7 Alignez les profilés aux coins et enfoncez-les dans le joint. 41-21-01-8


8 Placer et aligner le revêtement de sol sur le profilé.

Page 1/1


Dessins originaux et pages de référence

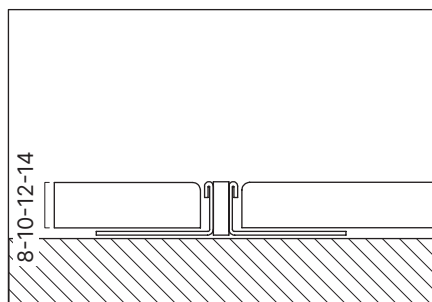


- 1** Pick the correct profile according to the flooring thickness.

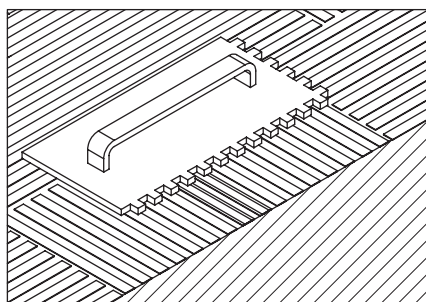


- 2** Apply joint and place the profiles anchor accordingly.

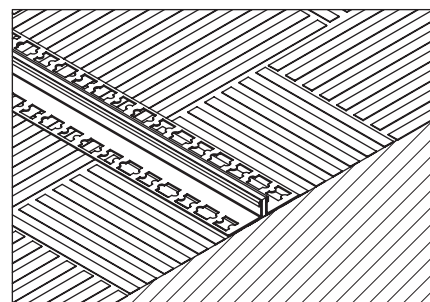


- 3** Press the profile until it is fixed to the joint.

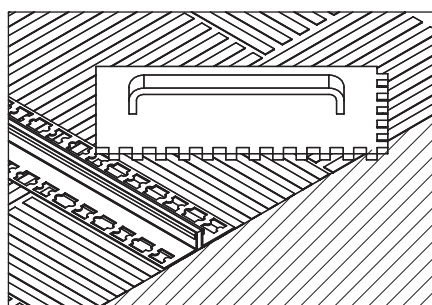


- 4** Apply joint to the places where the flooring will be placed.

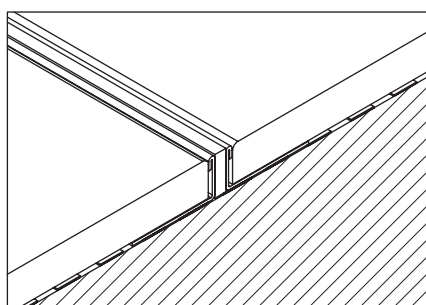


- 5** Place and align the flooring to the profile.

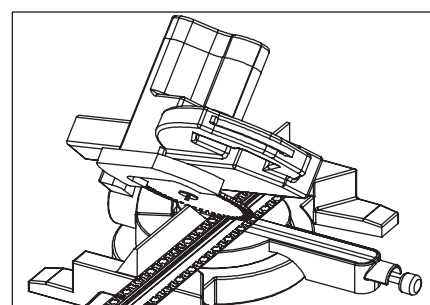

- 6** Cut profiles 45 degrees for corners.

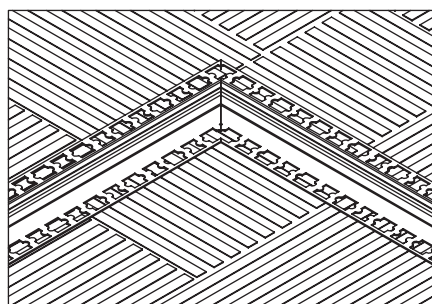

- 7** Align the profiles at the corners and press them into the joint.

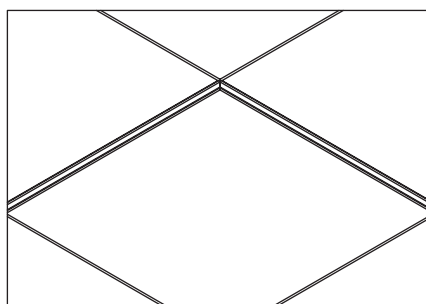

- 8** Place and align the flooring to the profile.