

Systèmes MOX - documentation technique

assembly-manual-revio-en.pdf

Traduction technique : consultez les dessins originaux et les pages de référence pour les dimensions.

Page source 1

GUIDE D'ASSEMBLAGE Revio

Application avec adhésif

- 1 Appliquer du silicone ou du joint sur le profilé.
- 2 Fixez le profilé au sol et appuyez dessus.
- 3 Placez le tapis sur le profil.

Application avec vis


- 11 Fixez le profilé avec des vis.
- 2 Placez le tapis sur le profil.

Köşe Birleşimleri


- 1 Coupez les profils à 45 degrés pour les coins intérieurs.
- 2 Alignez les profilés au niveau des coins internes et placez-les dans le joint.
- 3 Placez le tapis sur le profil.
- 4 Couper les profils à 45 degrés pour les coins extérieurs.
- 5 Alignez les profilés aux coins extérieurs et placez-les dans le joint.
- 6 Placez le tapis sur le profil.

Dessins originaux et pages de référence


Application with Adhesive

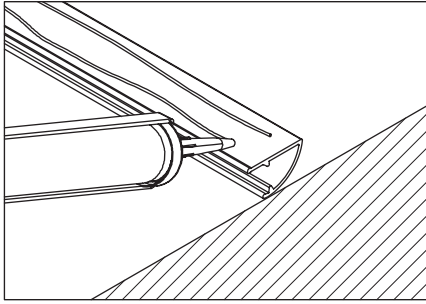

1 Apply silicone or joint to the profile.

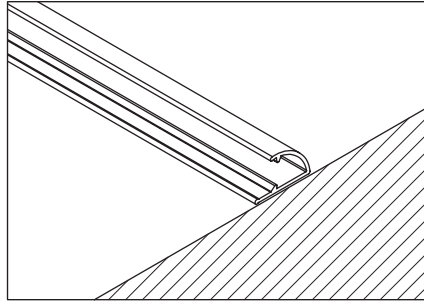


2 Fix the profile to the floor and press it.

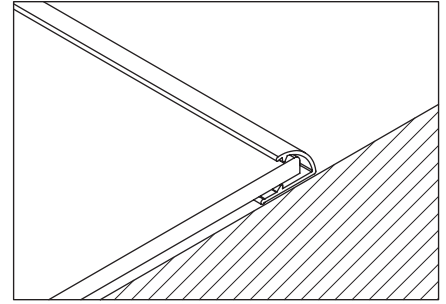


3 Place the carpet to the profile.

Application with Screw

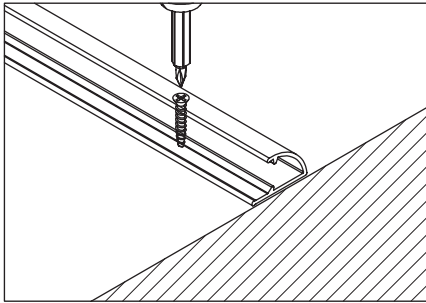


1 Fix the profile with screws.

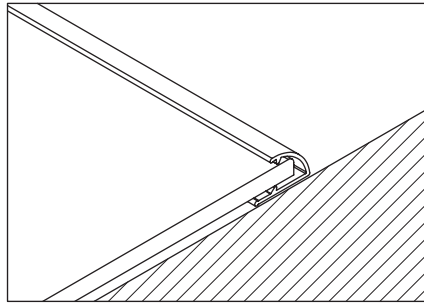


2 Place the carpet to the profile.


Köşe Birleşimleri

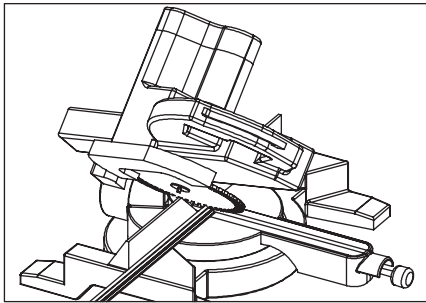


1 Cut profiles 45 degrees for internal corners.

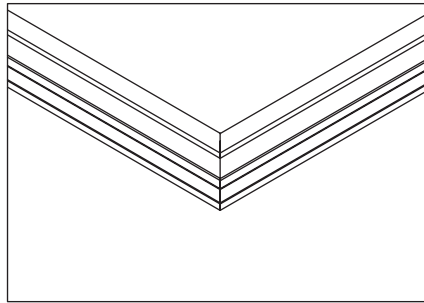


2 Align the profiles at the internal corners and place them into the joint.

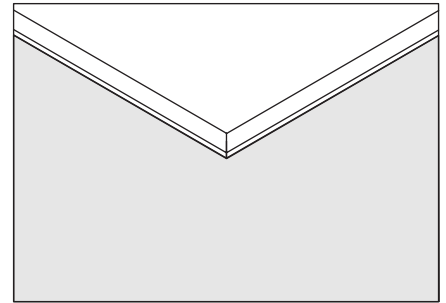


3 Place the carpet to the profile.

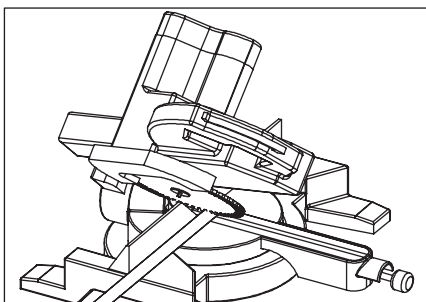

4 Cut profiles 45 degrees for external corners.

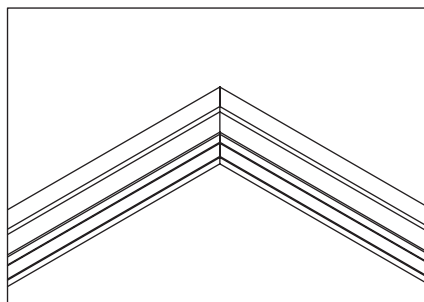

5 Align the profiles at the external corners and place them into the joint.

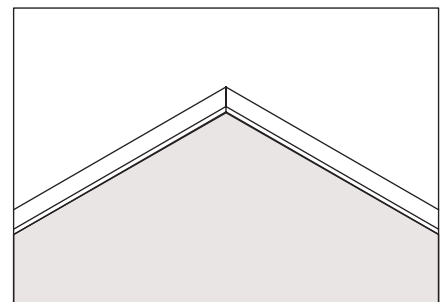

6 Place the carpet to the profile.