

Systèmes MOX - documentation technique

assembly-manual-round-fix-en.pdf

Traduction technique : consultez les dessins originaux et les pages de référence pour les dimensions.


Page source 1

GUIDE D'ASSEMBLAGE Round-Fix

- 1 Choisissez le profil approprié en fonction de l'épaisseur du carrelage.
- 2 Appliquer le joint et placer l'ancrage des profilés en conséquence.
- 3 Appuyez sur le profilé jusqu'à ce qu'il soit fixé au joint.
- 4 Appliquer le joint aux endroits où la céramique sera placée.
- 5 Placez les carreaux sur le profilé en vous assurant que leurs bords s'adaptent au profilé et affleurent.
- 6 Coupez deux profilés à 45 degrés pour les joints d'angle.
- 7 Alignez les profilés au niveau des coins internes et enfoncez-les dans le joint. 10
- 8 Placez les carreaux sur le profilé en vous assurant que leurs bords s'adaptent au profilé et affleurent.

Page 1/1


Dessins originaux et pages de référence

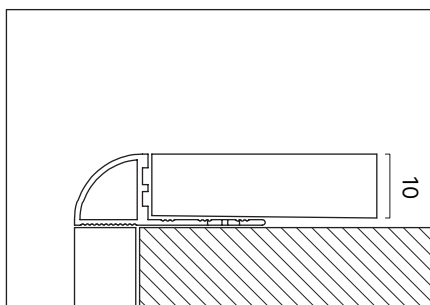


1 Pick the correct profile according to the tile thickness.




2 Apply joint and place the profiles anchor accordingly.

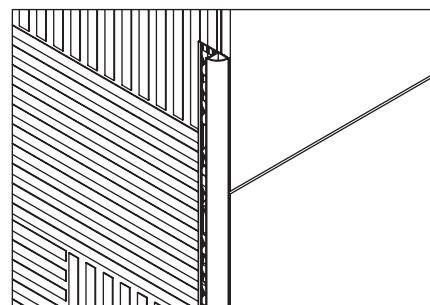


3 Press the profile until it is fixed to the joint.

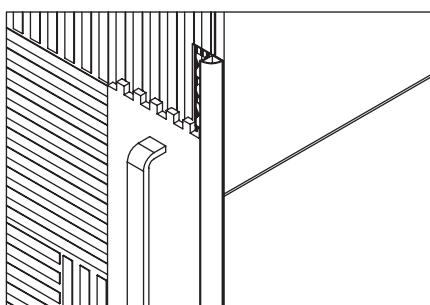


4 Apply joint to the places where the ceramics will be placed.

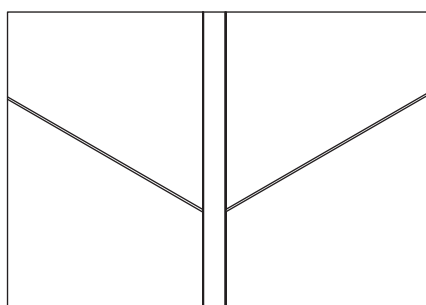


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

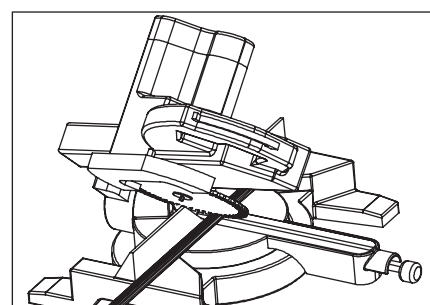

6 Cut two profiles at 45 degrees for corner joints.

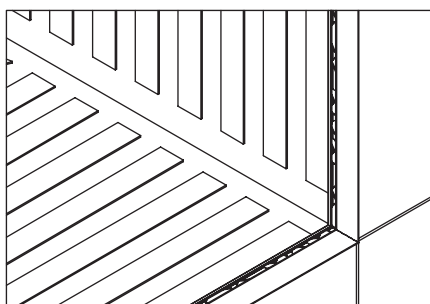

7 Align the profiles at the internal corners and press them into the joint.

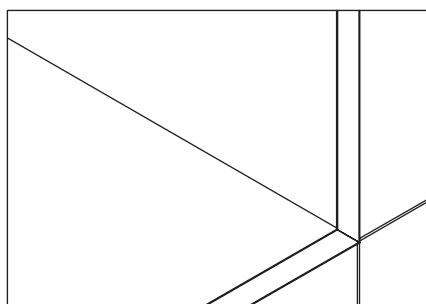

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.