

Systèmes MOX - documentation technique

assembly-manual-visio-en.pdf

Traduction technique : consultez les dessins originaux et les pages de référence pour les dimensions.


Page source 1

GUIDE DE MONTAGE Visio


- 1 Choisissez le profil approprié en fonction de l'épaisseur du revêtement de sol.
- 2 Appliquer le joint et placer l'ancrage des profilés en conséquence.
- 3 Appuyez sur le profilé jusqu'à ce qu'il soit fixé au joint.
- 4 Placez le tapis sur le profil.
- 5 Couper les profils à 45 degrés pour les coins extérieurs.
- 6 Alignez les profilés aux coins extérieurs et placez-les dans le joint.
- 7 Placez le tapis sur le profil.
- 8 Couper les profils à 45 degrés pour les coins internes.
- 9 Alignez les profilés aux coins internes et placez-les dans le joint.
- 10 Placez le tapis sur le profil. 6 8

Page 1/1


Dessins originaux et pages de référence

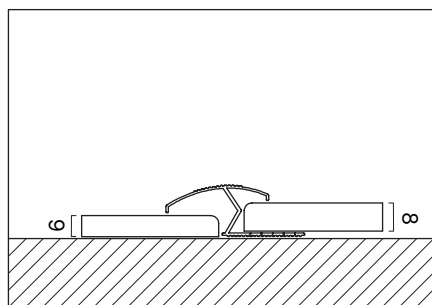


1 Pick the correct profile according to the flooring thickness.

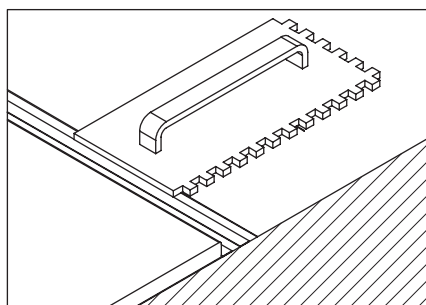


2 Apply joint and place the profiles anchor accordingly.

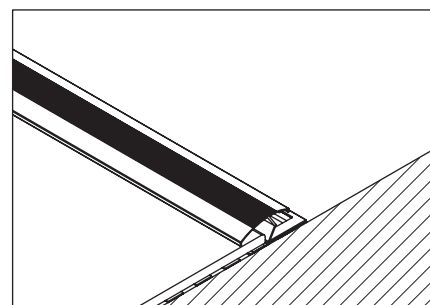


3 Press the profile until it is fixed to the joint.

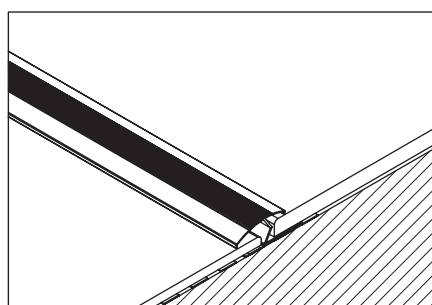


4 Place the carpet to the profile.

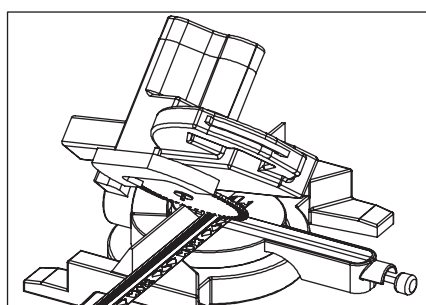


5 Cut profiles 45 degrees for external corners.

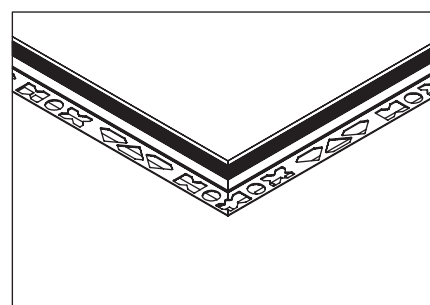


6 Align the profiles at the external corners and place them into the joint.

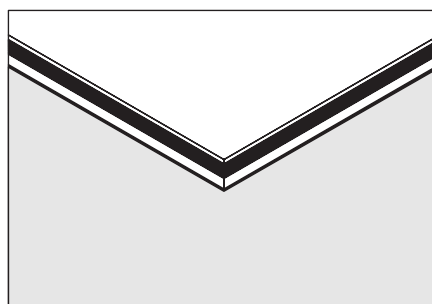


7 Place the carpet to the profile.

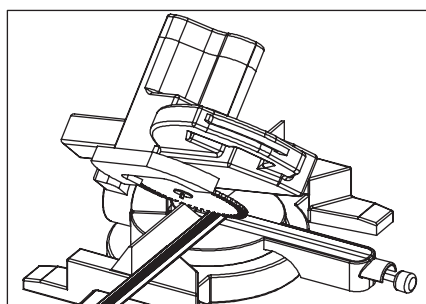

8 Cut profiles 45 degrees for internal corners.

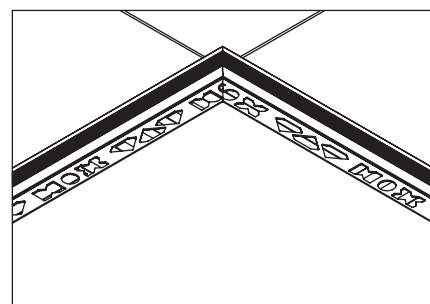

9 Align the profiles at the internal corners and place them into the joint.

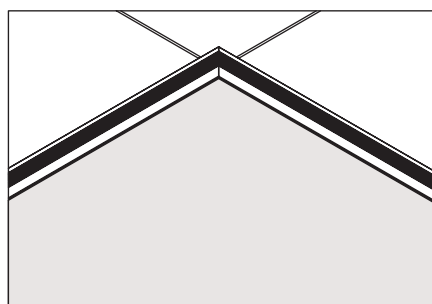

10 Place the carpet to the profile.