

MOX Systems - doiciméadú teicniúil

assembly-manual-gravity-en.pdf

Aistriúchán teicniúil: féach ar na bunlíníochtaí agus ar na leathanaigh thagartha le haghaidh toisí.


Leathanach foinse 1

TREOIR UM thionól MOX Domhantarraingt


- 1 Píoc an próifíl ceart de réir tiús na tíl.
- 2 Cuir comhpháirteach i bhfeidhm agus cuir na próifílí ar ancaire dá réir sin.
- 3 Brúigh an próifíl go dtí go bhfuil sé socraithe don chomhpháirteach.
- 4 Cuir comhpháirteach i bhfeidhm ar na háiteanna ina gcuirfear an criadóireacht.
- 5 Cuir na tíleanna ar an bpróifíl, ag cinntiú go bhfuil a n-imill oiriúnach don phróifíl agus go bhfuil siad flush.
- 6 Gearr próifílí 45 céim le haghaidh coirnéil seachtracha.
- 7 Ailínigh na próifílí ag na coirnéil seachtracha agus brúigh isteach sa chomhpháirteach iad.
- 8 Cuir na tíleanna ar an bpróifíl, ag cinntiú go bhfuil a n-imill oiriúnach don phróifíl agus go bhfuil siad flush.
- 9 Gearr próifílí 45 céim le haghaidh coirnéil seachtracha.
- 10 Ailínigh na próifílí ag na coirnéil inmheánacha agus brúigh isteach sa chomhpháirteach iad.
- 11 Cuir na tíleanna ar an bpróifíl, ag cinntiú go n-oireann a n-imill don phróifíl agus go bhfuil siad flush.

Leathanach 1/1


Líníochtaí bunaidh agus leathanaigh tagartha

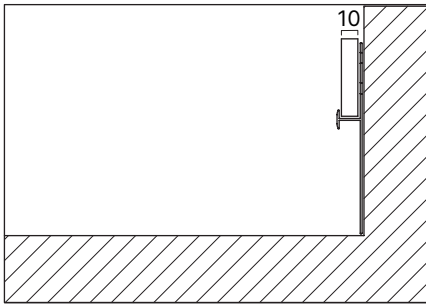


- 1** Pick the correct profile according to the tile thickness.

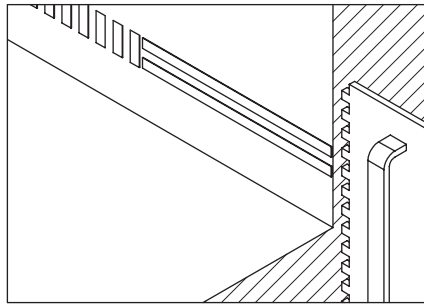


- 2** Apply joint and place the profiles anchor accordingly.

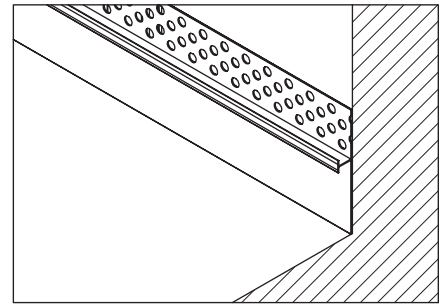


- 3** Press the profile until it is fixed to the joint.

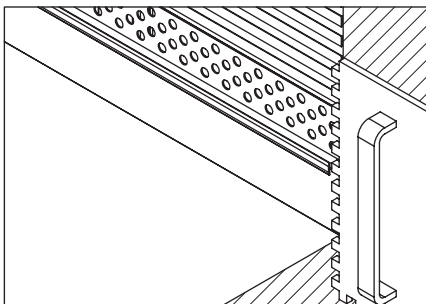


- 4** Apply joint to the places where the ceramics will be placed.

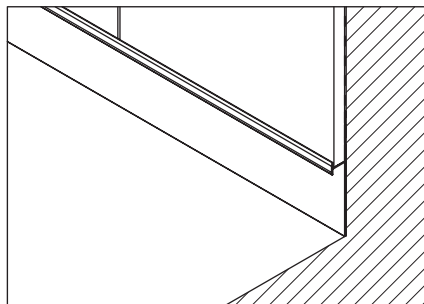


- 5** Place the tiles on the profile, making sure that their edges fit the profile and are flush.

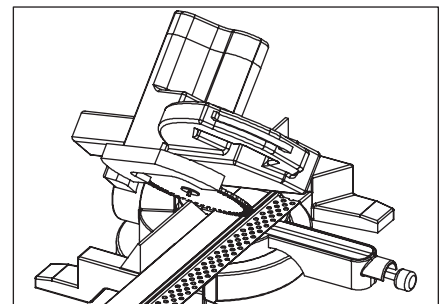


- 6** Cut profiles 45 degrees for external corners.

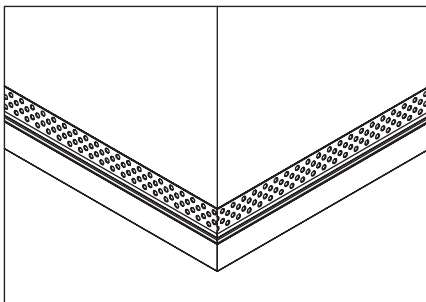


- 7** Align the profiles at the external corners and press them into the joint.

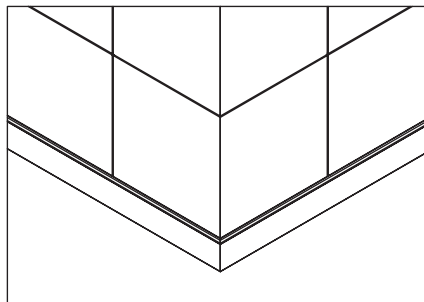


- 8** Place the tiles on the profile, making sure that their edges fit the profile and are flush.

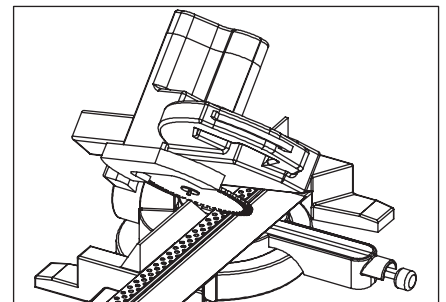

- 9** Cut profiles 45 degrees for external corners.

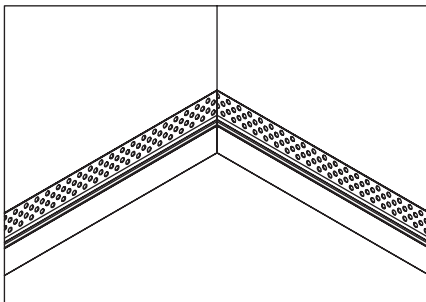

- 10** Align the profiles at the internal corners and press them into the joint.

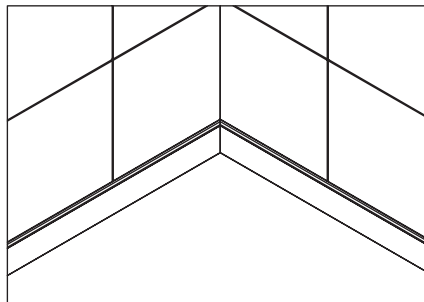

- 11** Place the tiles on the profile, making sure that their edges fit the profile and are flush.