

MOX Systems - doiciméadú teicniúil

assembly-manual-lato-en.pdf

Aistriúchán teicniúil: féach ar na bunlíníochtaí agus ar na leathanaigh thagartha le haghaidh toisí.


Leathanach foinse 1

TREOIR TIONÓLACH Lato


- 1 Cuir na páirteanna fosaithe balla ag eatraimh 50cm agus marcáil an balla ó na poill scriú.
- 2 Druileáil na pointí atá marcáilte agat cheana féin.
- 3 Cuir na duail cearta de réir an ábhair bhalla isteach sna poill druileáilte.
- 4 Scriú na codanna fosaithe balla go dtí na háiteanna atá druileáilte ag eatraimh 50cm.
- 5 Bailigh an phróifíl ar na codanna fosaithe balla díreach mar atá sa phictiúr.
- 6 Bí cinnte go bhfuil na tairní próifíle agus tairní an pháirt fosaithe ceangailte go hiomlán lena chéile agus bí cinnte go bhfuil an t-aon phróifíl greamaithe den urlár.
- 7 Na huirlisí fosaithe balla a ghreamú ar an mbealach a dhúnfar do na coirnéil agus cuir an cúinne le chéile uirlisí leis na próifílí chun rothlú na coirnéil seachtracha a chinntiú.
- 8 Bí cinnte go bhfuil próifílí agus uirlisí cúinne le chéile greamaithe dá chéile go hiomlán ag na coirnéil seachtracha.
- 9 Na huirlisí fosaithe balla a ghreamú ar an mbealach a dhúnfar do na coirnéil agus cuir an cúinne le chéile uirlisí leis na próifílí chun rothlú na coirnéil inmheánacha a chinntiú.
- 10 Bí cinnte go bhfuil próifílí agus uirlisí cúinne le chéile greamaithe dá chéile go hiomlán ag na coirnéil inmheánacha.
- 11 Cuir na huirlisí caipín le chéile leis na próifílí chun a chinntiú go gcríochnaíonn an balla i gceart.
- 12 Bí cinnte go bhfuil próifílí agus uirlisí caipíní greamaithe dá chéile go hiomlán ag foircinn an bhalla.

Leathanach 1/1


Líníochtaí bunaidh agus leathanaigh tagartha

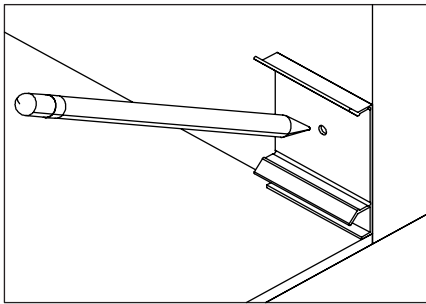


- 1** Place the wall fixation parts at 50cm intervals and mark the wall from the screw holes.

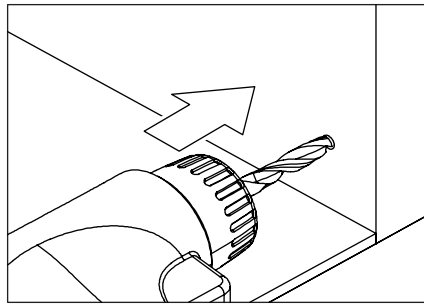


- 2** Drill the points that you have already marked.

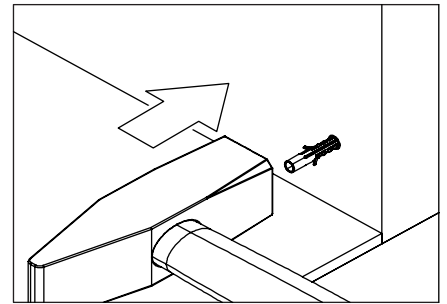


- 3** Place the correct dowels according to the wall material into the drilled holes.

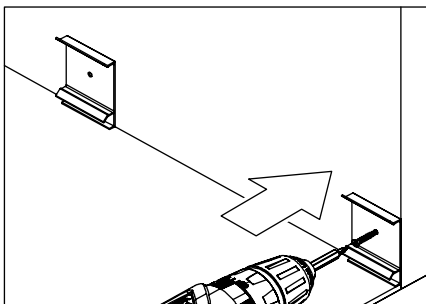


- 4** Screw the wall fixation parts to the places that are drilled at 50cm intervals.

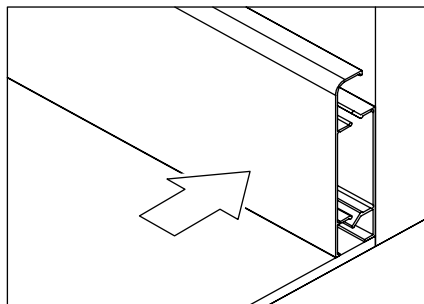


- 5** Assemble the profile on the wall fixation parts just like in the picture.

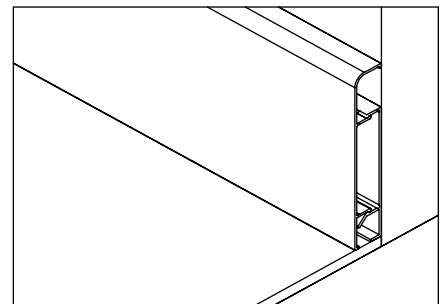


- 6** Make sure that the profile nails and the fixation part's nails are completely connected to each other and be sure that the profile sole is fixed to the floor.

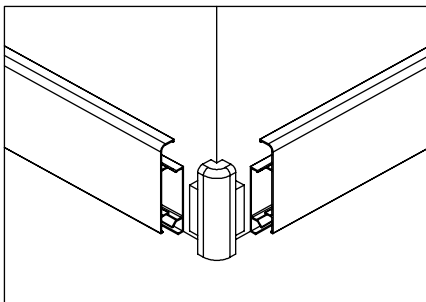


- 7** Affix the wall fixation tools in the manner that will be closed to the corners and assemble the corner combining tools with the profiles to ensure the rotating of external corners.

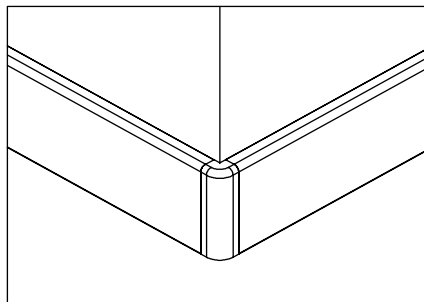


- 8** Make sure that profiles and corner combining tools are fixed to each other completely at the external corners.

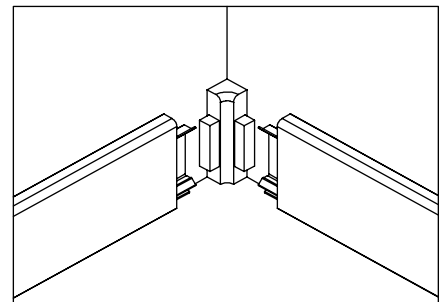


- 9** Affix the wall fixation tools in the manner that will be closed to the corners and assemble the corner combining tools with the profiles to ensure the rotating of internal corners.

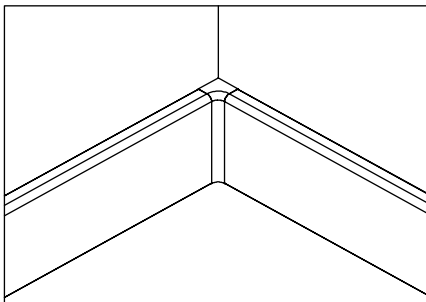

- 10** Make sure that profiles and corner combining tools are fixed to each other completely at the internal corners.

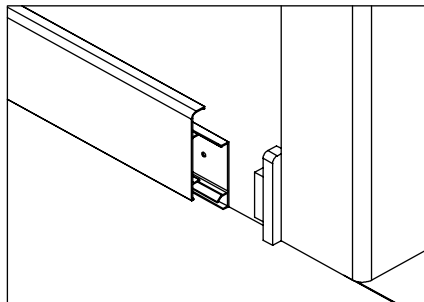

- 11** Assemble the cap tools with the profiles to ensure the wall ends properly.

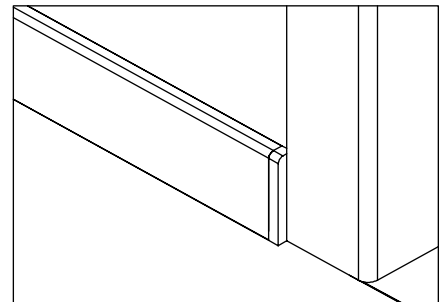

- 12** Make sure that profiles and cap tools are fixed to each other completely at the ends of the wall.