

MOX Systems - doiciméadú teicniúil

assembly-manual-revio-en.pdf

Aistriúchán teicniúil: féach ar na bunlíníochtaí agus ar na leathanaigh thagartha le haghaidh toisí.

Leathanach foinse 1

TREOIR UM CHOMHthionól Revio

Iarratas le greamaitheacha

1 Cuir silicone nó comhpháirteach leis an bpróifíl.

2 Deisigh an próifíl ar an urlár agus brúigh é.

3 Cuir an cairpéad ar an bpróifíl.

Feidhmchlár le Scriú

11 Deisigh an próifíl le scriúnna.

2 Cuir an cairpéad ar an bpróifíl.

Köşe Birleşimleri

1 Gearr próifílí 45 céim le haghaidh coirnéil inmheánacha.

2 Ailínigh na próifílí ag na coirnéil inmheánacha agus cuir isteach sa chomhpháirteach iad.

3 Cuir an cairpéad ar an bpróifíl.


4 Gearr próifílí 45 céim le haghaidh coirnéil seachtracha.

5 Ailínigh na próifílí ag na coirnéil seachtracha agus cuir isteach sa chomhpháirteach iad.


6 Cuir an cairpéad ar an bpróifíl.

Líníochtaí bunaidh agus leathanaigh tagartha


Application with Adhesive

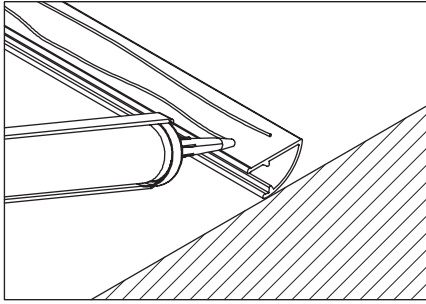

1 Apply silicone or joint to the profile.

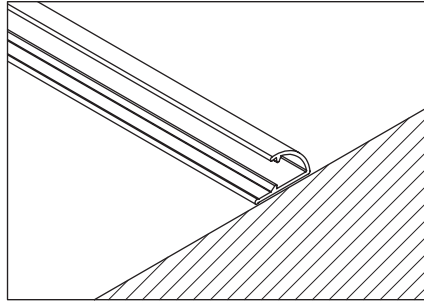


2 Fix the profile to the floor and press it.

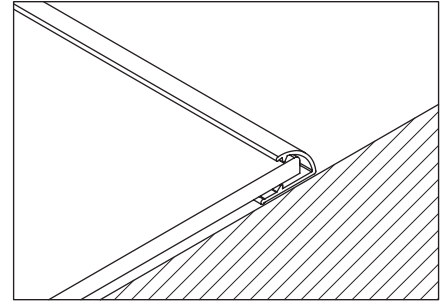


3 Place the carpet to the profile.

Application with Screw

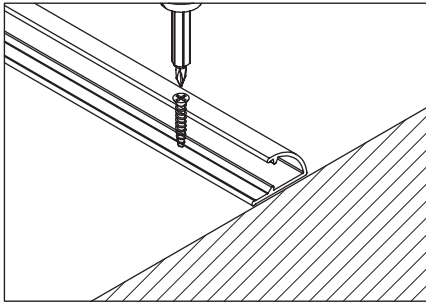


1 Fix the profile with screws.

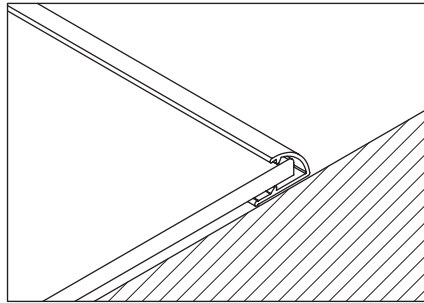


2 Place the carpet to the profile.


Köşe Birleşimleri

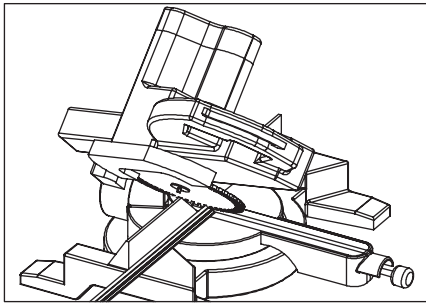


1 Cut profiles 45 degrees for internal corners.

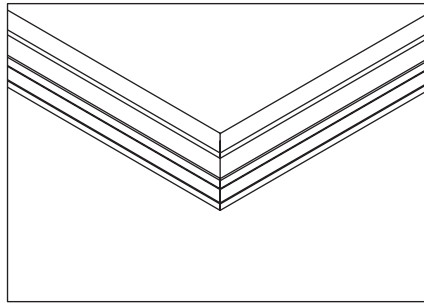


2 Align the profiles at the internal corners and place them into the joint.

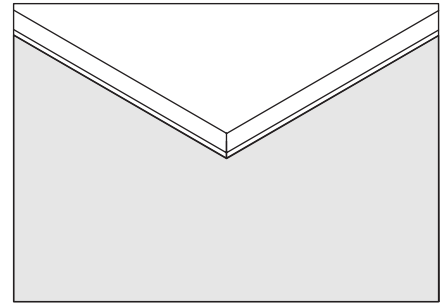


3 Place the carpet to the profile.

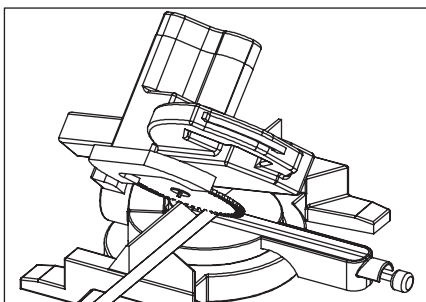

4 Cut profiles 45 degrees for external corners.

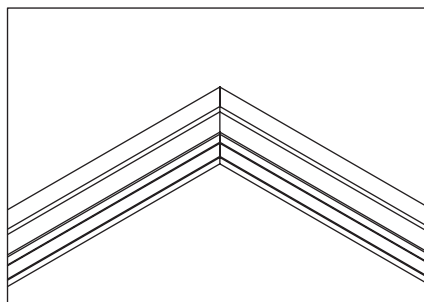

5 Align the profiles at the external corners and place them into the joint.

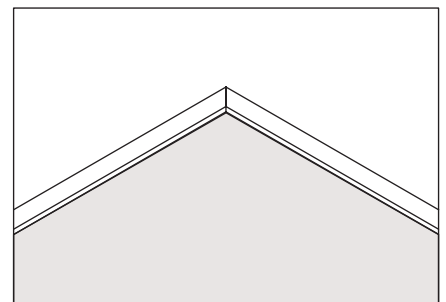

6 Place the carpet to the profile.