

MOX Systems - doiciméadú teicniúil

assembly-manual-square-fix-en.pdf

Aistriúchán teicniúil: féach ar na bunlíníochtaí agus ar na leathanaigh thagartha le haghaidh toisí.


Leathanach foinse 1

TREOIR Square-Fix TIONÓL

- 1 Píoc an próifíl ceart de réir tiús na tíl.
- 2 Cuir comhpháirteach i bhfeidhm agus cuir na próifílí ar ancaire dá réir sin.
- 3 Brúigh an próifíl go dtí go bhfuil sé socraithe don chomhpháirteach.
- 4 Cuir comhpháirteach i bhfeidhm ar na háiteanna ina gcuirfear an criadóireacht.
- 5 Cuir na tíleanna ar an bpróifíl, ag cinntiú go bhfuil a n-imill oiriúnach don phróifíl agus go bhfuil siad flush.
- 6 Gearr dhá phróifíl ag 45 céim le haghaidh hailt cúinne.
- 7 Ailínigh na próifílí ag na coirnéil agus brúigh isteach sa chomhpháirteach iad. 10
- 8 Cuir na tíleanna ar an bpróifíl, ag cinntiú go bhfuil a n-imill oiriúnach don phróifíl agus go bhfuil siad flush.

Leathanach 1/1


Líníochtaí bunaidh agus leathanaigh tagartha

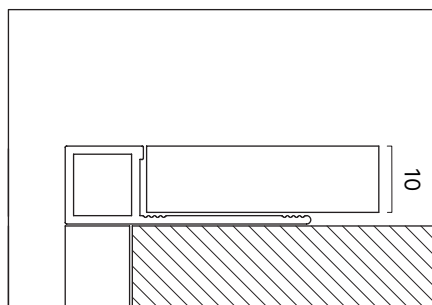


1 Pick the correct profile according to the tile thickness.




2 Apply joint and place the profiles anchor accordingly.

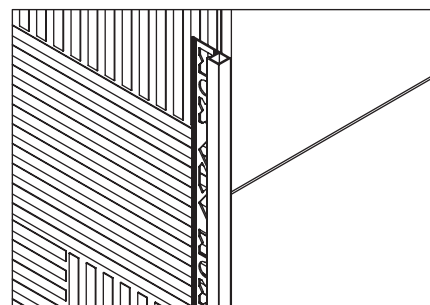


3 Press the profile until it is fixed to the joint.

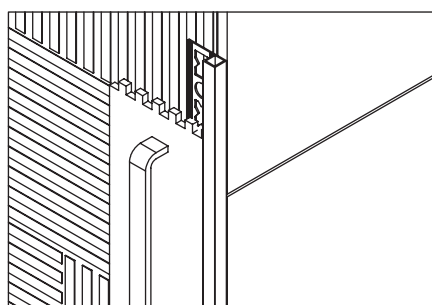


4 Apply joint to the places where the ceramics will be placed.

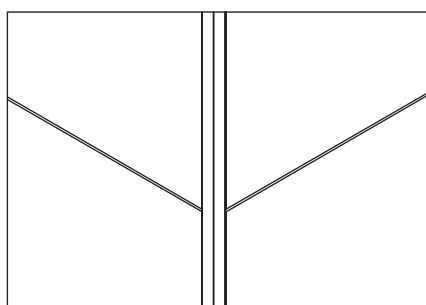


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

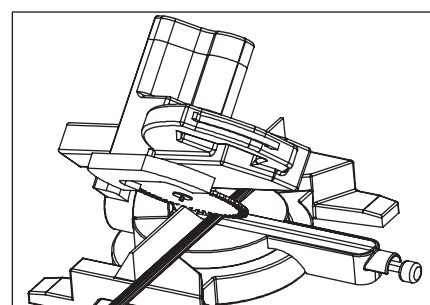

6 Cut two profiles at 45 degrees for corner joints.

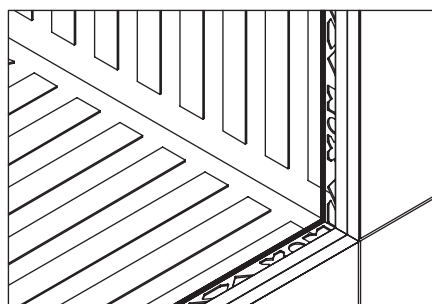

7 Align the profiles at the corners and press them into the joint.

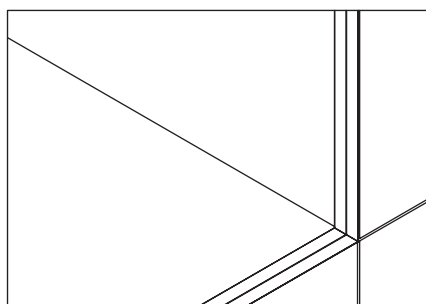

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.