

MOX Systems - doiciméadú teicniúil

assembly-manual-velo-en.pdf

Aistriúchán teicniúil: féach ar na bunlíníochtaí agus ar na leathanaigh thagartha le haghaidh toisí.


Leathanach foinse 1

TREOIR Velo


- 1 Squeeze an sileacain ar bhealach dhá líne go dtí an taobh chúl an phróifíl.
- 2 Greamaigh an phróifíl gur bhrúigh tú an sileacain go dtí an balla agus brúigh.
- 3 Téipeáil an phróifíl a ghreamaigh tú den bhalla ag eatraimh 50cm.
- 4 Bain amach go cúramach na bannaí atá ar an bpróifíl an lá ina dhiaidh.
- 5 Déan cinnte go bhfuil an próifíl greamaithe go daingean leis an mballa.
- 6 Gearr próifílí 45 céim le haghaidh coirnéil seachtracha.
- 7 Greamaigh na próifílí a ghearrann tú 45 céim ar an mballa ar an mbealach a dhúnfar dá chéile.
- 8 Bí cinnte go bhfuil na próifílí atá gearrtha 45 céim socraithe dá chéile go hiomlán ag na coirnéil seachtracha.
- 9 Gearr próifílí 45 céim le haghaidh coirnéil inmheánacha.
- 10 Greamaigh na próifílí a ghearrann tú 45 céim den bhalla ar an mbealach a dhúnfar dá chéile.
- 11 Déan cinnte go bhfuil na próifílí gearrtha 45 céim socraithe dá chéile go hiomlán ag na coirnéil inmheánacha.

Leathanach 1/1


Líníochtaí bunaidh agus leathanaigh tagartha

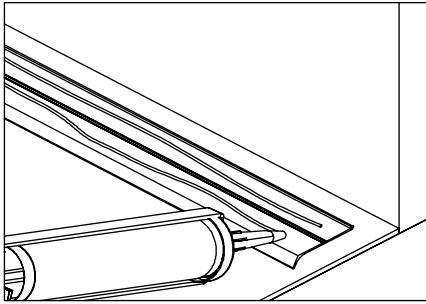


1 Squeeze the silicon in the manner of two lines to the back side of the profile.

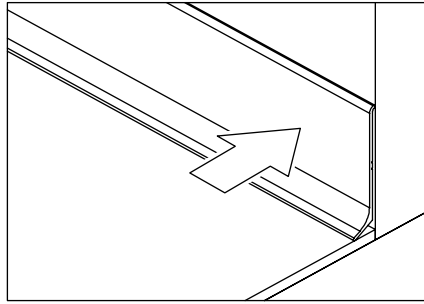


2 Paste the profile that you squeezed the silicon to the wall and press.

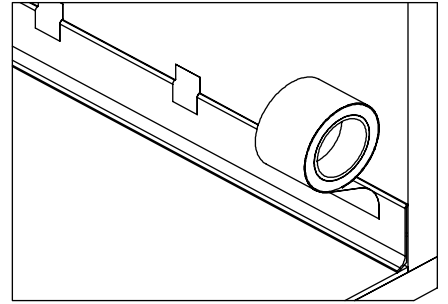


3 Tape the profile that you pasted to the wall at 50cm intervals.

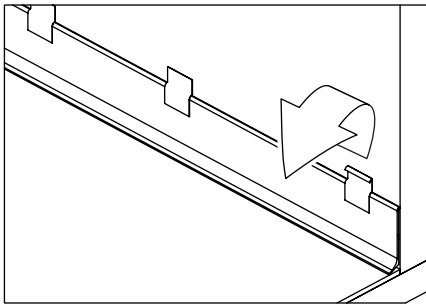


4 Remove the bands that on the profile heedfully the day after.

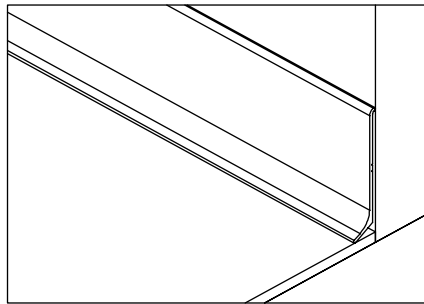


5 Make sure that the profile is stuck to the wall firmly.

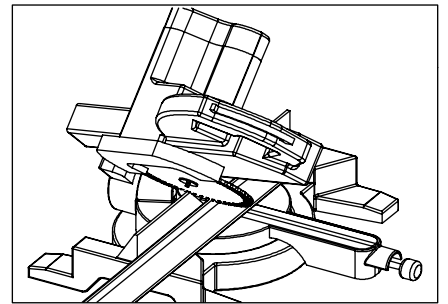


6 Cut profiles 45 degrees for external corners.

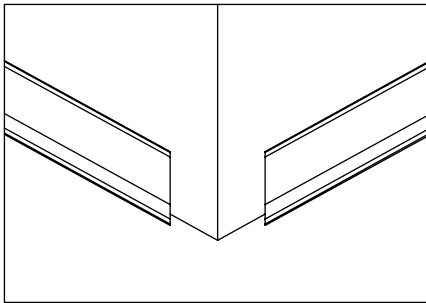


7 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

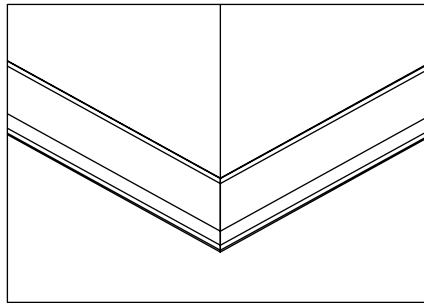


8 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

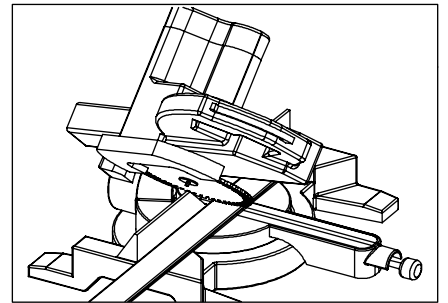

9 Cut profiles 45 degrees for internal corners.

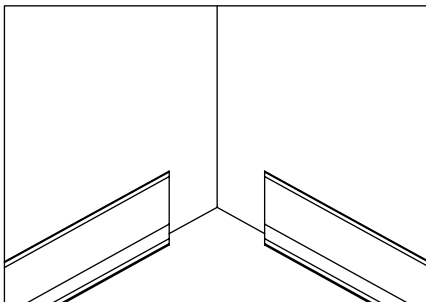

10 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

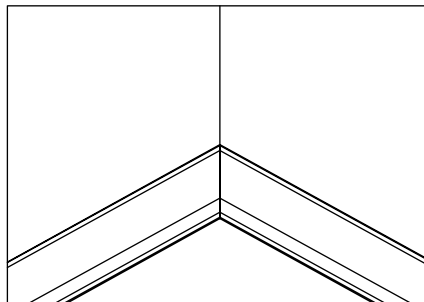

11 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.