

MOX Systems - doiciméadú teicniúil

assembly-manual-visio-en.pdf

Aistriúchán teicniúil: féach ar na bunlíníochtaí agus ar na leathanaigh thagartha le haghaidh toisí.


Leathanach foinse 1

TREOIR UM CHOMHthionól Visio


- 1 Roghnaigh an próifíl cheart de réir tiús an urláir.
- 2 Cuir comhpháirteach i bhfeidhm agus cuir na próifílí ar ancaire dá réir sin.
- 3 Brúigh an próifíl go dtí go bhfuil sé socraithe don chomhpháirteach.
- 4 Cuir an cairpéad ar an bpróifíl.
- 5 Gearr próifílí 45 céim le haghaidh coirnéil seachtracha.
- 6 Ailínigh na próifílí ag na coirnéil seachtracha agus cuir isteach sa chomhpháirteach iad.
- 7 Cuir an cairpéad ar an bpróifíl.
- 8 Gearr próifílí 45 céim le haghaidh coirnéil inmheánacha.
- 9 Ailínigh na próifílí ag na coirnéil inmheánacha agus cuir isteach sa chomhpháirteach iad.
- 10 Cuir an cairpéad ar an bpróifíl. 6 8

Leathanach 1/1


Líníochtaí bunaidh agus leathanaigh tagartha

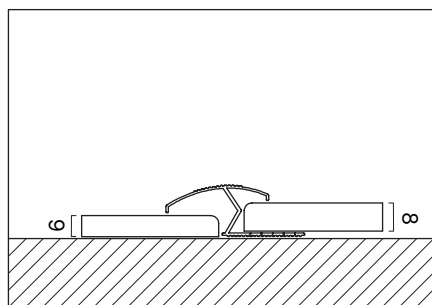


1 Pick the correct profile according to the flooring thickness.

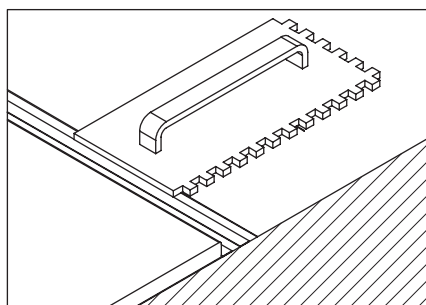


2 Apply joint and place the profiles anchor accordingly.

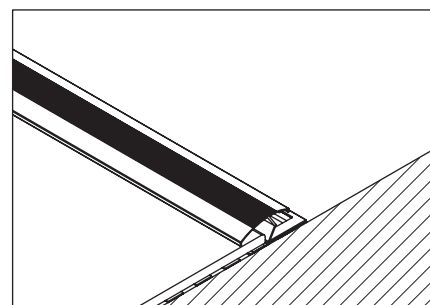


3 Press the profile until it is fixed to the joint.

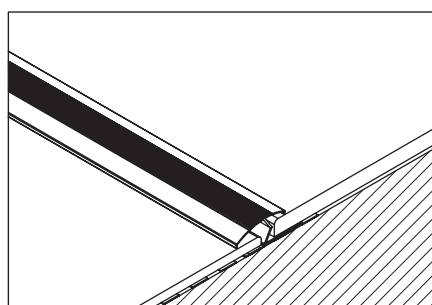


4 Place the carpet to the profile.

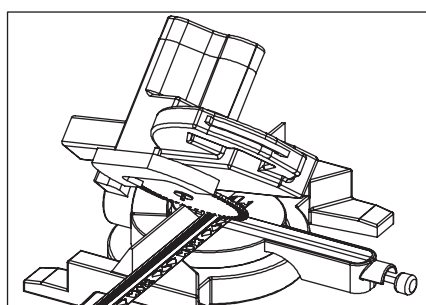


5 Cut profiles 45 degrees for external corners.

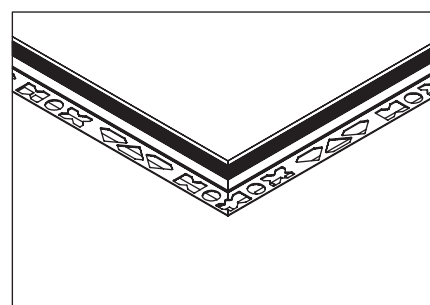


6 Align the profiles at the external corners and place them into the joint.

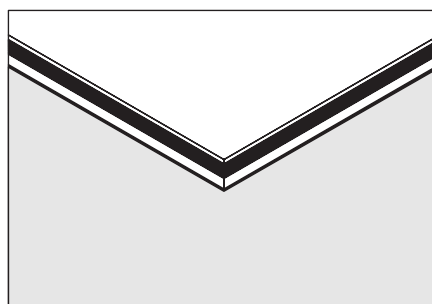


7 Place the carpet to the profile.

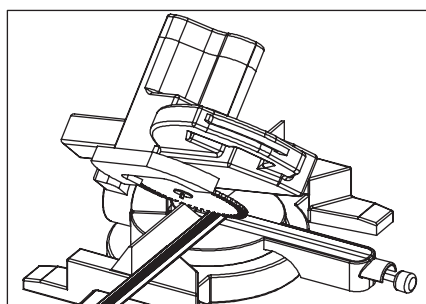

8 Cut profiles 45 degrees for internal corners.

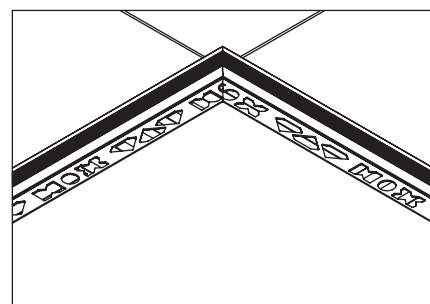

9 Align the profiles at the internal corners and place them into the joint.

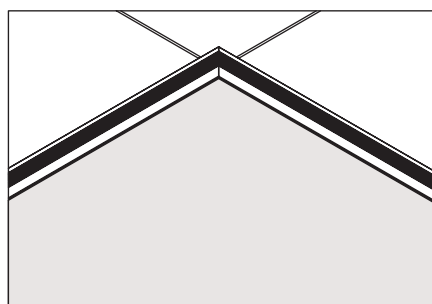

10 Place the carpet to the profile.