

MOX sustavi - tehnička dokumentacija

assembly-manual-mps-s-en.pdf

Tehnički prijevod: pogledajte izvorne crteže i referentne stranice za dimenzije.

Izvorna stranica 1

Mps-S VODIČ ZA SASTAVLJANJE

Odaberite odgovarajući profil prema debljini pločica.

2 Nanesite fugu i prema tome postavite sidra profila.

3 Pritisnite profil dok se ne pričvrsti na spoj.

Spojite mjesta na koja će se postavljati keramika.

5 Postavite i poravnajte keramiku na profil.

6 Izrežite profile pod kutom od 45 stupnjeva za vanjske kutove.

Poravnajte profile na vanjskim kutovima i utisnite ih u spoj.

8 Postavite i poravnajte keramiku na profil.


9 Izrežite profile pod kutom od 45 stupnjeva za unutarnje kutove.

10 Poravnajte profile na unutarnjim kutovima i utisnite ih u spoj.


11 Postavite i poravnajte keramiku na profil.

Stranica 1/1


Izvorni crteži i referentne stranice

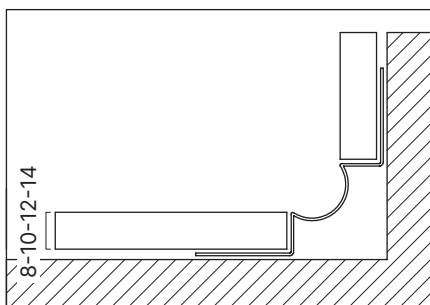


- 1** Pick the correct profile according to the tile thickness.

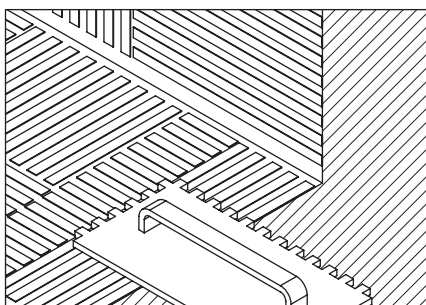


- 2** Apply joint and place the profiles anchor accordingly.

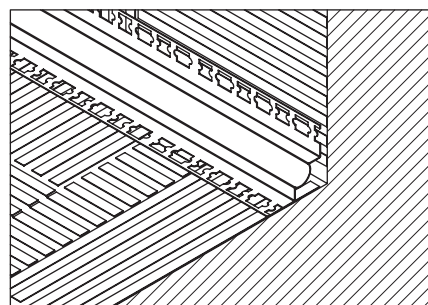


- 3** Press the profile until it is fixed to the joint.

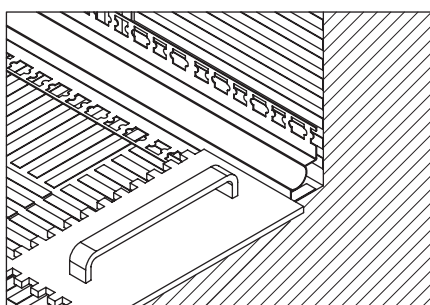


- 4** Apply joint to the places where the ceramics will be placed.

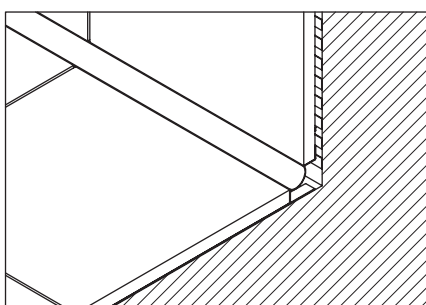


- 5** Place and align the ceramics to the profile.

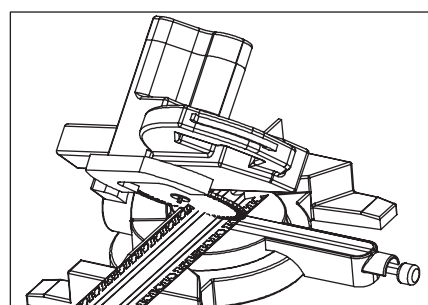


- 6** Cut profiles 45 degrees for external corners.

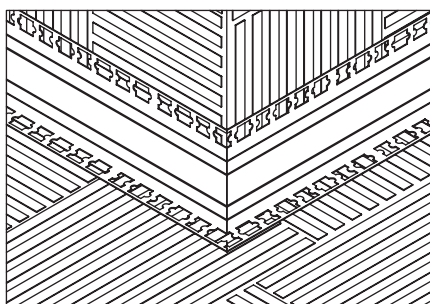


- 7** Align the profiles at the external corners and press them into the joint.

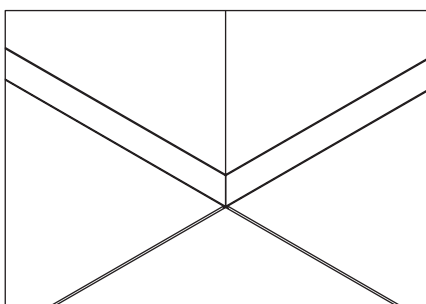


- 8** Place and align the ceramics to the profile.

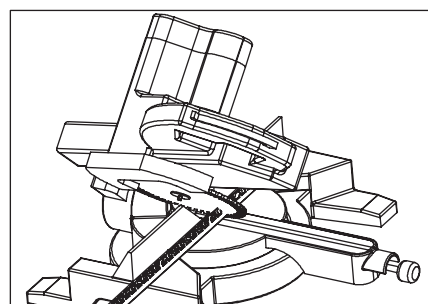

- 9** Cut profiles 45 degrees for internal corners.

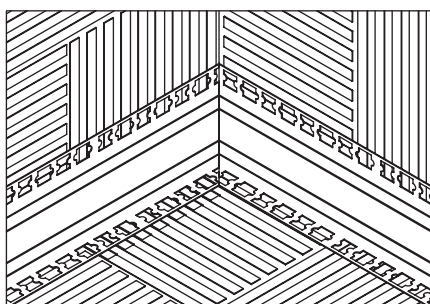

- 10** Align the profiles at the internal corners and press them into the joint.

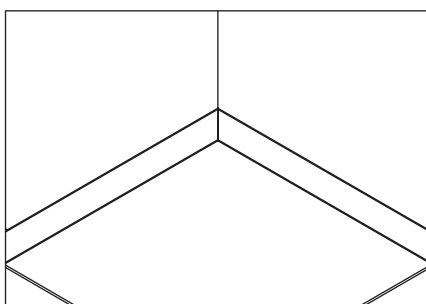

- 11** Place and align the ceramics to the profile.