

MOX sustavi - tehnička dokumentacija

assembly-manual-revio-en.pdf

Tehnički prijevod: pogledajte izvorne crteže i referentne stranice za dimenzije.

Izvorna stranica 1

Revio VODIČ ZA SASTAVLJANJE

Nanošenje ljepilom

- 1 Nanesite silikon ili fugu na profil.
- 2 Pričvrstite profil na pod i pritisnite ga.
- 3 Postavite tepih na profil.

Primjena s vijkom


- 11 Pričvrstite profil vijcima.
- 2 Postavite tepih na profil.

Köşe Birleşimleri


- 1 Izrežite profile pod kutom od 45 stupnjeva za unutarnje kutove.
- 2 Poravnajte profile na unutarnjim kutovima i postavite ih u spoj.
- 3 Postavite tepih na profil.
- 4 Izrežite profile pod kutom od 45 stupnjeva za vanjske kutove.
- 5 Poravnajte profile na vanjskim kutovima i postavite ih u spoj.
- 6 Postavite tepih na profil.

Izvorni crteži i referentne stranice


Application with Adhesive

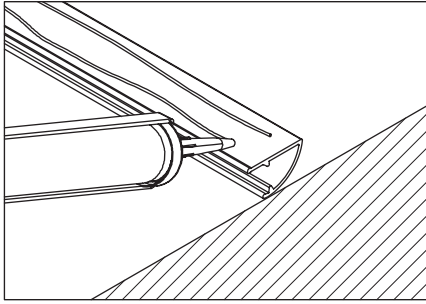

1 Apply silicone or joint to the profile.

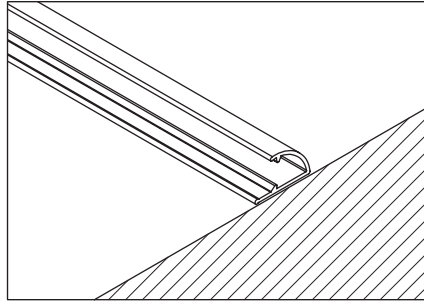


2 Fix the profile to the floor and press it.

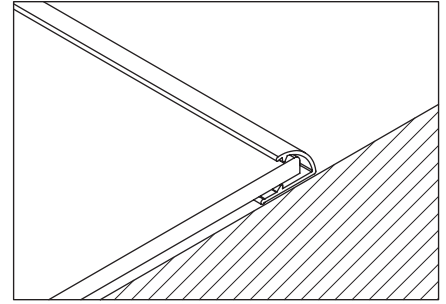


3 Place the carpet to the profile.

Application with Screw

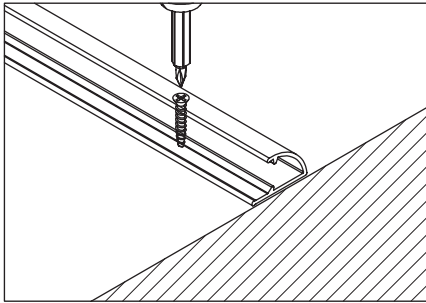


1 Fix the profile with screws.

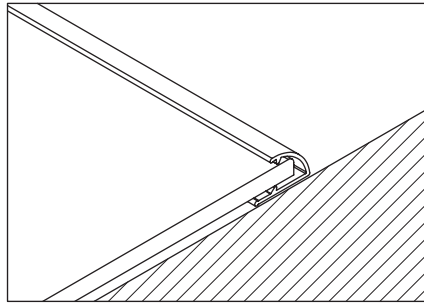


2 Place the carpet to the profile.


Köşe Birleşimleri

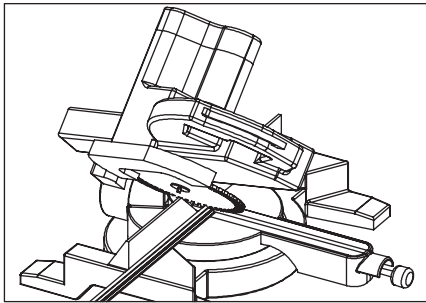


1 Cut profiles 45 degrees for internal corners.

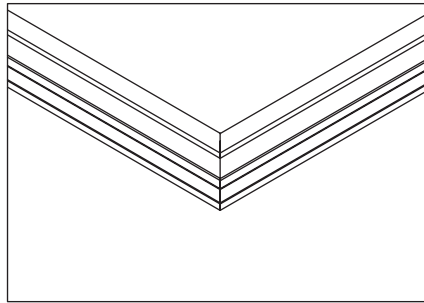


2 Align the profiles at the internal corners and place them into the joint.

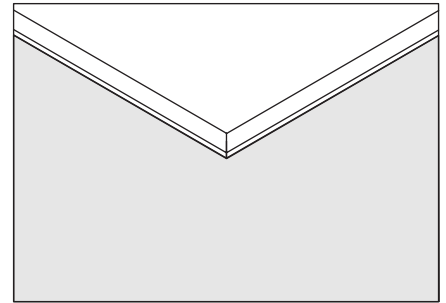


3 Place the carpet to the profile.

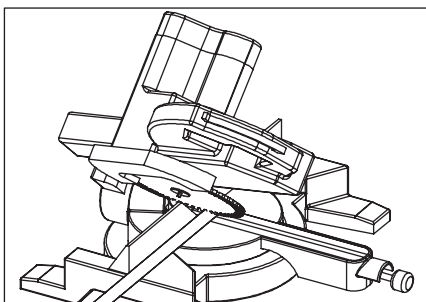

4 Cut profiles 45 degrees for external corners.

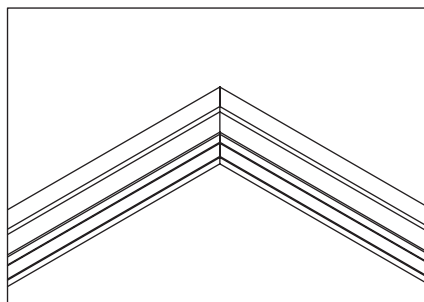

5 Align the profiles at the external corners and place them into the joint.

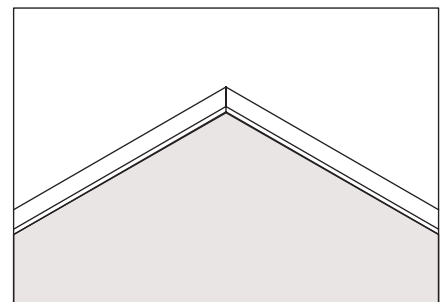

6 Place the carpet to the profile.