

MOX sustavi - tehnička dokumentacija

assembly-manual-sentio-en.pdf

Tehnički prijevod: pogledajte izvorne crteže i referentne stranice za dimenzije.


Izvorna stranica 1

Sentio VODIČ ZA SASTAVLJANJE


- 1 Postavite alate za pričvršćivanje na zid u razmacima od 50 cm i označite zid od rupa za vijke.
- 2 Izbušite točke koje ste već označili.
- 3 Postavite odgovarajuće tiple u skladu s materijalom zida u izbušene rupe.
- 4 Pričvrstite alate za zidno pričvršćivanje na mjesta koja su izbušena u razmacima od 50 cm.
- 5 Sastavite profil na alate za pričvršćivanje na zid baš kao na slici.
- 6 Provjerite jesu li profilni čavli i čavli alata za pričvršćivanje međusobno potpuno spojeni i provjerite je li potplat profila pričvršćen za pod.
- 7 Izrežite profile pod kutom od 45 stupnjeva za vanjske kutove.
- 8 Pričvrstite alate za pričvršćivanje na zid tako da budu zatvoreni na kutove i na njih sastavite profile koje ste izrezali pod kutom od 45 stupnjeva.
- 9 Provjerite jesu li profili koji su odrezani pod kutom od 45 stupnjeva potpuno pričvršćeni jedan za drugi na vanjskim kutovima.
- 10 Izrežite profile pod kutom od 45 stupnjeva za unutarnje kutove.
- 11 Pričvrstite alat za pričvršćivanje na zid tako da bude zatvoren na uglove i na njega sastavite profile koje ste izrezali pod kutom od 45 stupnjeva.
- 12 Uvjerite se da su profili koji su odrezani pod kutom od 45 stupnjeva međusobno potpuno pričvršćeni na unutarnjim kutovima.

Stranica 1/1


Izvorni crteži i referentne stranice

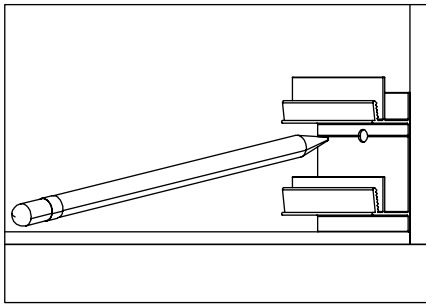


1 Place the wall fixation tools at 50cm intervals and mark the wall from the screw holes.

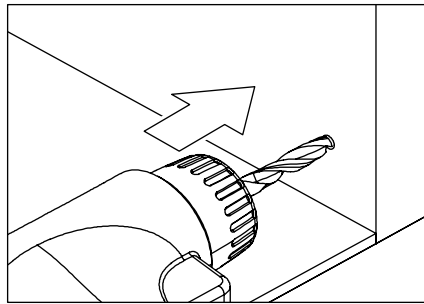


2 Drill the points that you have already marked.

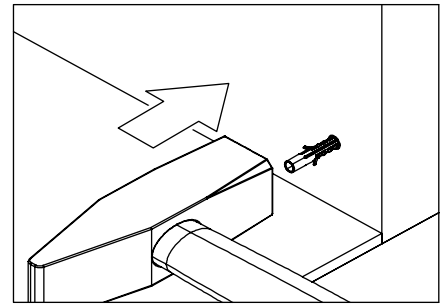


3 Place the correct dowels according to the wall material into the drilled holes.

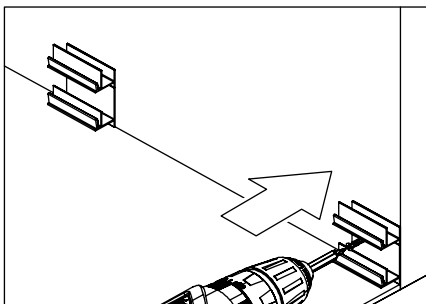


4 Screw the wall fixation tools to places that are drilled at 50cm intervals.

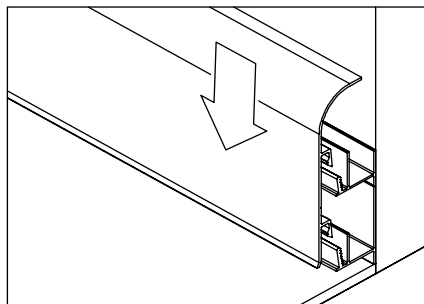


5 Assemble the profile on the wall fixation tools just like in the picture.

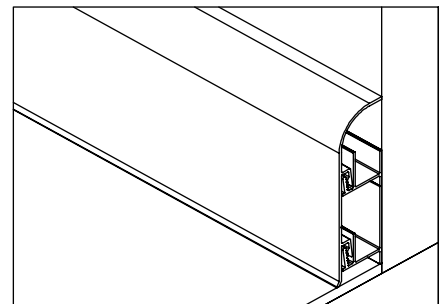


6 Make sure that the profile nails and the fixation tool's nails are completely connected to each other and be sure that the profile sole is fixed to the floor.

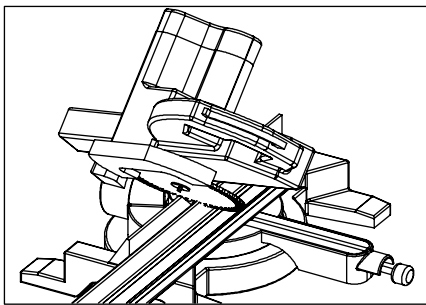


7 Cut profiles 45 degrees for external corners.

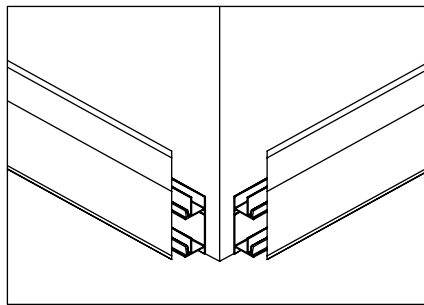


8 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

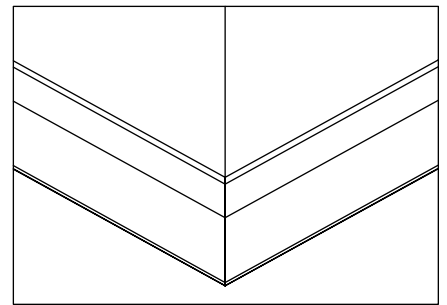


9 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

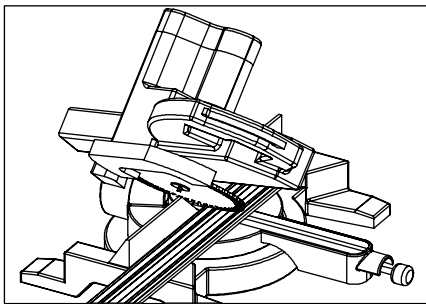

10 Cut profiles 45 degrees for internal corners.

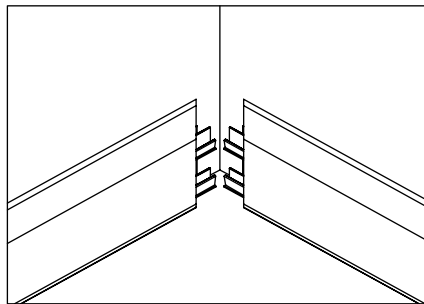

11 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

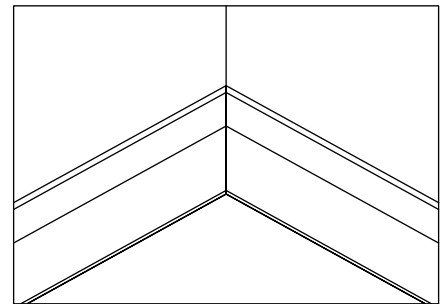

12 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.