

MOX sustavi - tehnička dokumentacija

assembly-manual-sole-en.pdf

Tehnički prijevod: pogledajte izvorne crteže i referentne stranice za dimenzije.


Izvorna stranica 1

VODIČ ZA SASTAVLJANJE MOX POKLOPCA


- 1 Postavite dijelove za pričvršćivanje na zid u razmacima od 50 cm i označite zid od rupa za vijke.
- 2 Izbušite točke koje ste već označili.
- 3 Postavite odgovarajuće tiple u skladu s materijalom zida u izbušene rupe.
- 4 Pričvrstite dijelove zidne fiksacije na mjesta koja su izbušena u razmacima od 50 cm.
- 5 Sastavite profil na dijelove za pričvršćivanje na zid baš kao na slici.
- 6 Uvjerite se da su profilni čavli i čavli dijela za pričvršćivanje potpuno spojeni jedni s drugima i provjerite je li potplat profila pričvršćen za pod.
- 7 Pričvrstite alate za pričvršćivanje na zid na način da budu zatvoreni na kutove i sastavite alate za spajanje kutova s profilima kako biste osigurali okretanje vanjskih kutova.
- 8 Uvjerite se da su profili i alati za spajanje kutova potpuno međusobno pričvršćeni na vanjskim kutovima.
- 9 Pričvrstite alate za pričvršćivanje na zid na način da budu zatvoreni na kutove i sastavite alate za kombiniranje kutova s profilima kako biste osigurali okretanje unutarnjih kutova.
- 10 Uvjerite se da su profili i alati za spajanje kutova međusobno potpuno pričvršćeni na unutarnjim kutovima.
- 11 Sastavite alate za kape s profilima kako biste osigurali da zid ispravno završi.
- 12 Uvjerite se da su profili i alati za kape potpuno međusobno pričvršćeni na krajevima zida.

Stranica 1/1


Izvorni crteži i referentne stranice

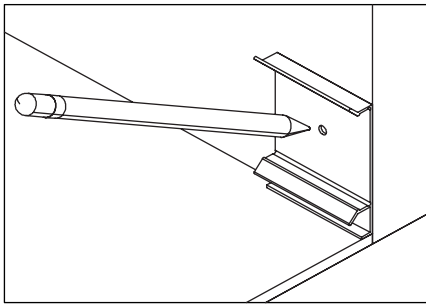


1 Place the wall fixation parts at 50cm intervals and mark the wall from the screw holes.

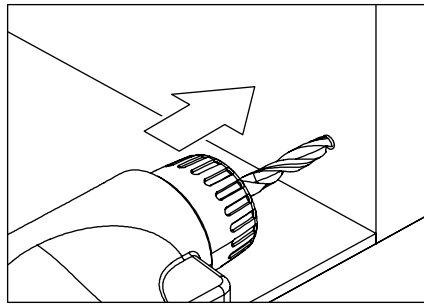


2 Drill the points that you have already marked.

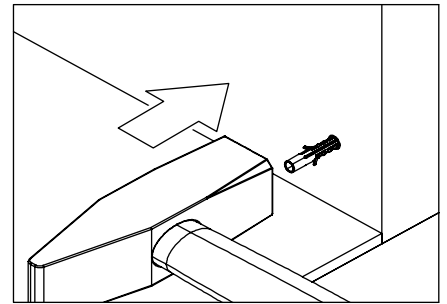


3 Place the correct dowels according to the wall material into the drilled holes.

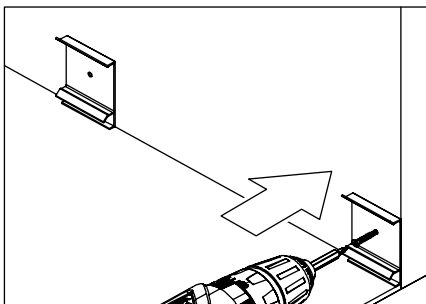


4 Screw the wall fixation parts to the places that are drilled at 50cm intervals.

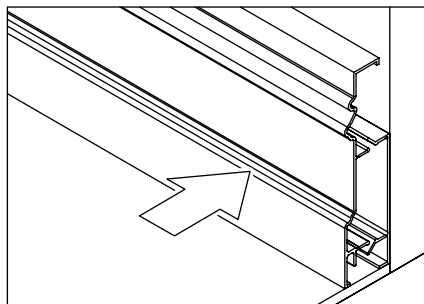


5 Assemble the profile on the wall fixation parts just like in the picture.

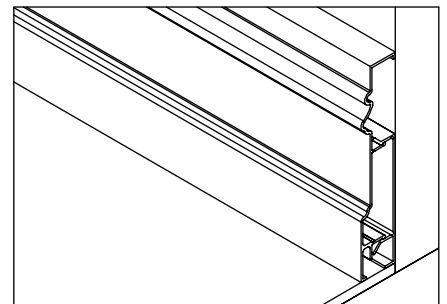


6 Make sure that the profile nails and the fixation part's nails are completely connected to each other and be sure that the profile sole is fixed to the floor.

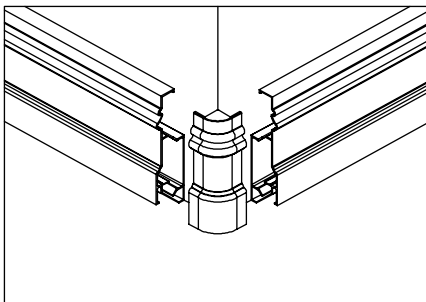


7 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the corner combining tools with the profiles to ensure the rotating of external corners.

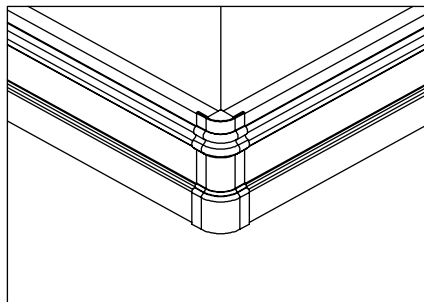


8 Make sure that profiles and corner combining tools are fixed to each other completely at the external corners.

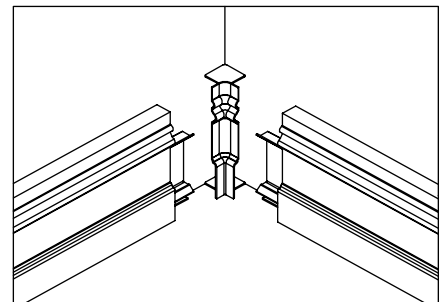


9 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the corner combining tools with the profiles to ensure the rotating of internal corners.

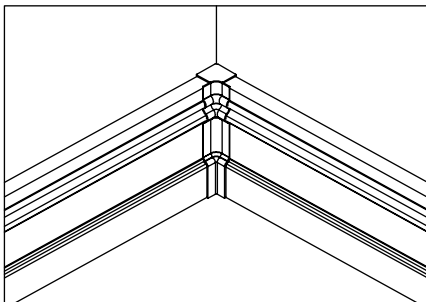

10 Make sure that profiles and corner combining tools are fixed to each other completely at the internal corners.

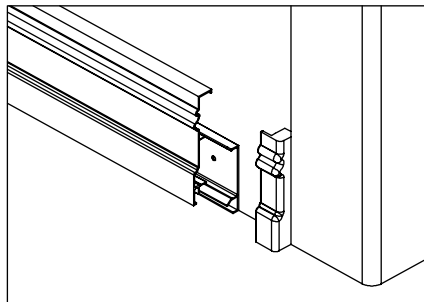

11 Assemble the cap tools with the profiles to ensure the wall ends properly.

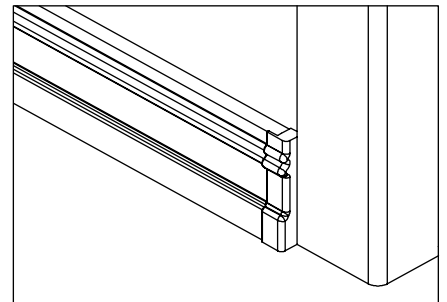

12 Make sure that profiles and cap tools are fixed to each other completely at the ends of the wall.