

MOX sustavi - tehnička dokumentacija

assembly-manual-velo-en.pdf

Tehnički prijevod: pogledajte izvorne crteže i referentne stranice za dimenzije.


Izvorna stranica 1

Velo VODIČ ZA SASTAVLJANJE


- 1 Stisnite silikon u obliku dvije linije na stražnju stranu profila.
- 2 Zalijepite profil koji ste stisnuli silikonom na zid i pritisnite.
- 3 Zalijepite profil koji ste zalijepili na zid u razmacima od 50 cm.
- 4 Dan nakon pažljivo uklonite trake s profila.
- 5 Provjerite je li profil čvrsto pričvršćen za zid.
- 6 Izrežite profile pod kutom od 45 stupnjeva za vanjske kutove.
- 7 Zalijepite profile koje ste izrezali pod kutom od 45 stupnjeva na zid tako da budu zatvoreni jedan prema drugom.
- 8 Provjerite jesu li profili koji su odrezani pod kutom od 45 stupnjeva potpuno pričvršćeni jedan za drugi na vanjskim kutovima.
- 9 Izrežite profile pod kutom od 45 stupnjeva za unutarnje kutove.
- 10 Profile koje ste izrezali zalijepite pod kutom od 45 stupnjeva na zid tako da budu zatvoreni jedan prema drugom.
- 11 Uvjerite se da su profili koji su odrezani pod kutom od 45 stupnjeva međusobno potpuno pričvršćeni na unutarnjim kutovima.

Stranica 1/1


Izvorni crteži i referentne stranice

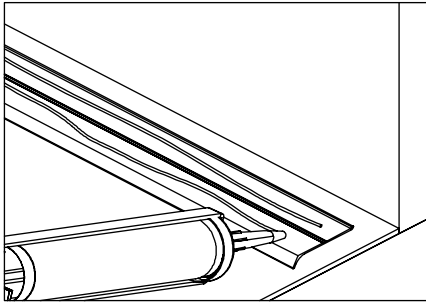


1 Squeeze the silicon in the manner of two lines to the back side of the profile.

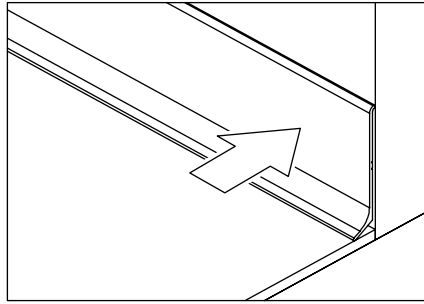


2 Paste the profile that you squeezed the silicon to the wall and press.

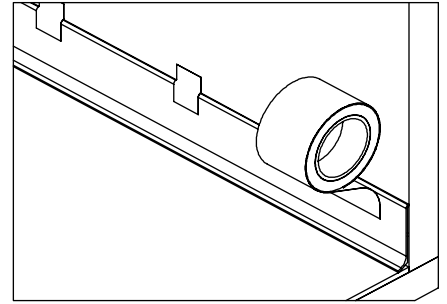


3 Tape the profile that you pasted to the wall at 50cm intervals.

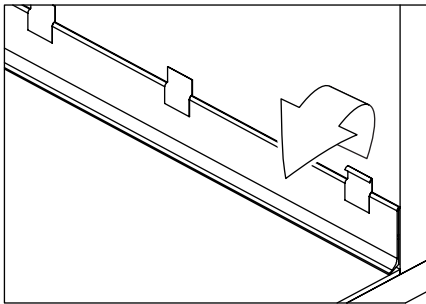


4 Remove the bands that on the profile heedfully the day after.

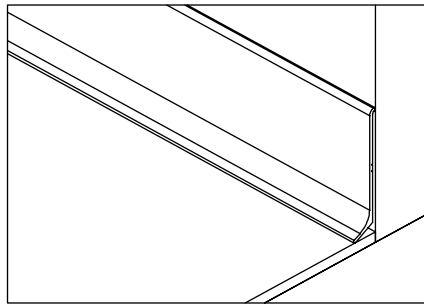


5 Make sure that the profile is stuck to the wall firmly.

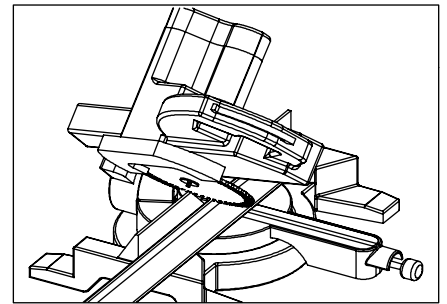


6 Cut profiles 45 degrees for external corners.

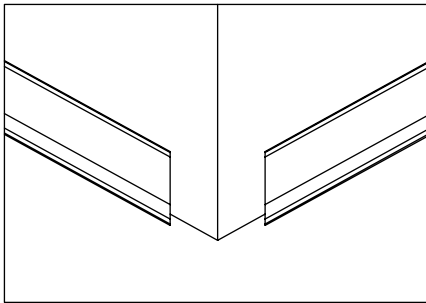


7 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

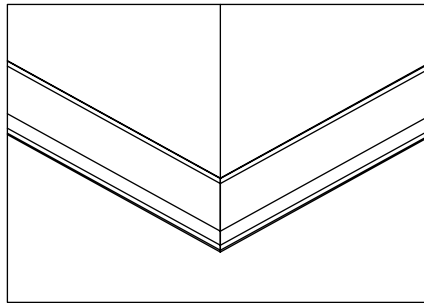


8 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

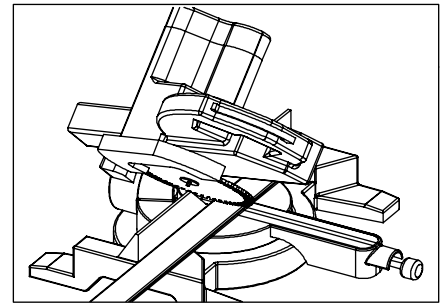

9 Cut profiles 45 degrees for internal corners.

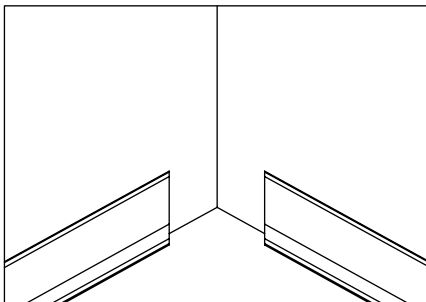

10 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

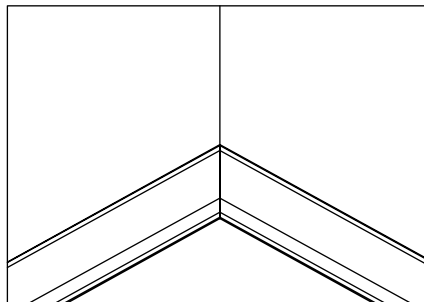

11 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.