

MOX sustavi - tehnička dokumentacija

assembly-manual-visio-en.pdf

Tehnički prijevod: pogledajte izvorne crteže i referentne stranice za dimenzije.


Izvorna stranica 1

Visio VODIČ ZA SASTAVLJANJE


- 1 Odaberite odgovarajući profil prema debljini poda.
- 2 Nanesite fugu i prema tome postavite sidra profila.
- 3 Pritisnite profil dok se ne pričvrsti na spoj.
- 4 Postavite tepih na profil.
- 5 Izrežite profile pod kutom od 45 stupnjeva za vanjske kutove.
- 6 Poravnajte profile na vanjskim kutovima i postavite ih u spoj.
- 7 Postavite tepih na profil.
- 8 Izrežite profile pod kutom od 45 stupnjeva za unutarnje kutove.
- 9 Poravnajte profile na unutarnjim kutovima i postavite ih u spoj.
- 10 Postavite tepih na profil. 6 8

Stranica 1/1


Izvorni crteži i referentne stranice

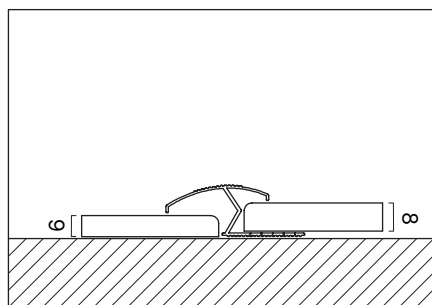


1 Pick the correct profile according to the flooring thickness.

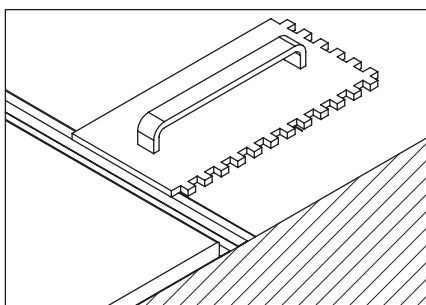


2 Apply joint and place the profiles anchor accordingly.

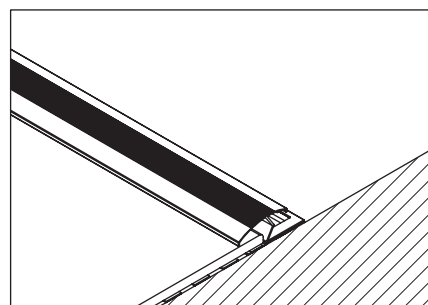


3 Press the profile until it is fixed to the joint.

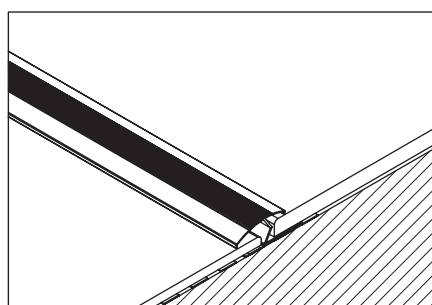


4 Place the carpet to the profile.

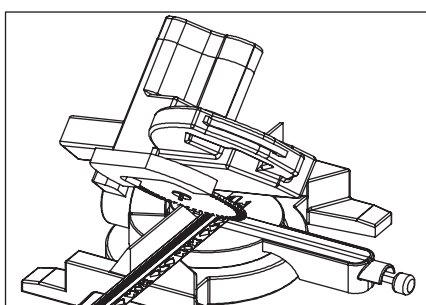


5 Cut profiles 45 degrees for external corners.

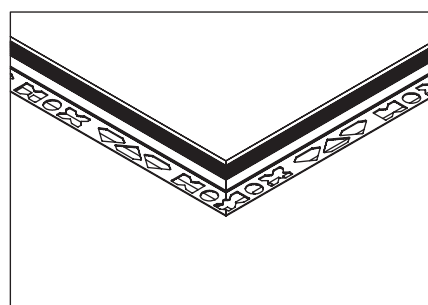


6 Align the profiles at the external corners and place them into the joint.

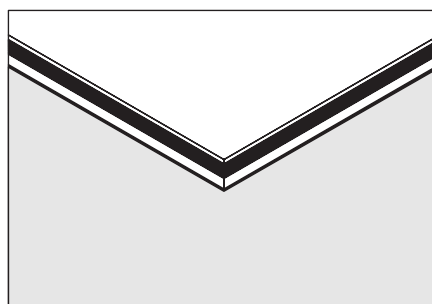


7 Place the carpet to the profile.

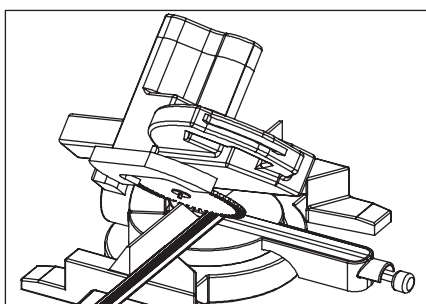

8 Cut profiles 45 degrees for internal corners.

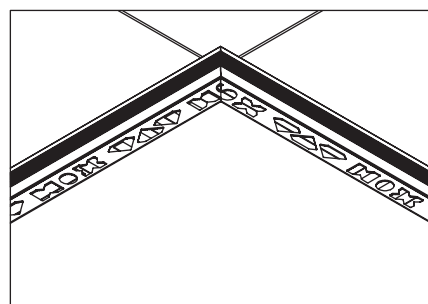

9 Align the profiles at the internal corners and place them into the joint.

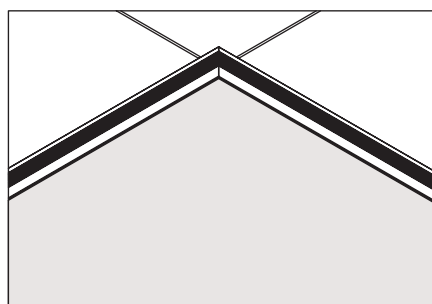

10 Place the carpet to the profile.