

MOX Systems - műszaki dokumentáció

assembly-manual-revio-en.pdf

Műszaki fordítás: a méretekért tekintse meg az eredeti rajzokat és referenciaoldalakat.

Forrás oldal 1

Revio ÖSSZESZERELÉSI ÚTMUTATÓ

Felhordás ragasztóval

- 1 Vigyen fel szilikont vagy hézagot a profilra.
- 2 Rögzítse a profilt a padlóhoz, és nyomja meg.
- 3 Helyezze a szőnyeget a profilra.

Alkalmazás csavarral


- 11 Rögzítse a profilt csavarokkal.
- 2 Helyezze a szőnyeget a profilra.

Köşe Birleşimleri


- 1 Vágja le a profilokat 45 fokkal a belső sarkokhoz.
- 2 Igazítsa a profilokat a belső sarkokhoz, és helyezze be őket a csatlakozásba.
- 3 Helyezze a szőnyeget a profilra.
- 4 Vágja le a profilokat 45 fokkal a külső sarkokhoz.
- 5 Igazítsa a profilokat a külső sarkokhoz, és helyezze be őket a csatlakozásba.
- 6 Helyezze a szőnyeget a profilra.

Eredeti rajzok és hivatkozási oldalak


Application with Adhesive

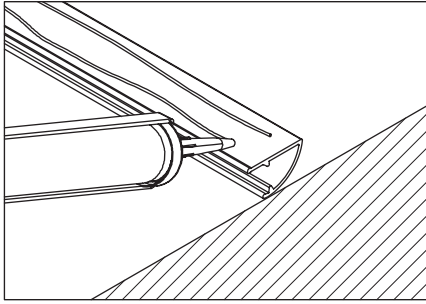

1 Apply silicone or joint to the profile.

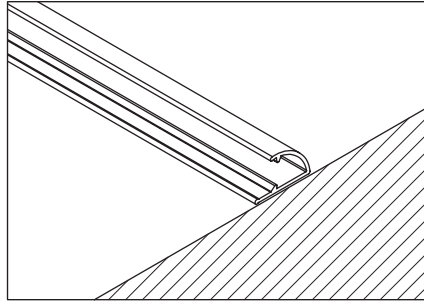


2 Fix the profile to the floor and press it.

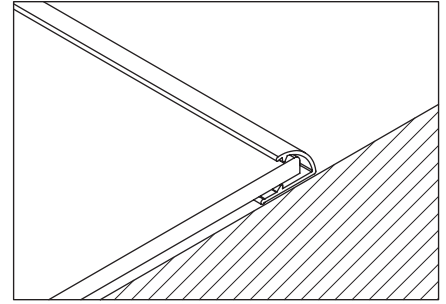


3 Place the carpet to the profile.

Application with Screw

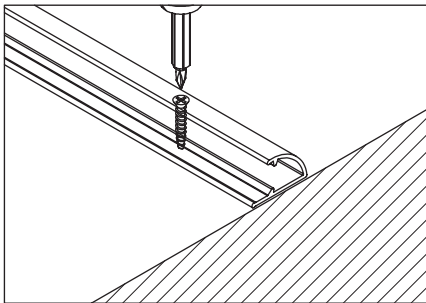


1 Fix the profile with screws.

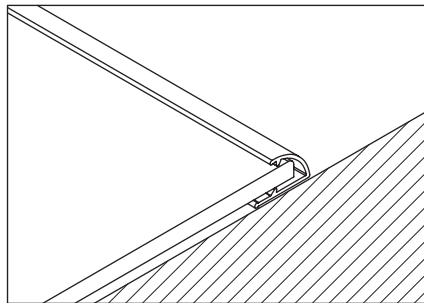


2 Place the carpet to the profile.


Köşe Birleşimleri

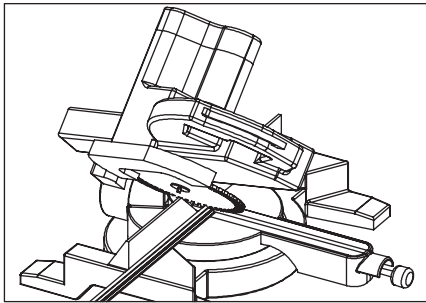


1 Cut profiles 45 degrees for internal corners.

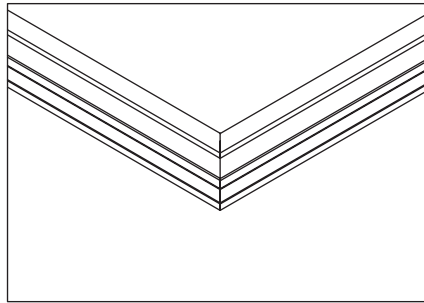


2 Align the profiles at the internal corners and place them into the joint.

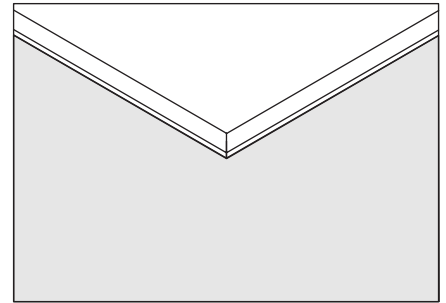


3 Place the carpet to the profile.

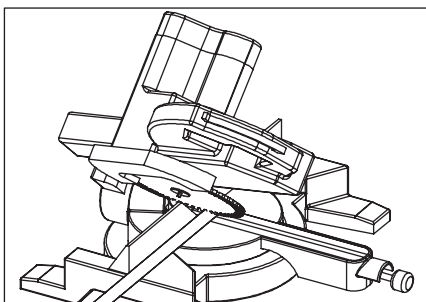

4 Cut profiles 45 degrees for external corners.

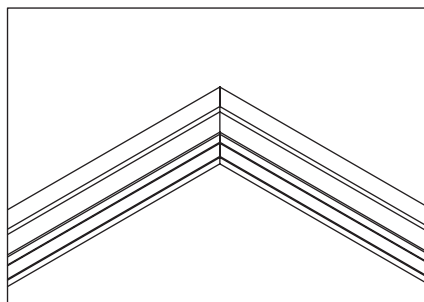

5 Align the profiles at the external corners and place them into the joint.

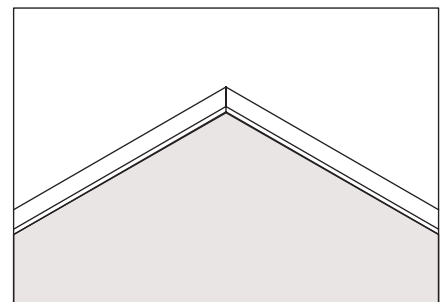

6 Place the carpet to the profile.