

MOX Systems - műszaki dokumentáció

assembly-manual-round-fix-en.pdf

Műszaki fordítás: a méretekért tekintse meg az eredeti rajzokat és referenciaoldalakat.


Forrás oldal 1

Round-Fix ÖSSZESZERELÉSI ÚTMUTATÓ


- 1 Válassza ki a megfelelő profilt a csempe vastagságának megfelelően.
- 2 Helyezze fel a kötést, és ennek megfelelően rögzítse a profilokat.
- 3 Nyomja meg a profilt, amíg az rögzül a csatlakozáshoz.
- 4 Alkalmazza a fugát a kerámiák elhelyezésére.
- 5 Helyezze a csempéket a profilra, ügyelve arra, hogy éleik illeszkedjenek a profilhoz és egy síkban legyenek.
- 6 Vágjon két profilt 45 fokban a sarokkötésekhez.
- 7 Igazítsa a profilokat a belső sarkokhoz, és nyomja be őket a kötésbe. 10
- 8 Helyezze a csempéket a profilra, ügyelve arra, hogy éleik illeszkedjenek a profilhoz és egy síkban legyenek.

1/1. oldal


Eredeti rajzok és hivatkozási oldalak

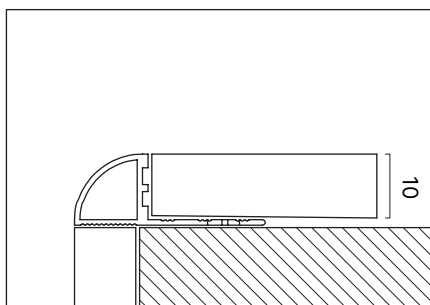


1 Pick the correct profile according to the tile thickness.

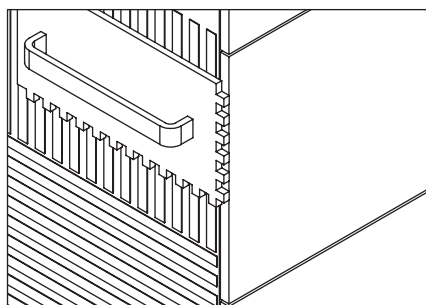


2 Apply joint and place the profiles anchor accordingly.

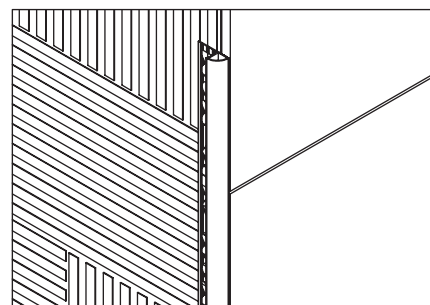


3 Press the profile until it is fixed to the joint.

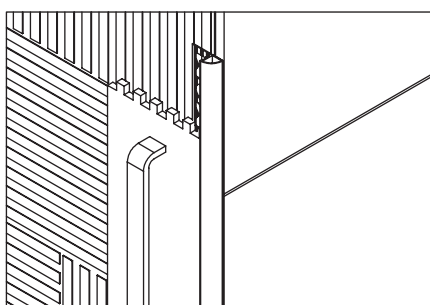


4 Apply joint to the places where the ceramics will be placed.

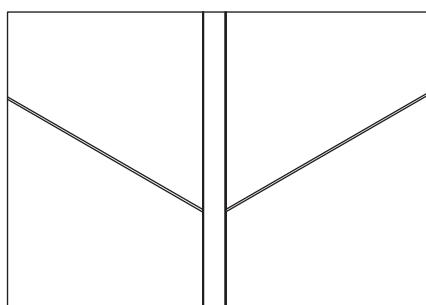


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

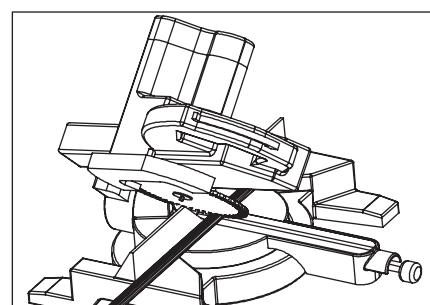

6 Cut two profiles at 45 degrees for corner joints.

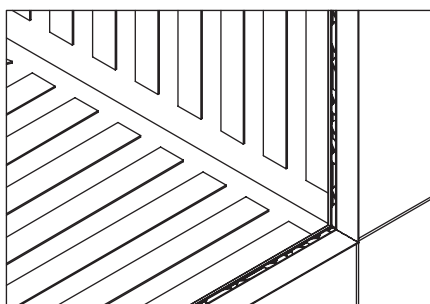

7 Align the profiles at the internal corners and press them into the joint.

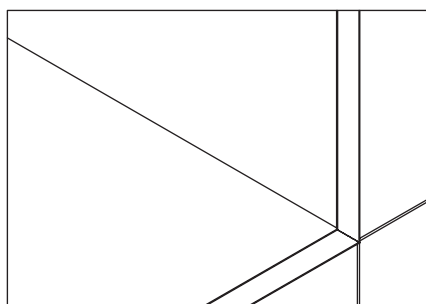

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.