

MOX Systems - műszaki dokumentáció

assembly-manual-velo-en.pdf


Műszaki fordítás: a méretekért tekintse meg az eredeti rajzokat és referenciaoldalakat.

Forrás oldal 1


Velo ÖSSZESZERELÉSI ÚTMUTATÓ

- 1 Nyomja össze a szilíciumot két vonalhoz hasonlóan a profil hátoldalához.
 - 2 Illessze be a profilt, amellyel a szilíciumot összenyomta, és nyomja meg.
 - 3 Ragassza fel a falra ragasztott profilt 50 cm-es időközönként.
 - 4 Másnap óvatosan távolítsa el a profilról a szalagokat.
 - 5 Győződjön meg arról, hogy a profil szilárdan a falhoz tapad.
 - 6 Vágja le a profilokat 45 fokkal a külső sarkokhoz.
 - 7 Ragassza fel a 45 fokban elvágott profilokat a falra úgy, hogy az egymáshoz zárva legyen.
 - 8 Győződjön meg arról, hogy a 45 fokban elvágott profilok a külső sarkoknál teljesen egymáshoz vannak rögzítve.
 - 9 Vágja le a profilokat 45 fokkal a belső sarkokhoz.
 - 10 Ragassza fel a 45 fokban elvágott profilokat a falra úgy, hogy az egymáshoz zárva legyen.
 - 11 Győződjön meg arról, hogy a 45 fokban elvágott profilok a belső sarkoknál teljesen egymáshoz vannak rögzítve.
- 1/1. oldal


Eredeti rajzok és hivatkozási oldalak

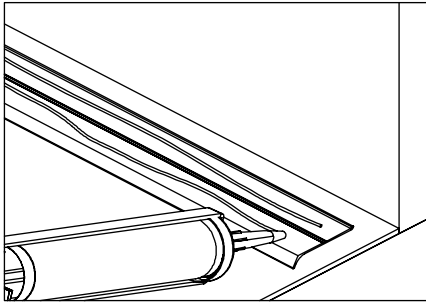


1 Squeeze the silicon in the manner of two lines to the back side of the profile.

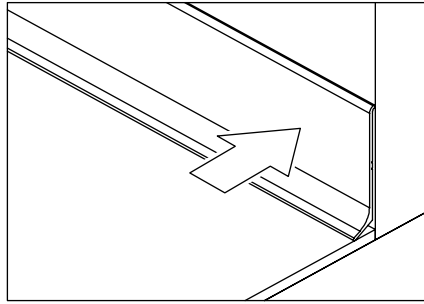


2 Paste the profile that you squeezed the silicon to the wall and press.

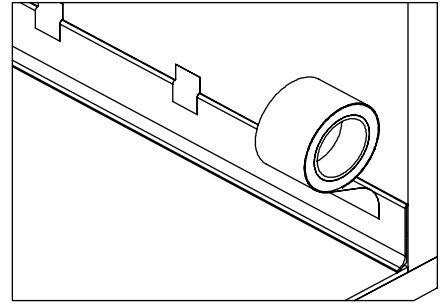


3 Tape the profile that you pasted to the wall at 50cm intervals.

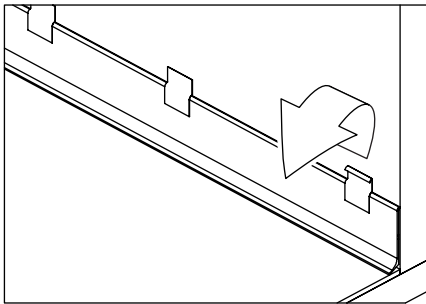


4 Remove the bands that on the profile heedfully the day after.

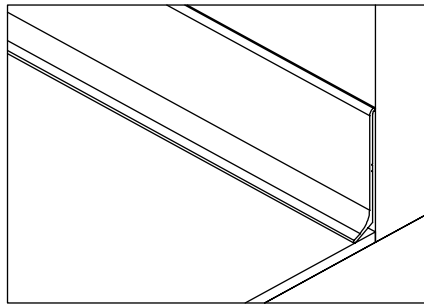


5 Make sure that the profile is stuck to the wall firmly.

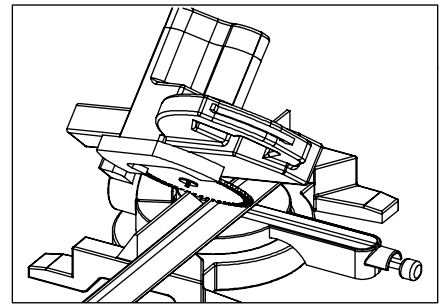


6 Cut profiles 45 degrees for external corners.

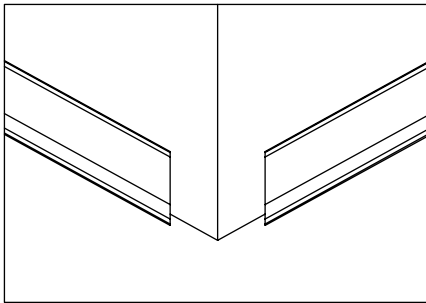


7 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

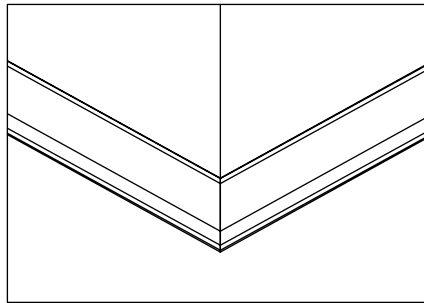


8 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

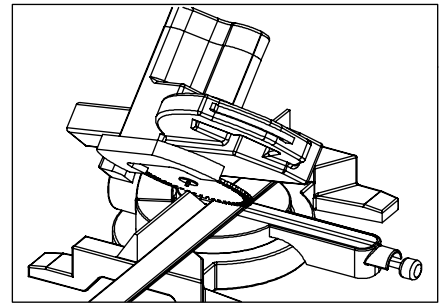

9 Cut profiles 45 degrees for internal corners.

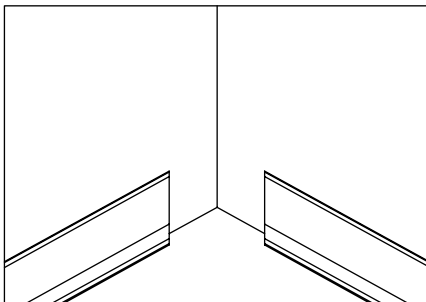

10 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

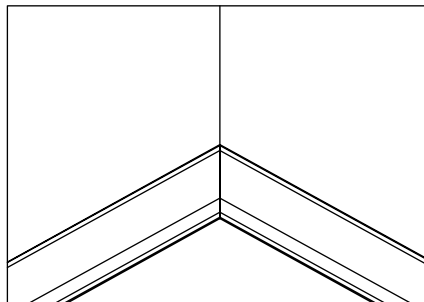

11 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.