

MOX Systems - műszaki dokumentáció

assembly-manual-visio-en.pdf

Műszaki fordítás: a méretekért tekintse meg az eredeti rajzokat és referenciaoldalakat.


Forrás oldal 1

Visio ÖSSZESZERELÉSI ÚTMUTATÓ


- 1 Válassza ki a megfelelő profilt a padló vastagságának megfelelően.
- 2 Helyezze fel a kötést, és ennek megfelelően rögzítse a profilokat.
- 3 Nyomja meg a profilt, amíg az rögzül a csatlakozáshoz.
- 4 Helyezze a szőnyeget a profilra.
- 5 Vágja le a profilokat 45 fokkal a külső sarkokhoz.
- 6 Igazítsa a profilokat a külső sarkokhoz, és helyezze be őket a csatlakozásba.
- 7 Helyezze a szőnyeget a profilra.
- 8 Vágja le a profilokat 45 fokkal a belső sarkokhoz.
- 9 Igazítsa a profilokat a belső sarkokhoz, és helyezze be őket a csatlakozásba.
- 10 Helyezze a szőnyeget a profilra. 6 8

1/1. oldal


Eredeti rajzok és hivatkozási oldalak

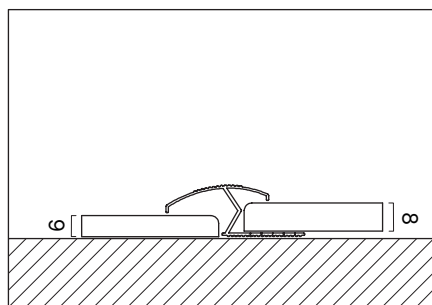


1 Pick the correct profile according to the flooring thickness.

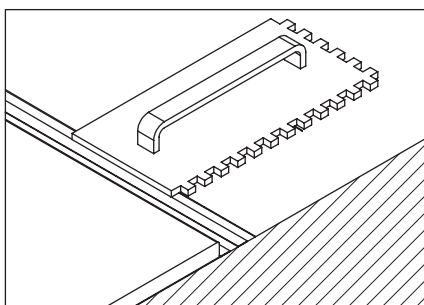


2 Apply joint and place the profiles anchor accordingly.

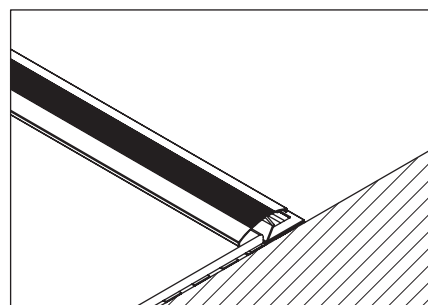


3 Press the profile until it is fixed to the joint.

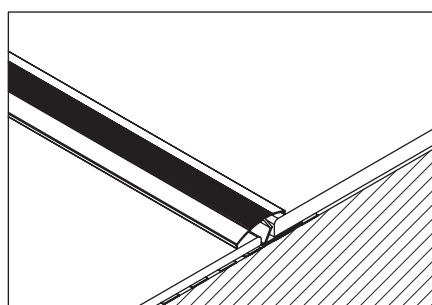


4 Place the carpet to the profile.

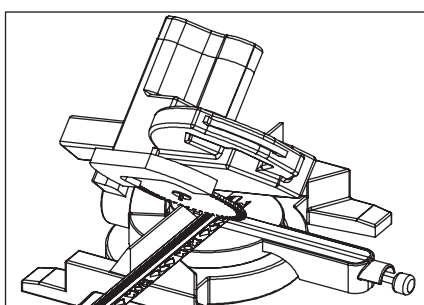


5 Cut profiles 45 degrees for external corners.

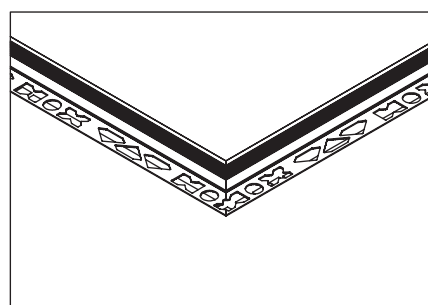


6 Align the profiles at the external corners and place them into the joint.

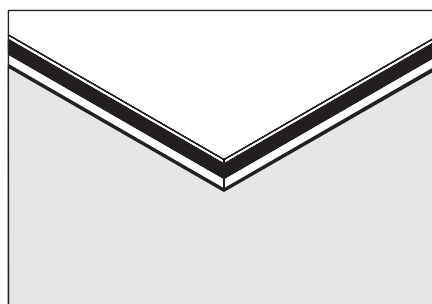


7 Place the carpet to the profile.

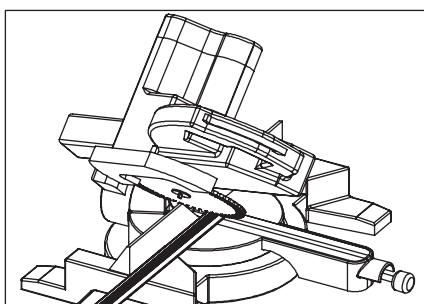

8 Cut profiles 45 degrees for internal corners.

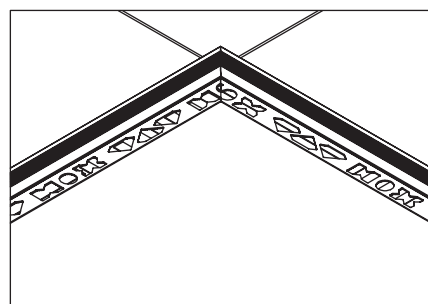

9 Align the profiles at the internal corners and place them into the joint.

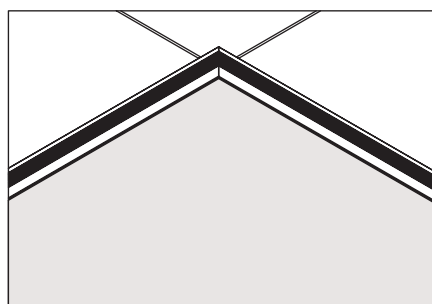

10 Place the carpet to the profile.