

MOX Systems - տեխնիկական փաստաթղթեր

assembly-manual-mps-tb-en.pdf

Տեխնիկական թարգմանություն. չափերի համար դիմեք բնօրինակ գծագրերին և տեղեկատու էջերին:

Աղբյուրի էջ 1

Mps-Tb ASSEMBLY ՈՒՂԵՑՈՒՅՑ

Ընտրեք ճիշտ պրոֆիլը ըստ հատակի հաստության:

2 Կիրառեք միացում և համապատասխանաբար տեղադրեք պրոֆիլների խարիսխը:

3 Սեղմեք պրոֆիլը, մինչև այն ամրացվի հողի վրա:

4 Կիրառեք միացում այն վայրերում, որտեղ տեղադրվելու է հատակը:

5 Տեղադրեք և հարթեցրեք հատակը պրոֆիլին:

6 Կտրեք պրոֆիլները 45 աստիճանով արտաքին անկյունների համար:

Հավասարեցրեք պրոֆիլները արտաքին անկյուններում և սեղմեք դրանք հողի մեջ:

8 Տեղադրեք և հարթեցրեք հատակը պրոֆիլին:


9 Կտրեք պրոֆիլները 45 աստիճանով ներքին անկյունների համար:

10 Հավասարեցրեք պրոֆիլները ներքին անկյուններում և սեղմեք դրանք միացման մեջ:


11 Տեղադրեք և հարթեցրեք հատակը պրոֆիլին:

Էջ 1/1


Բնօրինակ գծագրեր և տեղեկատու էջեր

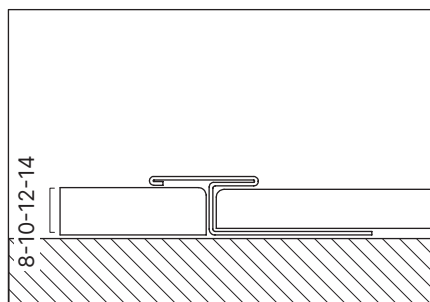


- 1** Pick the correct profile according to the flooring thickness.

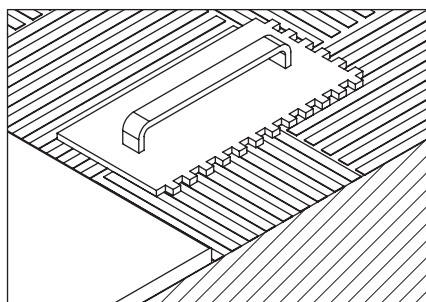


- 2** Apply joint and place the profiles anchor accordingly.

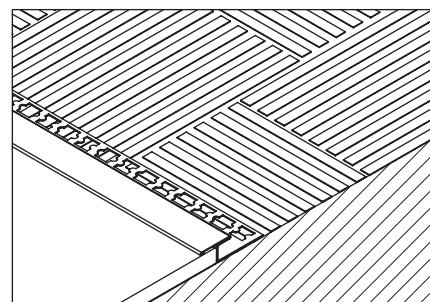


- 3** Press the profile until it is fixed to the joint.

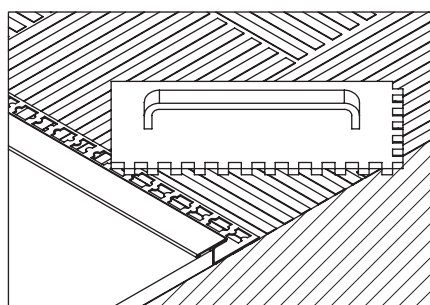


- 4** Apply joint to the places where the flooring will be placed.

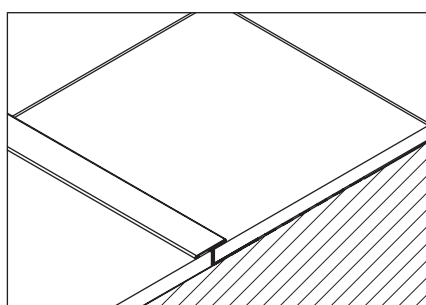


- 5** Place and align the flooring to the profile.

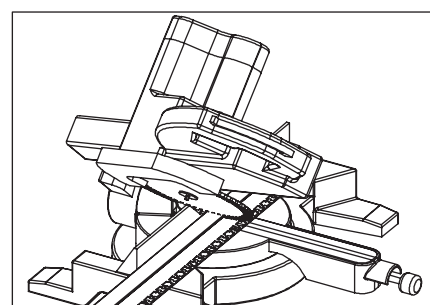


- 6** Cut profiles 45 degrees for external corners.

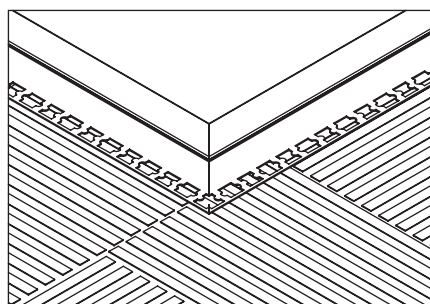


- 7** Align the profiles at the external corners and press them into the joint.

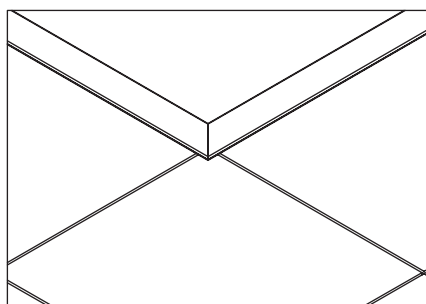


- 8** Place and align the flooring to the profile.

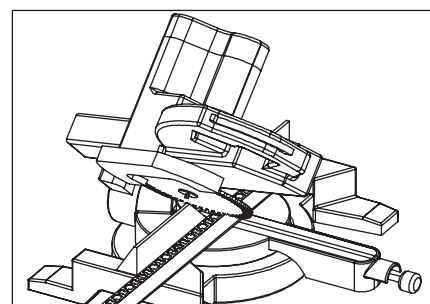

- 9** Cut profiles 45 degrees for internal corners.

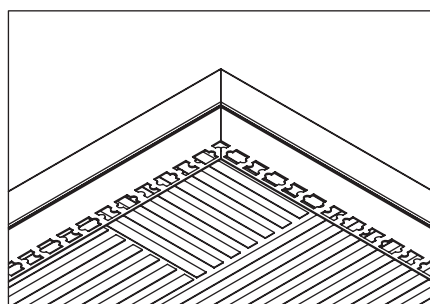

- 10** Align the profiles at the internal corners and press them into the joint.

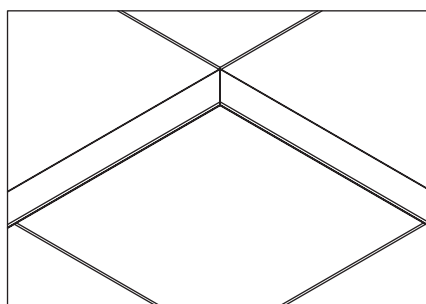

- 11** Place and align the flooring to the profile.