

# MOX Systems - տեխնիկական փաստաթղթեր

assembly-manual-revio-en.pdf

Տեխնիկական թարգմանություն. չափերի համար դիմեք բնօրինակ գծագրերին և տեղեկատու էջերին:

## Աղբյուրի էջ 1

Revio ASSEMBLY ՈՒՂԵՑՈՒՅՑ

Կիրառում սոսինձով

1 Կիրառեք սիլիկոն կամ հող պրոֆիլին:

2 Ամրացրեք պրոֆիլը հատակին և սեղմեք այն:

3 Տեղադրեք գորգը պրոֆիլին:

Դիմում պտուտակով

11 Պտուտակներով ամրացրեք պրոֆիլը:

2 Տեղադրեք գորգը պրոֆիլին:

Köşe Birleşimleri

1 Կտրեք պրոֆիլները 45 աստիճանով ներքին անկյունների համար:

2 Հավասարեցրեք պրոֆիլները ներքին անկյուններում և տեղադրեք դրանք հողերի մեջ:

3 Տեղադրեք գորգը պրոֆիլին:


4 Կտրեք պրոֆիլները 45 աստիճանով արտաքին անկյունների համար:

5 Հավասարեցրեք պրոֆիլները արտաքին անկյուններում և տեղադրեք դրանք հողի մեջ:


6 Տեղադրեք գորգը պրոֆիլին:

# Բնօրինակ գծագրեր և տեղեկատու էջեր


## Application with Adhesive

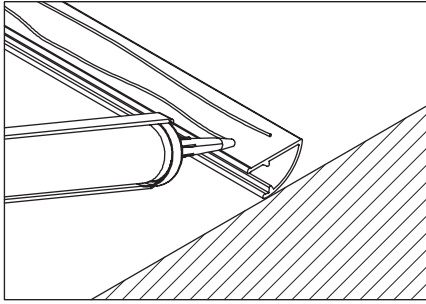

1 Apply silicone or joint to the profile.

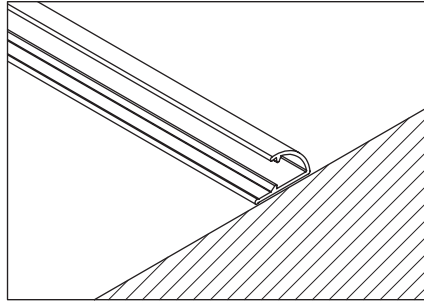


2 Fix the profile to the floor and press it.

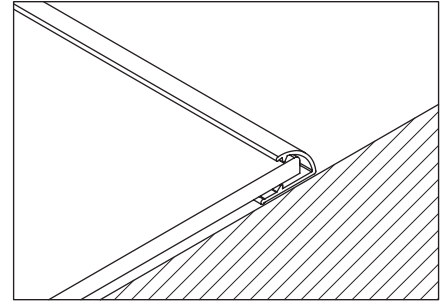


3 Place the carpet to the profile.

## Application with Screw

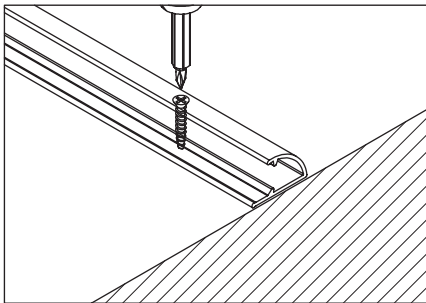


1 Fix the profile with screws.

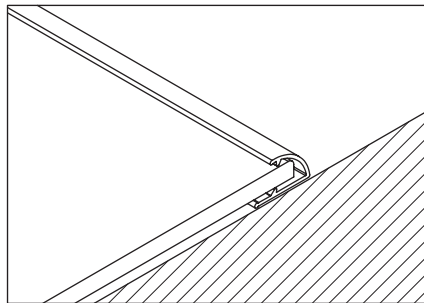


2 Place the carpet to the profile.


## Köşe Birleşimleri

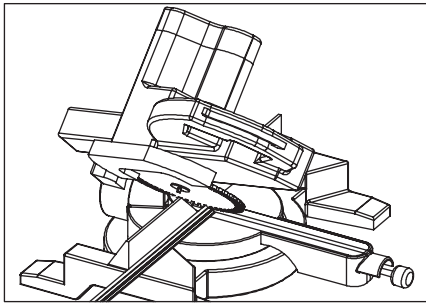


1 Cut profiles 45 degrees for internal corners.

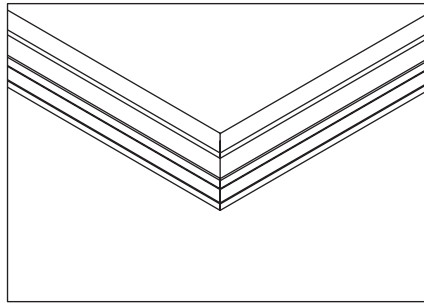


2 Align the profiles at the internal corners and place them into the joint.

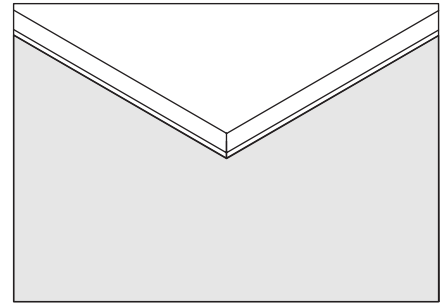


3 Place the carpet to the profile.

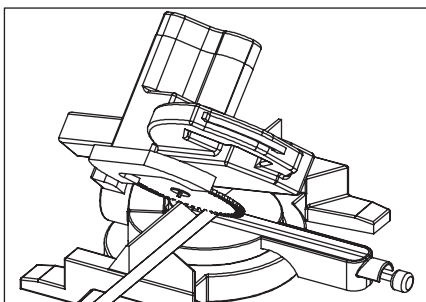

4 Cut profiles 45 degrees for external corners.

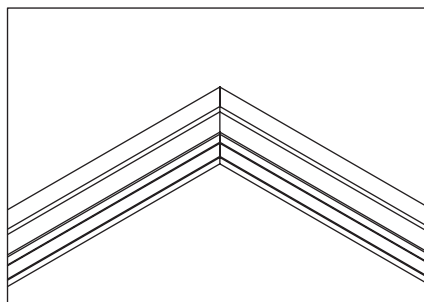

5 Align the profiles at the external corners and place them into the joint.

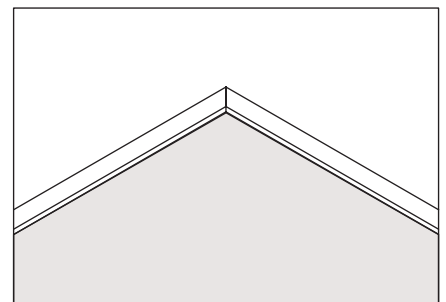

6 Place the carpet to the profile.