

MOX Systems - տեխնիկական փաստաթղթեր

assembly-manual-sentio-en.pdf

Տեխնիկական թարգմանություն. չափերի համար դիմեք բնօրինակ գծագրերին և տեղեկատու էջերին:

Աղբյուրի էջ 1

Sentio ASSEMBLY ՈՒՂԵՑՈՒՅՑ

1 Տեղադրեք պատի ամրացման գործիքները 50 սմ ընդմիջումներով և նշեք պատը պտուտակների անցքերից:

2 Փորեք այն կետերը, որոնք արդեն նշել եք:

3 Հորատված անցքերի մեջ տեղադրեք ճիշտ դողները՝ ըստ պատի նյութի:

4 Պտուտակեք պատի ամրացման գործիքները այն վայրերում, որոնք փորված են 50 սմ ընդմիջումներով:

5 Հավաքեք պրոֆիլը պատի ամրացման գործիքների վրա, ինչպես նկարում:

6 Համոզվեք, որ պրոֆիլի եղունգները և ամրացնող գործիքի մեխերը ամբողջովին միացված են միմյանց և համոզվեք, որ պրոֆիլի տակացուը ամրացված է հատակին:

7 Կտրեք պրոֆիլները 45 աստիճանով արտաքին անկյունների համար:

8 Կպցրեք պատի ամրացման գործիքները այնպես, որ փակ կլինեն անկյուններում և հավաքեք այն պրոֆիլները, որոնք կտրել եք 45 աստիճանով:

9 Համոզվեք, որ 45 աստիճան կտրված պրոֆիլները արտաքին անկյուններում ամբողջությամբ ամրացված են միմյանց:


10 Կտրեք պրոֆիլները 45 աստիճանով ներքին անկյունների համար:

11 Կպցրեք պատի ամրացման գործիքները այնպես, որ փակ կլինեն անկյուններում և հավաքեք այն պրոֆիլները, որոնք կտրել եք 45 աստիճանով:


12 Համոզվեք, որ պրոֆիլները, որոնք կտրված են 45 աստիճան, ամբողջովին ամրացված են միմյանց ներքին անկյուններում:

Էջ 1/1


Բնօրինակ գծագրեր և տեղեկատու էջեր

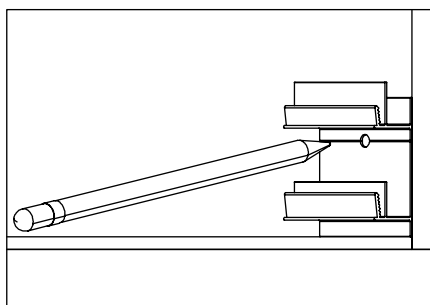


1 Place the wall fixation tools at 50cm intervals and mark the wall from the screw holes.

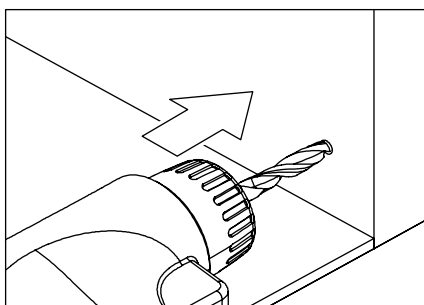


2 Drill the points that you have already marked.

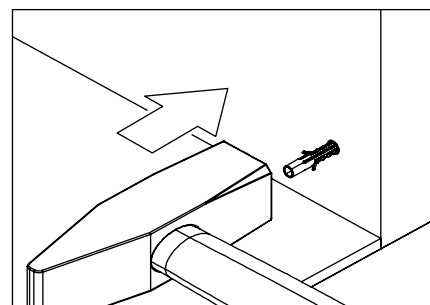


3 Place the correct dowels according to the wall material into the drilled holes.

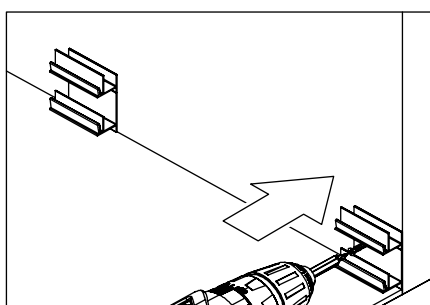


4 Screw the wall fixation tools to places that are drilled at 50cm intervals.

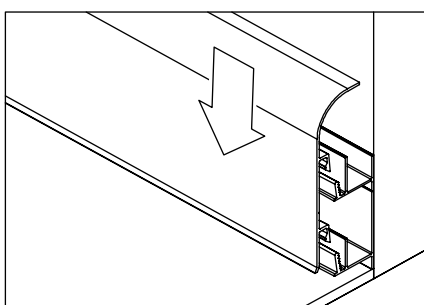


5 Assemble the profile on the wall fixation tools just like in the picture.

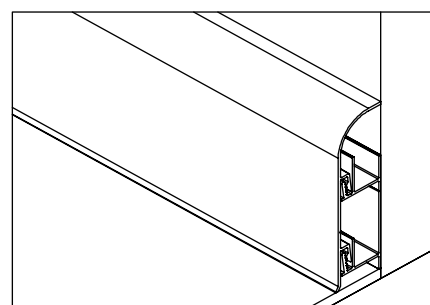


6 Make sure that the profile nails and the fixation tool's nails are completely connected to each other and be sure that the profile sole is fixed to the floor.

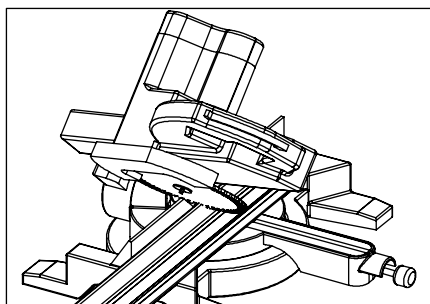


7 Cut profiles 45 degrees for external corners.

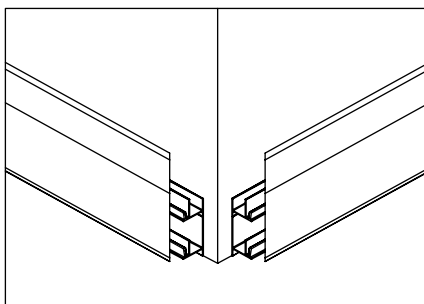


8 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

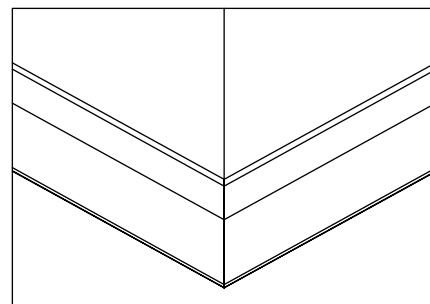


9 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

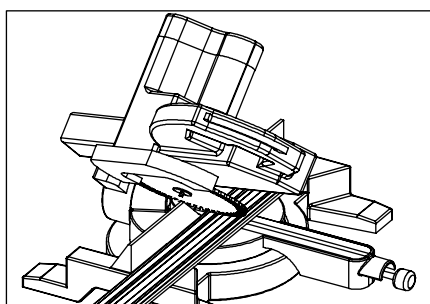

10 Cut profiles 45 degrees for internal corners.

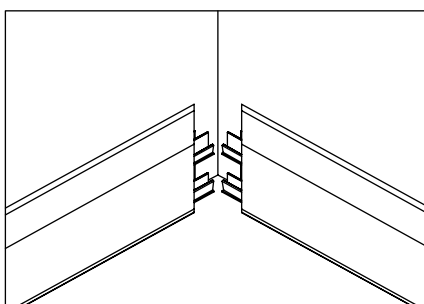

11 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

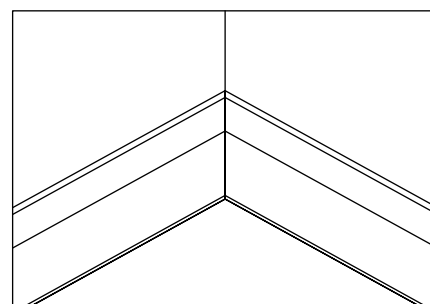

12 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.