

MOX Systems - տեխնիկական փաստաթղթեր

assembly-manual-square-fix-en.pdf

Տեխնիկական թարգմանություն. չափերի համար դիմեք բնօրինակ գծագրերին և տեղեկատու էջերին:


Աղբյուրի էջ 1

Square-Fix ASSEMBLY ՈՒՂԵՑՈՒՅՑ

- 1 Ընտրեք ճիշտ պրոֆիլը՝ ըստ սալիկի հաստության:
- 2 Կիրառեք միացում և համապատասխանաբար տեղադրեք պրոֆիլների խարիսխը:
- 3 Սեղմեք պրոֆիլը, մինչև այն ամրացվի հողի վրա:
- 4 Կիրառեք միացում այն վայրերում, որտեղ տեղադրվելու է կերամիկա:
- 5 Տեղադրեք սալիկները պրոֆիլի վրա՝ համոզվելով, որ դրանց եզրերը համապատասխանում են պրոֆիլին և հարթ են:
- 6 Կտրեք երկու պրոֆիլ 45 աստիճանով անկյունային հողերի համար:
- 7 Հավասարեցրեք պրոֆիլները անկյուններում և սեղմեք դրանք հանգույցի մեջ: 10
- 8 Տեղադրեք սալիկները պրոֆիլի վրա՝ համոզվելով, որ դրանց եզրերը համապատասխանում են պրոֆիլին և հարթ են:

Էջ 1/1


Բնօրինակ գծագրեր և տեղեկատու էջեր

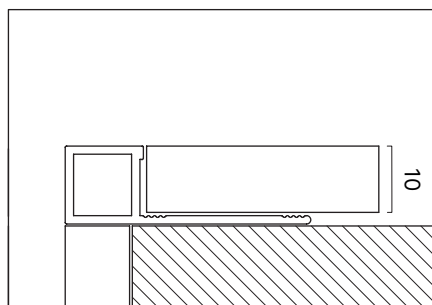


1 Pick the correct profile according to the tile thickness.




2 Apply joint and place the profiles anchor accordingly.

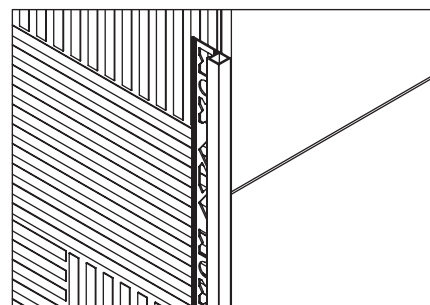


3 Press the profile until it is fixed to the joint.

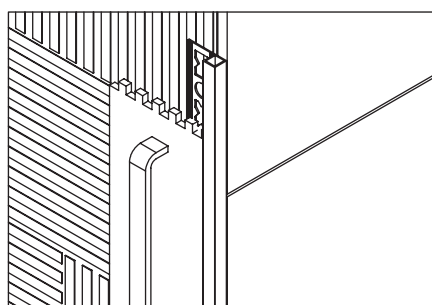


4 Apply joint to the places where the ceramics will be placed.

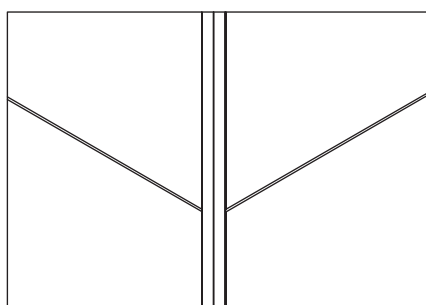


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

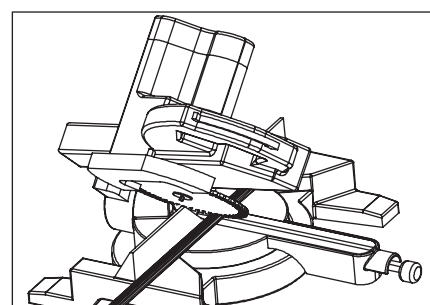

6 Cut two profiles at 45 degrees for corner joints.

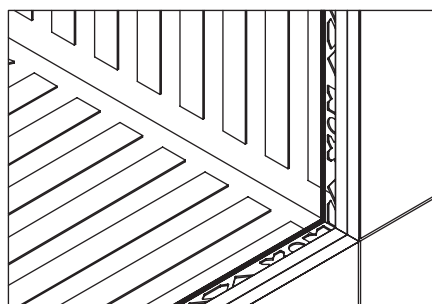

7 Align the profiles at the corners and press them into the joint.

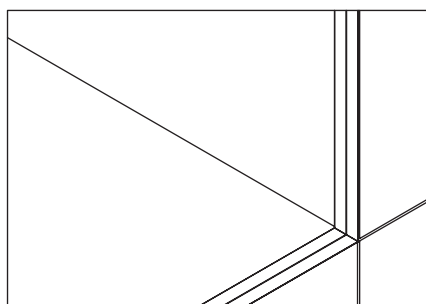

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.