

MOX Systems - տեխնիկական փաստաթղթեր

assembly-manual-visio-en.pdf

Տեխնիկական թարգմանություն. չափերի համար դիմեք բնօրինակ գծագրերին և տեղեկատու էջերին:


Աղբյուրի էջ 1

Visio ASSEMBLY ՈՒՂԵՑՈՒՅՑ


- 1 Ընտրեք ճիշտ պրոֆիլը՝ ըստ հատակի հաստության:
- 2 Կիրառեք միացում և համապատասխանաբար տեղադրեք պրոֆիլների խարիսխը:
- 3 Սեղմեք պրոֆիլը, մինչև այն ամրացվի հողի վրա:
- 4 Տեղադրեք գորգը պրոֆիլին:
- 5 Կտրեք պրոֆիլները 45 աստիճանով արտաքին անկյունների համար:
- 6 Հավասարեցրեք պրոֆիլները արտաքին անկյուններում և տեղադրեք դրանք հողի մեջ:
- 7 Տեղադրեք գորգը պրոֆիլին:
- 8 Կտրեք պրոֆիլները 45 աստիճանով ներքին անկյունների համար:
- 9 Հավասարեցրեք պրոֆիլները ներքին անկյուններում և տեղադրեք դրանք հողերի մեջ:
- 10 Տեղադրեք գորգը պրոֆիլին: 6 8

Էջ 1/1


Բնօրինակ գծագրեր և տեղեկատու էջեր

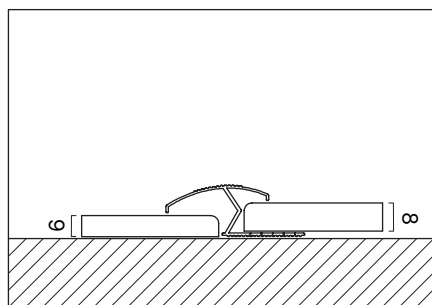


1 Pick the correct profile according to the flooring thickness.

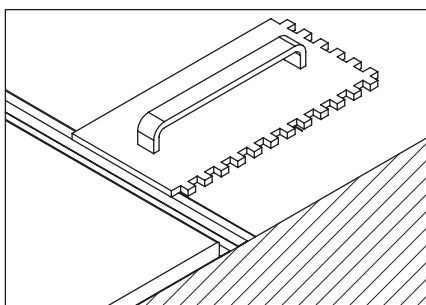


2 Apply joint and place the profiles anchor accordingly.

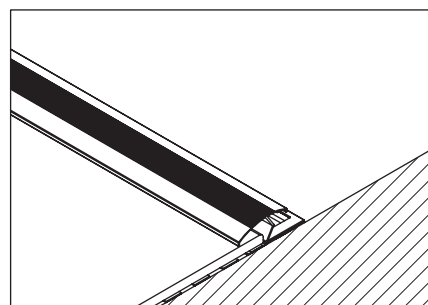


3 Press the profile until it is fixed to the joint.

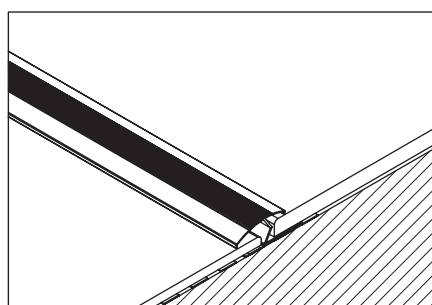


4 Place the carpet to the profile.

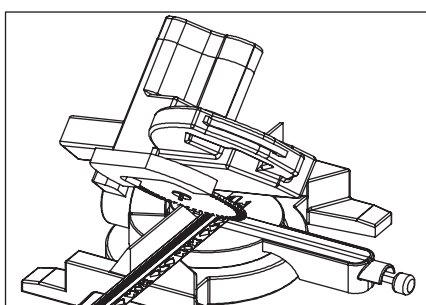


5 Cut profiles 45 degrees for external corners.

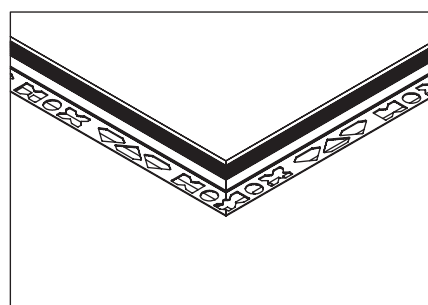


6 Align the profiles at the external corners and place them into the joint.

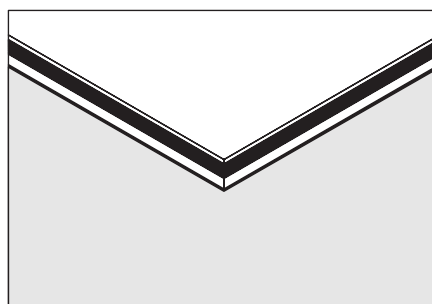


7 Place the carpet to the profile.

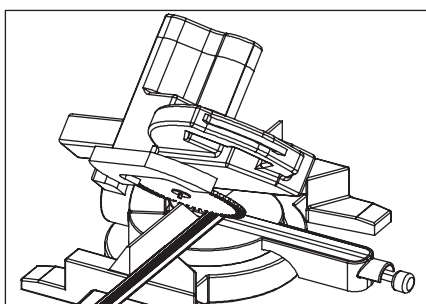

8 Cut profiles 45 degrees for internal corners.

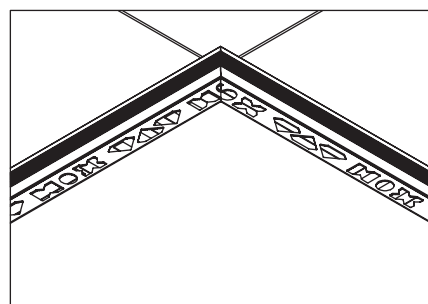

9 Align the profiles at the internal corners and place them into the joint.

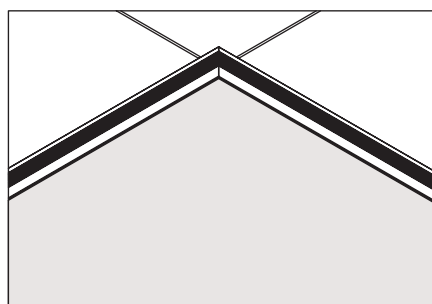

10 Place the carpet to the profile.