

MOX Systems - tækniskjöl

assembly-manual-mps-e-en.pdf

Tæknileg þýðing: skoðaðu upprunalegu teikningarnar og tilvísunarsíður fyrir mál.


Heimildasíða 1

Mps-E SAMsetningarleiðbeiningar


- 1 Veldu rétta sniðið í samræmi við gólfþykktina.
 - 2 Settu á samskeyti og settu sniðfestinguna í samræmi við það.
 - 3 Ýttu á sniðið þar til það er fest við samskeytin.
 - 4 Berið fúgu á þá staði þar sem gólfið verður sett.
 - 5 Settu og stilltu gólfið við sniðið.
 - 6 Skurð snið 45 gráður fyrir ytri horn.
- Stilltu sniðin saman við ytri hornin og þrýstu þeim inn í samskeytin.
- 8 Settu og stilltu gólfið við sniðið.
 - 9 Skurð snið 45 gráður fyrir innri horn.
 - 10 Stilltu sniðin saman við innri hornin og þrýstu þeim inn í samskeytin.
 - 11 Settu og stilltu gólfið við sniðið.

Síða 1/1


Upprunalegar teikningar og tilvísunarsíður

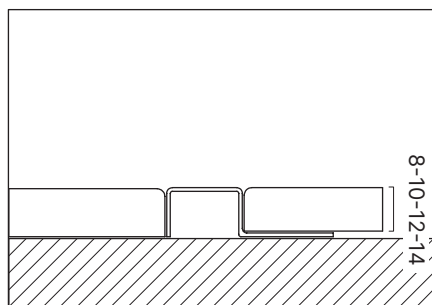


- 1 Pick the correct profile according to the flooring thickness.

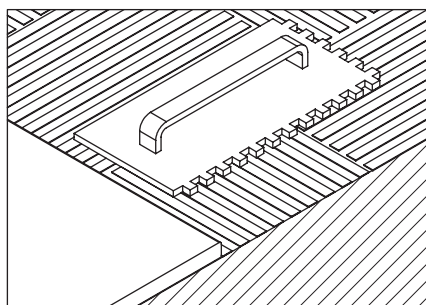


- 2 Apply joint and place the profiles anchor accordingly.

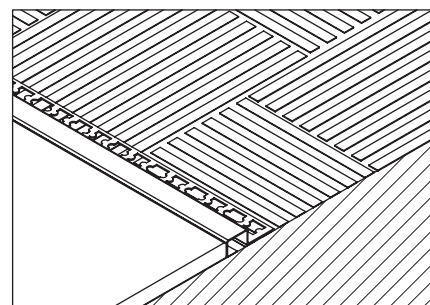


- 3 Press the profile until it is fixed to the joint.

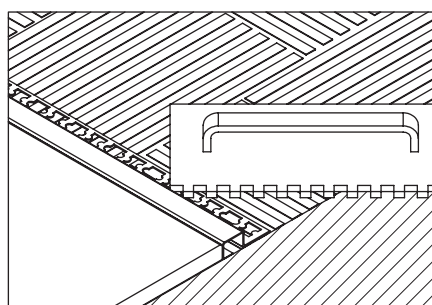


- 4 Apply joint to the places where the flooring will be placed.

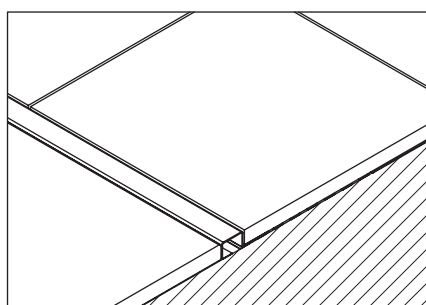


- 5 Place and align the flooring to the profile.

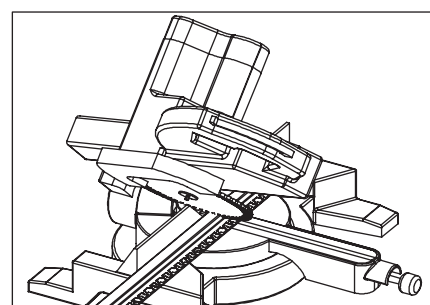


- 6 Cut profiles 45 degrees for external corners.

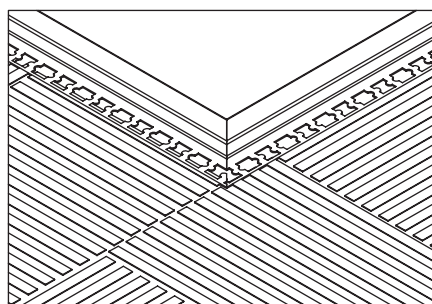


- 7 Align the profiles at the external corners and press them into the joint.

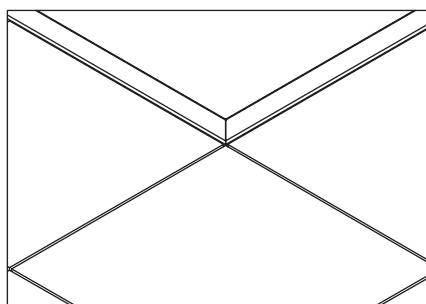


- 8 Place and align the flooring to the profile.

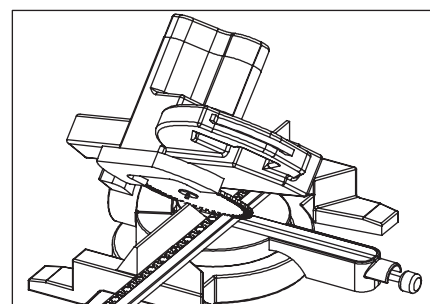

- 9 Cut profiles 45 degrees for internal corners.

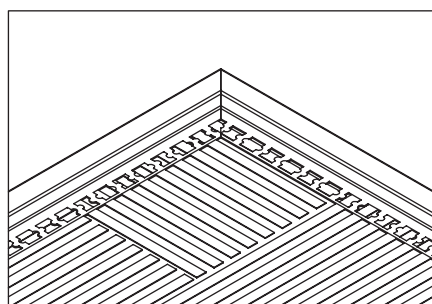

- 10 Align the profiles at the internal corners and press them into the joint.

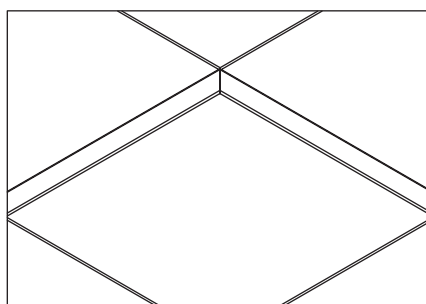

- 11 Place and align the flooring to the profile.