

MOX Systems - tækniskjöl

assembly-manual-mps-tb-en.pdf

Tæknileg þýðing: skoðaðu upprunalegu teikningarnar og tilvísunarsíður fyrir mál.

Heimildasíða 1

Mps-Tb SAMsetningarleiðbeiningar

Veldu rétta sniðið í samræmi við gólfpykkina.

2 Settu á samskeyti og settu sniðfestinguna í samræmi við það.

3 Ýttu á sniðið þar til það er fest við samskeytin.

4 Berið fúgu á þá staði þar sem gólfið verður sett.

5 Settu og stilltu gólfið við sniðið.

6 Skurð snið 45 gráður fyrir ytri horn.

Stilltu sniðin saman við ytri hornin og þrýstu þeim inn í samskeytin.

8 Settu og stilltu gólfið við sniðið.


9 Skurð snið 45 gráður fyrir innri horn.

10 Stilltu sniðin saman við innri hornin og þrýstu þeim inn í samskeytin.


11 Settu og stilltu gólfið við sniðið.

Síða 1/1


Upprunalegar teikningar og tilvísunarsíður

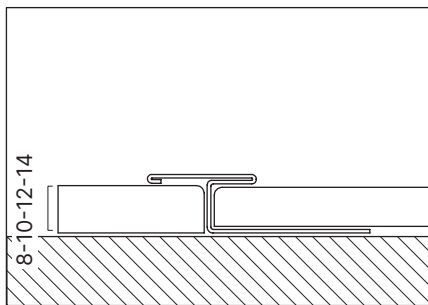


1 Pick the correct profile according to the flooring thickness.

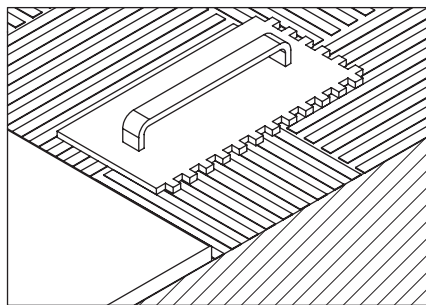


2 Apply joint and place the profiles anchor accordingly.

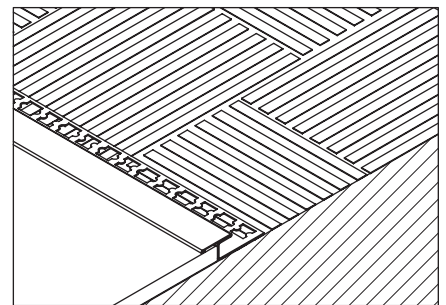


3 Press the profile until it is fixed to the joint.

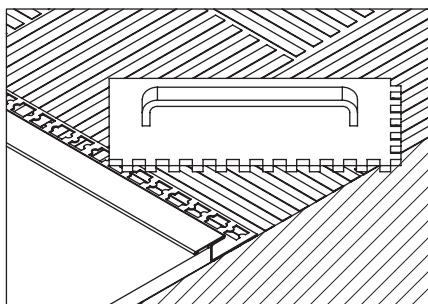


4 Apply joint to the places where the flooring will be placed.

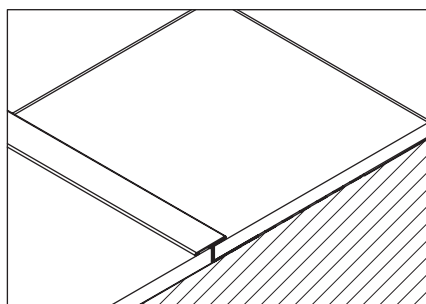


5 Place and align the flooring to the profile.

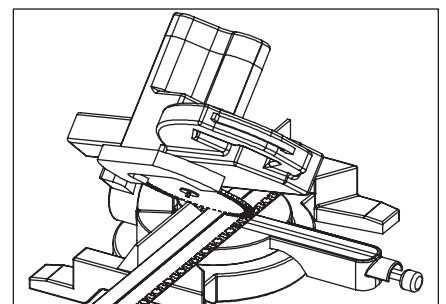


6 Cut profiles 45 degrees for external corners.

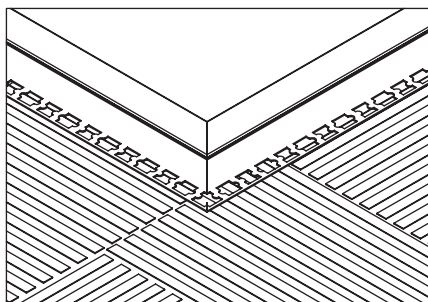


7 Align the profiles at the external corners and press them into the joint.

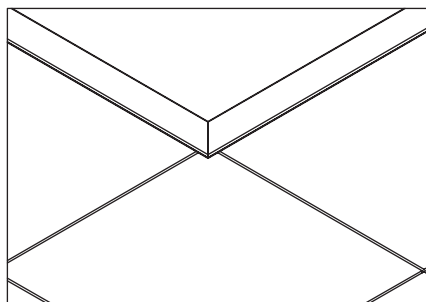


8 Place and align the flooring to the profile.

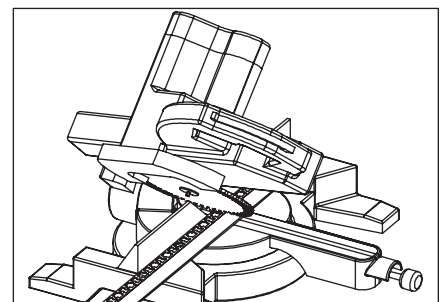

9 Cut profiles 45 degrees for internal corners.

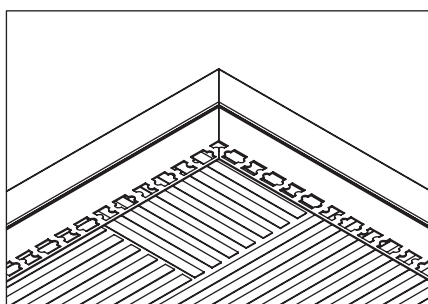

10 Align the profiles at the internal corners and press them into the joint.

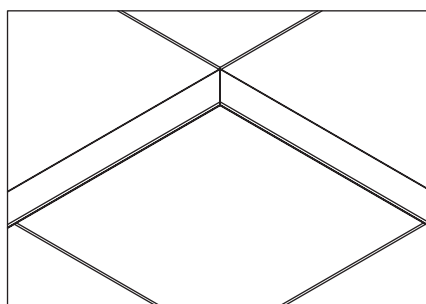

11 Place and align the flooring to the profile.