

MOX Systems - tækniskjöl

assembly-manual-revio-en.pdf

Tæknileg þýðing: skoðaðu upprunalegu teikningarnar og tilvísunarsíður fyrir mál.

Heimildasíða 1

Revio SAMsetningarleiðbeiningar

Notkun með lími

1 Berið sílikon eða samskeyti á sniðið.

2 Festu sniðið við gólfið og ýttu á það.

3 Settu teppið á sniðið.

Umsókn með skúfu

11 Festu sniðið með skúfum.

2 Settu teppið á sniðið.

Köşe Birleşimleri

1 Skerið snið 45 gráður fyrir innri horn.

2 Stilltu sniðin saman við innri hornin og settu þau í samskeytin.

3 Settu teppið á sniðið.


4 Skurð snið 45 gráður fyrir ytri horn.

5 Stilltu sniðin saman við ytri hornin og settu þau í samskeytin.


6 Settu teppið á sniðið.

Upprunalegar teikningar og tilvísunarsíður


Application with Adhesive

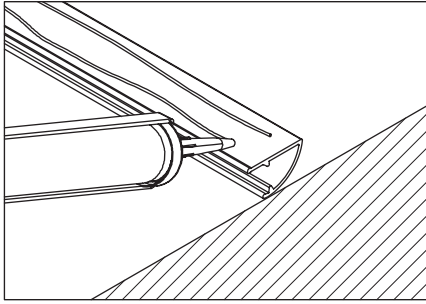

1 Apply silicone or joint to the profile.

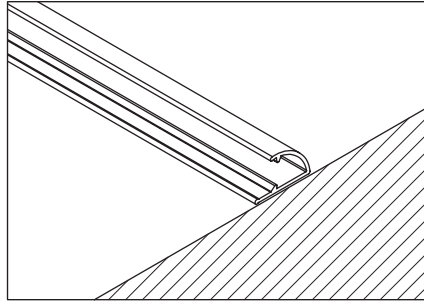


2 Fix the profile to the floor and press it.

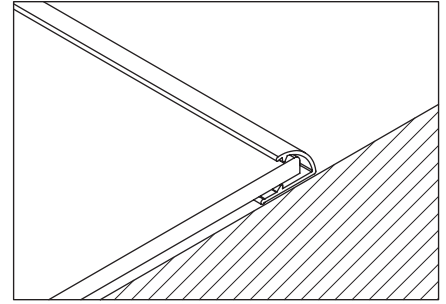


3 Place the carpet to the profile.

Application with Screw

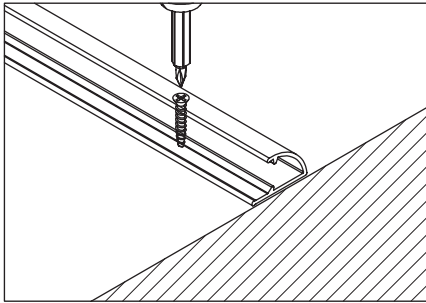


1 Fix the profile with screws.

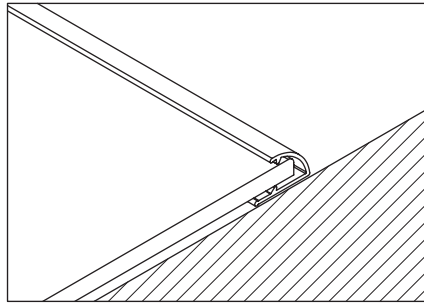


2 Place the carpet to the profile.


Köşe Birleşimleri

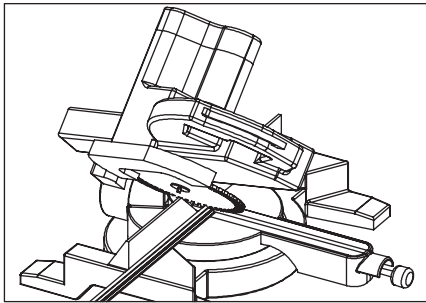


1 Cut profiles 45 degrees for internal corners.

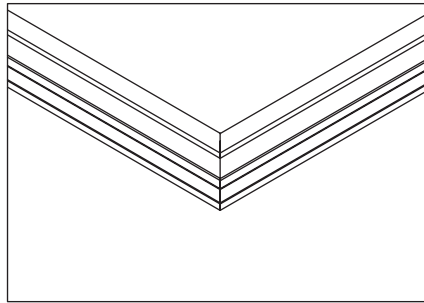


2 Align the profiles at the internal corners and place them into the joint.

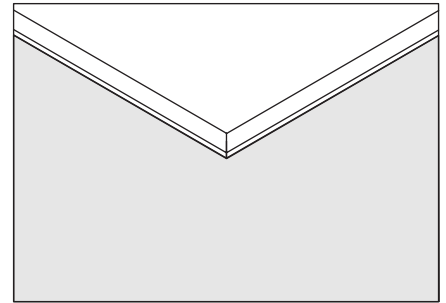


3 Place the carpet to the profile.

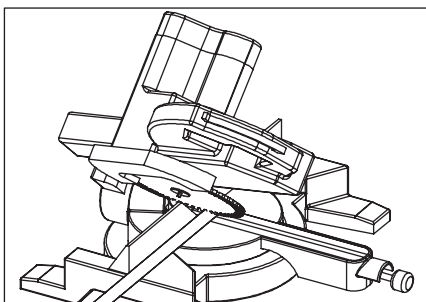

4 Cut profiles 45 degrees for external corners.

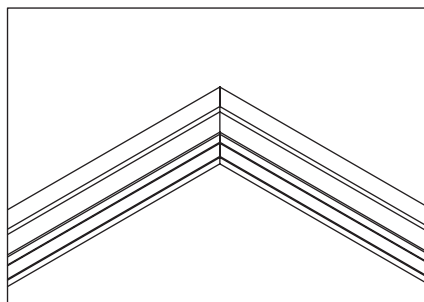

5 Align the profiles at the external corners and place them into the joint.

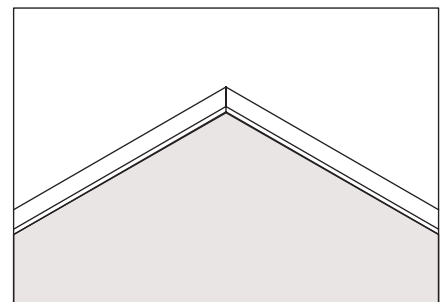

6 Place the carpet to the profile.