

MOX Systems - tækniskjöl

assembly-manual-visio-en.pdf

Tæknileg þýðing: skoðaðu upprunalegu teikningarnar og tilvísunarsíður fyrir mál.


Heimildasíða 1

Visio SAMsetningarleiðbeiningar


- 1 Veldu rétta sniðið í samræmi við gólfpykktina.
- 2 Settu á samskeyti og settu sniðfestinguna í samræmi við það.
- 3 Ýttu á sniðið þar til það er fest við samskeytin.
- 4 Settu teppið á sniðið.
- 5 Skurð snið 45 gráður fyrir ytri horn.
- 6 Stilltu sniðin saman við ytri hornin og settu þau í samskeytin.
- 7 Settu teppið á sniðið.
- 8 Skurð snið 45 gráður fyrir innri horn.
- 9 Stilltu sniðin saman við innri hornin og settu þau í samskeytin.
- 10 Settu teppið á sniðið. 6 8

Síða 1/1


Upprunalegar teikningar og tilvísunarsíður

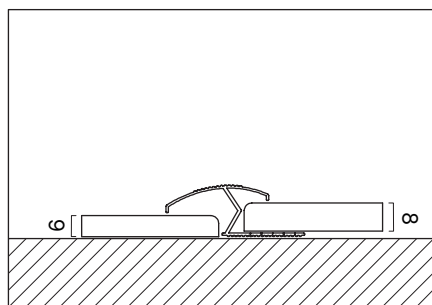


1 Pick the correct profile according to the flooring thickness.

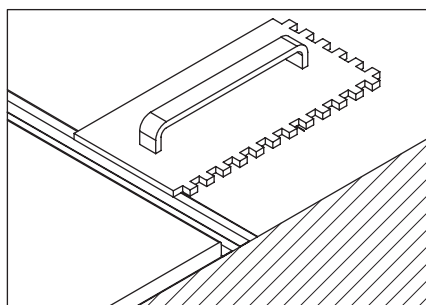


2 Apply joint and place the profiles anchor accordingly.

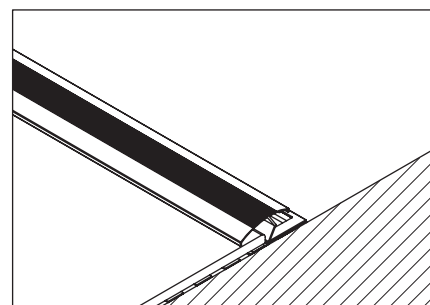


3 Press the profile until it is fixed to the joint.

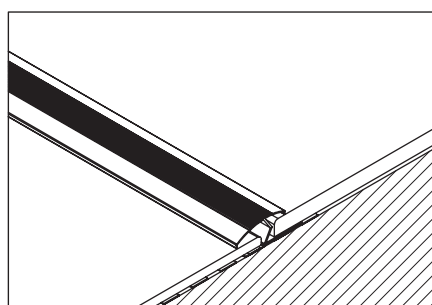


4 Place the carpet to the profile.

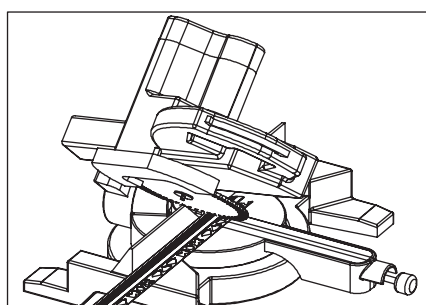


5 Cut profiles 45 degrees for external corners.

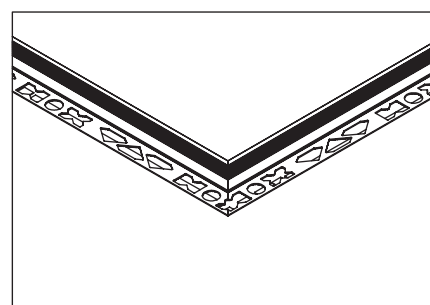


6 Align the profiles at the external corners and place them into the joint.

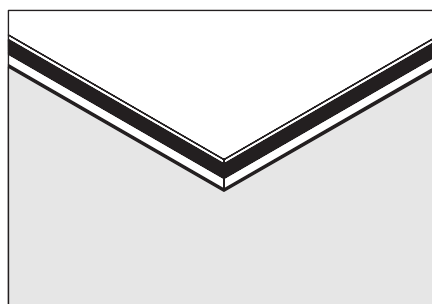


7 Place the carpet to the profile.

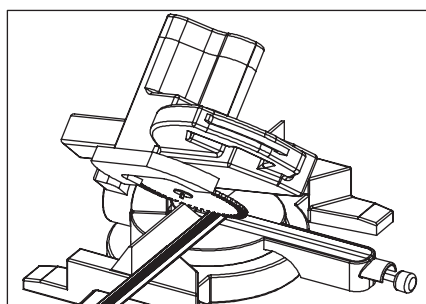

8 Cut profiles 45 degrees for internal corners.

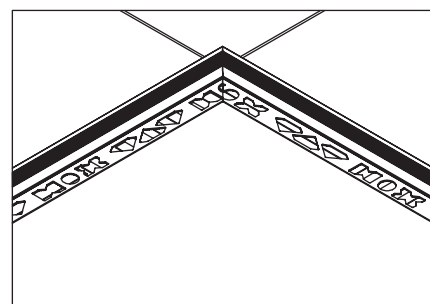

9 Align the profiles at the internal corners and place them into the joint.

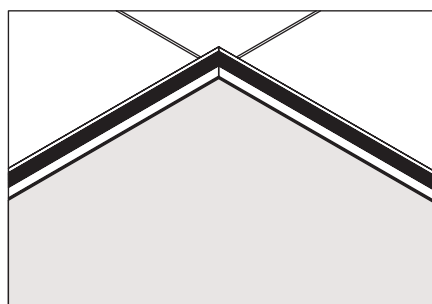

10 Place the carpet to the profile.