

Sistemi MOX - documentazione tecnica

assembly-manual-mps-yd-en.pdf

Traduzione tecnica: consultare i disegni originali e le pagine di riferimento per le dimensioni.

Pagina di origine 1

GUIDA AL MONTAGGIO MPS-YD

Scegli il profilo corretto in base allo spessore del pavimento.

2 Applicare il giunto e posizionare gli ancoraggi dei profili di conseguenza.

3 Premere il profilo fino al fissaggio al giunto.

4 Applicare il giunto nei punti in cui verrà posizionata la pavimentazione.

5 Posizionare e allineare il pavimento al profilo.


6 Tagliare i profili a 45 gradi per gli angoli.

7 Allineare i profili agli angoli e premerli nel giunto. 41-21-01-8


8 Posizionare e allineare la pavimentazione al profilo.

Pagina 1/1


Disegni originali e pagine di riferimento

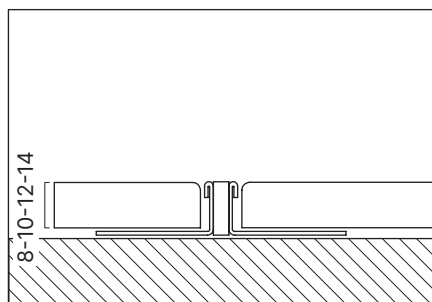


1 Pick the correct profile according to the flooring thickness.

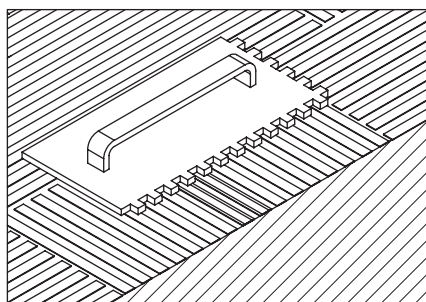


2 Apply joint and place the profiles anchor accordingly.

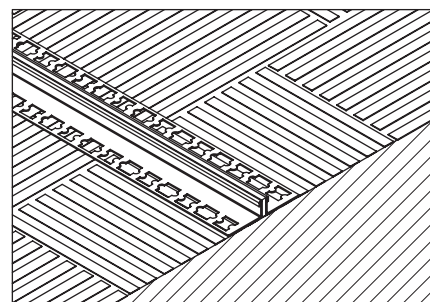


3 Press the profile until it is fixed to the joint.

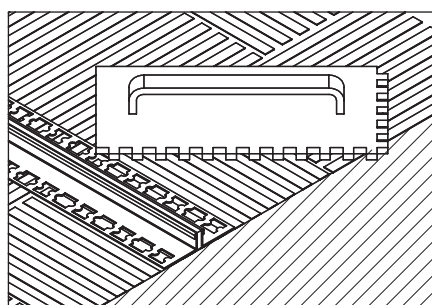


4 Apply joint to the places where the flooring will be placed.

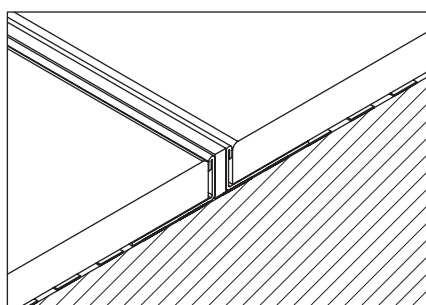


5 Place and align the flooring to the profile.

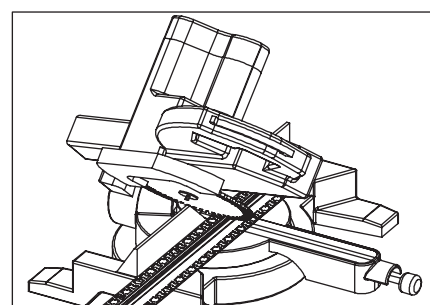

6 Cut profiles 45 degrees for corners.

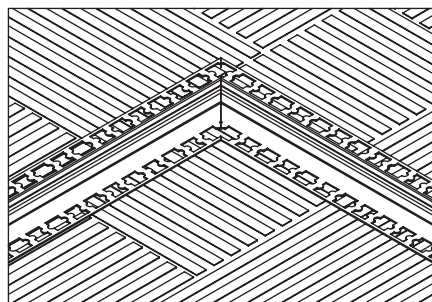

7 Align the profiles at the corners and press them into the joint.

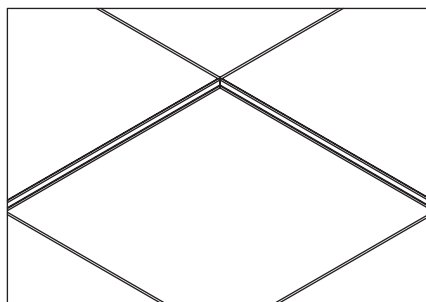

8 Place and align the flooring to the profile.