

Sistemi MOX - documentazione tecnica

assembly-manual-revio-en.pdf

Traduzione tecnica: consultare i disegni originali e le pagine di riferimento per le dimensioni.

Pagina di origine 1

GUIDA AL MONTAGGIO Revio

Applicazione con adesivo

- 1 Applicare silicone o giunto al profilo.
- 2 Fissare il profilo al pavimento e pressarlo.
- 3 Posizionare il tappeto sul profilo.

Applicazione con Vite


- 11 Fissare il profilo con le viti.
- 2 Posizionare il tappeto sul profilo.

Köşe Birleşimleri


- 1 Tagliare i profili a 45 gradi per gli angoli interni.
- 2 Allineare i profili agli angoli interni e posizzionarli nel giunto.
- 3 Posizionare il tappeto sul profilo.
- 4 Profili tagliati a 45 gradi per angoli esterni.
- 5 Allineare i profili agli angoli esterni e posizzionarli nel giunto.
- 6 Posizionare il tappeto sul profilo.

Disegni originali e pagine di riferimento


Application with Adhesive

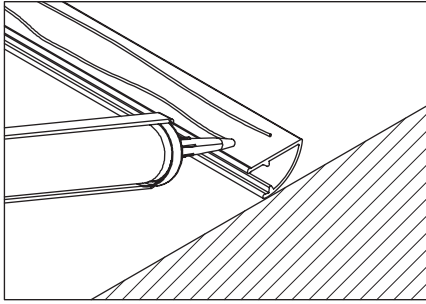

1 Apply silicone or joint to the profile.

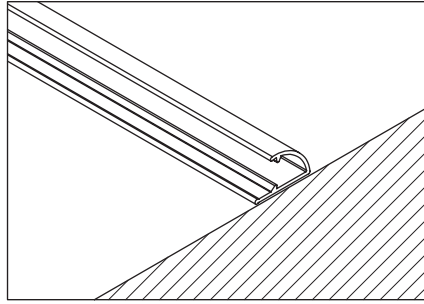


2 Fix the profile to the floor and press it.

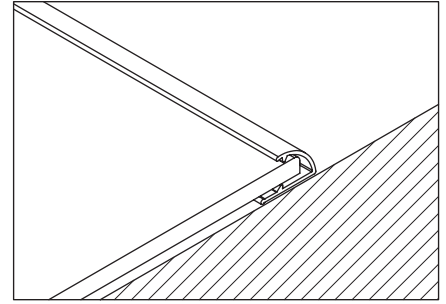


3 Place the carpet to the profile.

Application with Screw

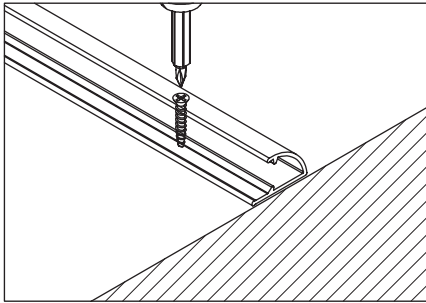


1 Fix the profile with screws.

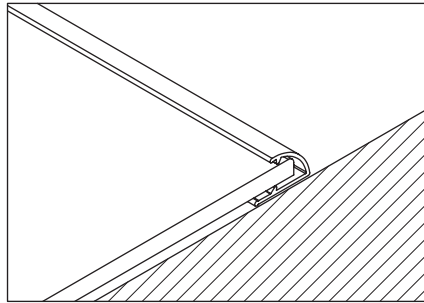


2 Place the carpet to the profile.


Köşe Birleşimleri

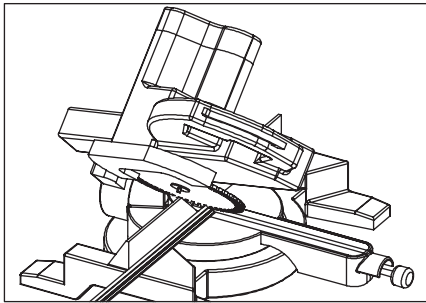


1 Cut profiles 45 degrees for internal corners.

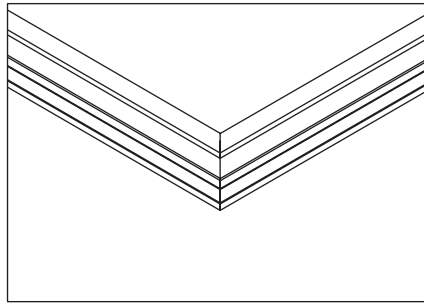


2 Align the profiles at the internal corners and place them into the joint.

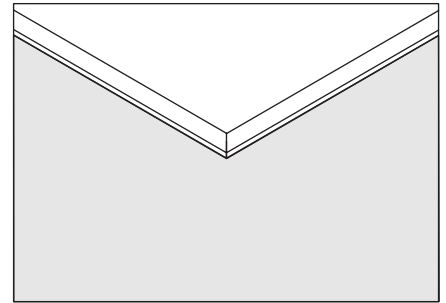


3 Place the carpet to the profile.

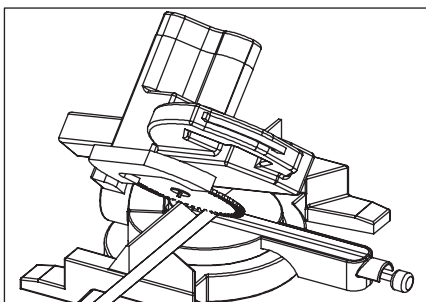

4 Cut profiles 45 degrees for external corners.

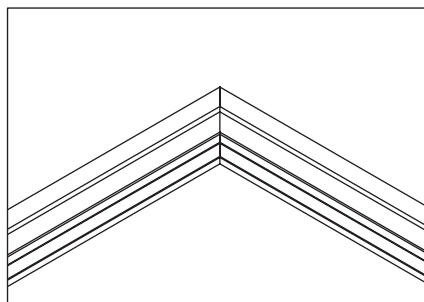

5 Align the profiles at the external corners and place them into the joint.

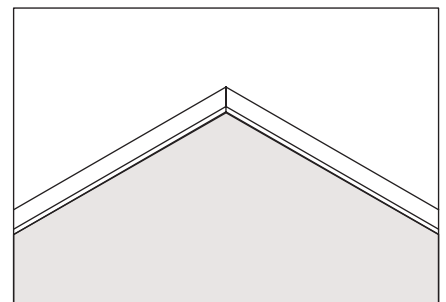

6 Place the carpet to the profile.