

# Sistemi MOX - documentazione tecnica

assembly-manual-velo-en.pdf

Traduzione tecnica: consultare i disegni originali e le pagine di riferimento per le dimensioni.


## Pagina di origine 1

### GUIDA AL MONTAGGIO Velo


- 1 Comprimere il silicone formando due linee sul lato posteriore del profilo.
- 2 Incolla il profilo che hai spremuto con il silicone sulla parete e premi.
- 3 Nastro adesivo il profilo che hai incollato al muro a intervalli di 50 cm.
- 4 Rimuovere con attenzione le bande che si trovano sul profilo il giorno successivo.
- 5 Assicurarsi che il profilo sia saldamente incollato al muro.
- 6 Profili tagliati a 45 gradi per angoli esterni.
- 7 Incolla i profili che hai tagliato a 45 gradi al muro in modo che risultino chiusi tra loro.
- 8 Assicurarsi che i profili tagliati a 45 gradi siano completamente fissati tra loro in corrispondenza degli angoli esterni.
- 9 Profili tagliati a 45 gradi per angoli interni.
- 10 Incolla i profili che hai tagliato a 45 gradi alla parete in modo che risultino chiusi tra loro.
- 11 Assicurarsi che i profili tagliati a 45 gradi siano completamente fissati tra loro in corrispondenza degli angoli interni.

Pagina 1/1


## Disegni originali e pagine di riferimento

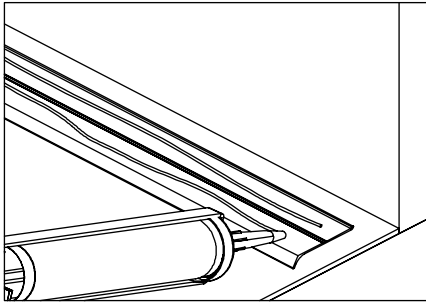


**1** Squeeze the silicon in the manner of two lines to the back side of the profile.

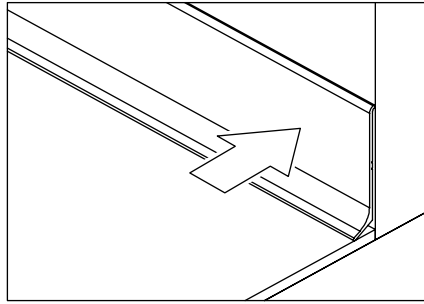


**2** Paste the profile that you squeezed the silicon to the wall and press.

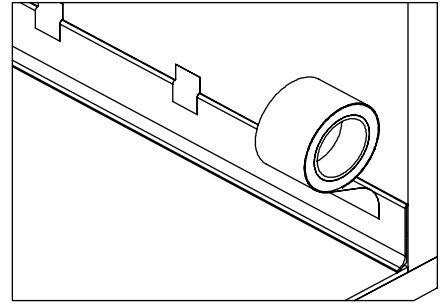


**3** Tape the profile that you pasted to the wall at 50cm intervals.

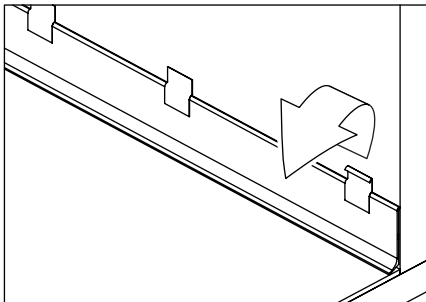


**4** Remove the bands that on the profile heedfully the day after.

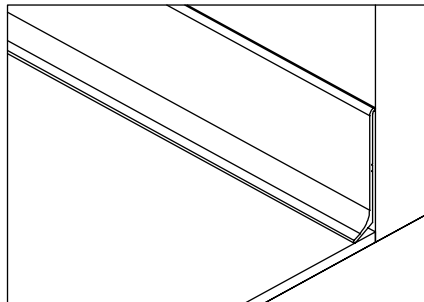


**5** Make sure that the profile is stuck to the wall firmly.

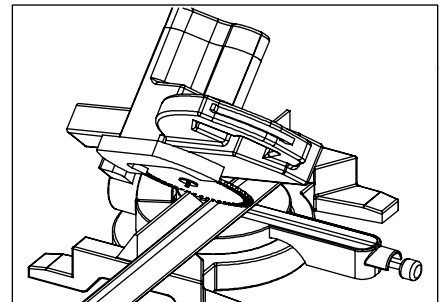


**6** Cut profiles 45 degrees for external corners.

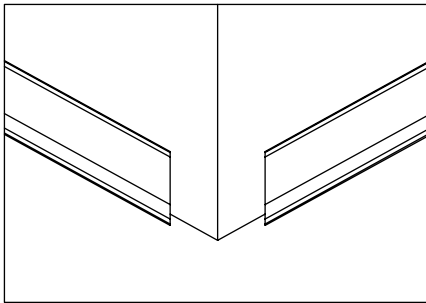


**7** Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

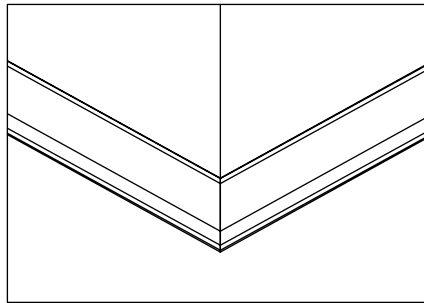


**8** Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

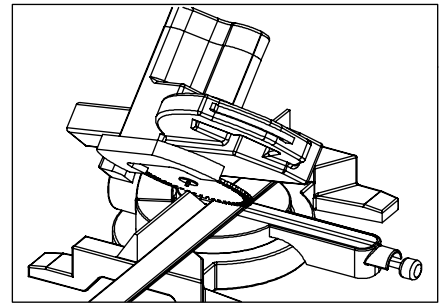

**9** Cut profiles 45 degrees for internal corners.

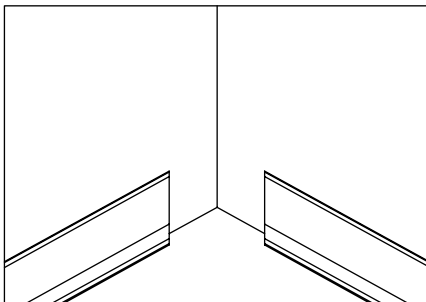

**10** Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

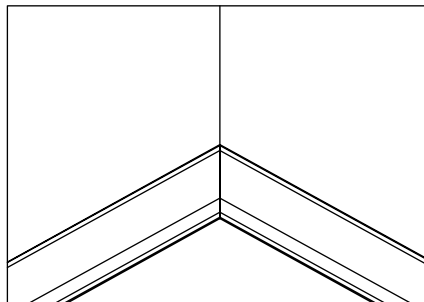

**11** Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.