

# Sistemi MOX - documentazione tecnica

assembly-manual-visio-en.pdf

Traduzione tecnica: consultare i disegni originali e le pagine di riferimento per le dimensioni.


## Pagina di origine 1

### GUIDA AL MONTAGGIO DI Visio


- 1 Scegli il profilo corretto in base allo spessore del pavimento.
- 2 Applicare il giunto e posizionare gli ancoraggi dei profili di conseguenza.
- 3 Premere il profilo fino al fissaggio al giunto.
- 4 Posizionare il tappeto sul profilo.
- 5 Profili tagliati a 45 gradi per angoli esterni.
- 6 Allineare i profili agli angoli esterni e posizzionarli nel giunto.
- 7 Posizionare il tappeto sul profilo.
- 8 Profili tagliati a 45 gradi per angoli interni.
- 9 Allineare i profili agli angoli interni e posizzionarli nel giunto.
- 10 Posizionare la moquette sul profilo. 6 8

Pagina 1/1


## Disegni originali e pagine di riferimento

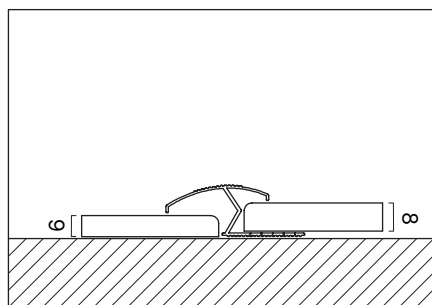


**1** Pick the correct profile according to the flooring thickness.

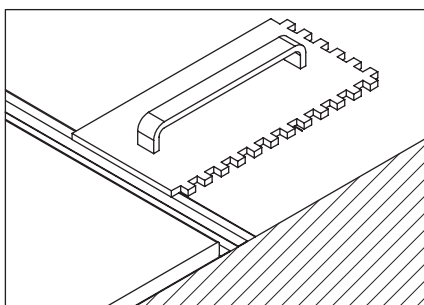


**2** Apply joint and place the profiles anchor accordingly.

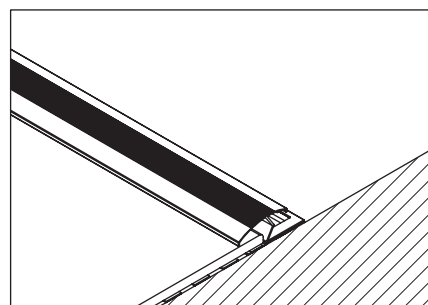


**3** Press the profile until it is fixed to the joint.

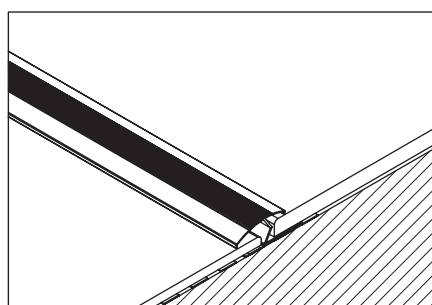


**4** Place the carpet to the profile.

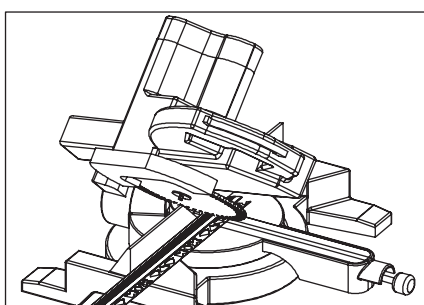


**5** Cut profiles 45 degrees for external corners.

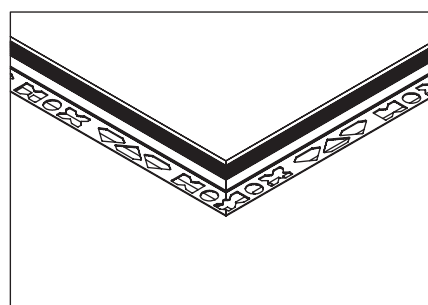


**6** Align the profiles at the external corners and place them into the joint.

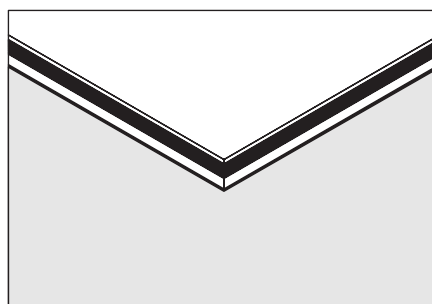


**7** Place the carpet to the profile.

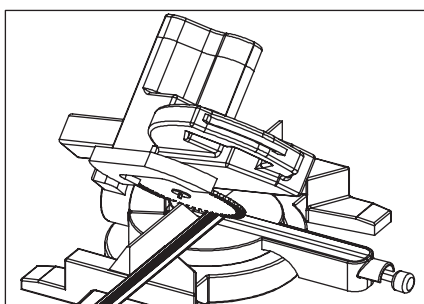

**8** Cut profiles 45 degrees for internal corners.

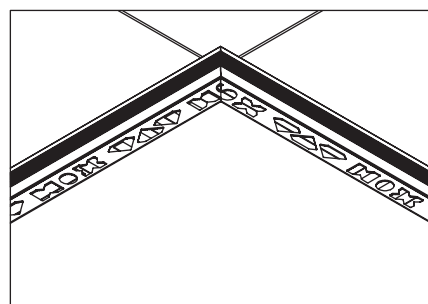

**9** Align the profiles at the internal corners and place them into the joint.

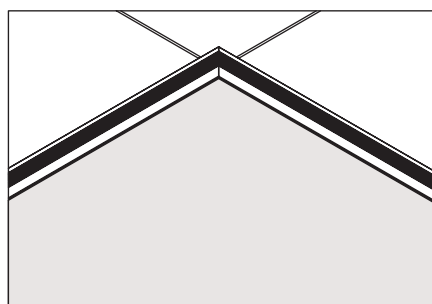

**10** Place the carpet to the profile.