

MOX Systems - ტექნიკური დოკუმენტაცია

assembly-manual-mps-e-en.pdf

ტექნიკური თარგმანი: განზომილებისთვის გაეცანით ორიგინალურ ნახატებს და საცნობარო გვერდებს.


წყაროს გვერდი 1

Mps-E ASSEMBLY GUIDE


- 1 შეარჩიეთ სწორი პროფილი იატაკის სისქის მიხედვით.
- 2 დაიტანეთ სახსარი და შესაბამისად მოათავსეთ პროფილების სამაგრი.
- 3 დააჭირეთ პროფილს სახსარზე დამაგრებამდე.
- 4 დაიტანეთ სახსარი იმ ადგილებში, სადაც იატაკი დაიდება.
- 5 მოათავსეთ და გაასწორეთ იატაკი პროფილთან.
- 6 პროფილების გაჭრა 45 გრადუსით გარე კუთხეებისთვის.
- გაასწორეთ პროფილები გარე კუთხეებში და დააჭირეთ მათ სახსარში.
- 8 მოათავსეთ და გაასწორეთ იატაკი პროფილთან.
- 9 დაჭერით პროფილები 45 გრადუსით შიდა კუთხეებისთვის.
- 10 გაასწორეთ პროფილები შიდა კუთხეებში და დააწეწით სახსარში.
- 11 მოათავსეთ და გაასწორეთ იატაკი პროფილთან.

გვერდი 1/1


ორიგინალური ნახატები და საცნობარო გვერდები

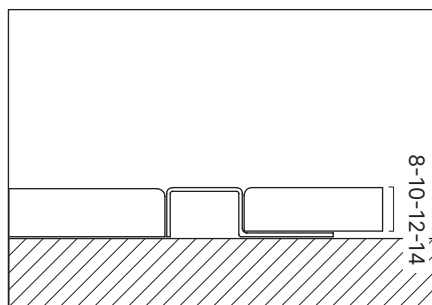


- 1** Pick the correct profile according to the flooring thickness.

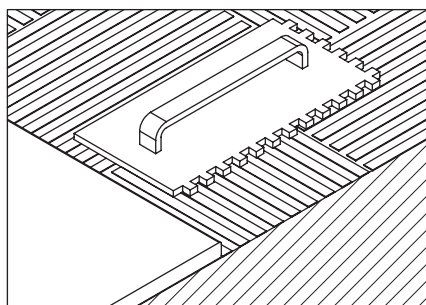


- 2** Apply joint and place the profiles anchor accordingly.

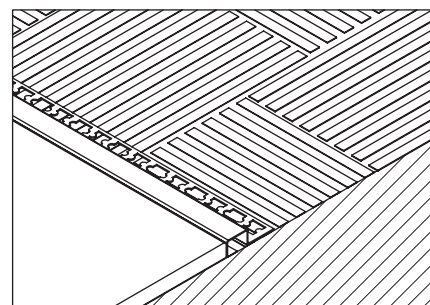


- 3** Press the profile until it is fixed to the joint.

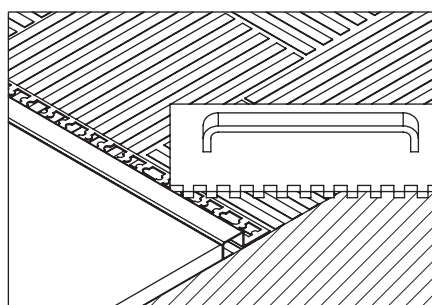


- 4** Apply joint to the places where the flooring will be placed.

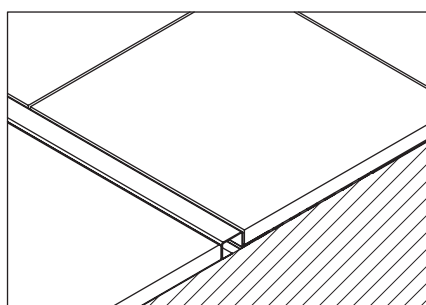


- 5** Place and align the flooring to the profile.

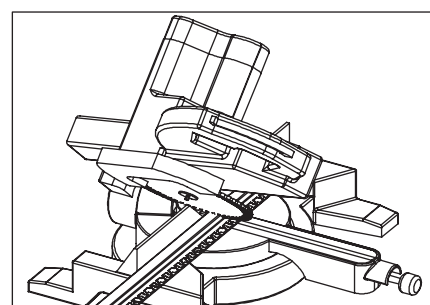


- 6** Cut profiles 45 degrees for external corners.

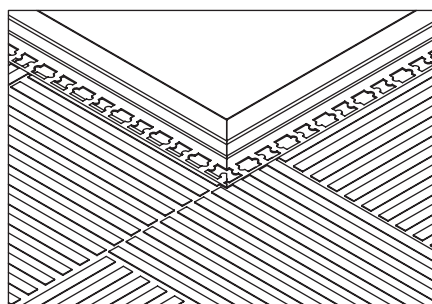


- 7** Align the profiles at the external corners and press them into the joint.

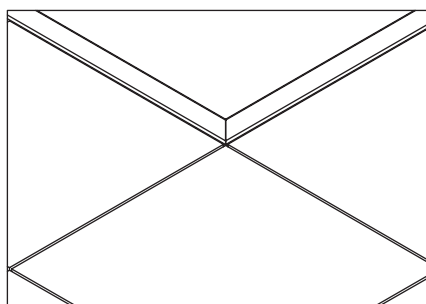


- 8** Place and align the flooring to the profile.

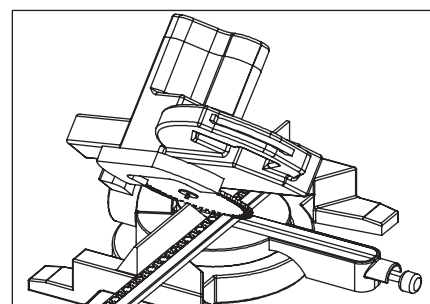

- 9** Cut profiles 45 degrees for internal corners.

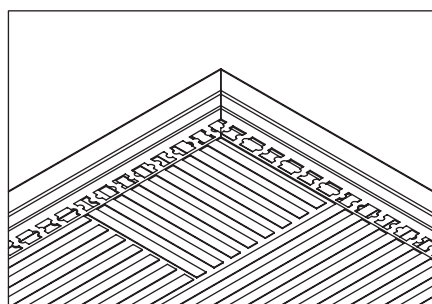

- 10** Align the profiles at the internal corners and press them into the joint.

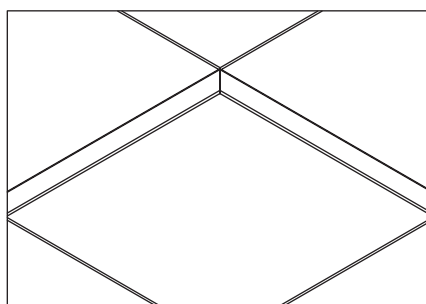

- 11** Place and align the flooring to the profile.