

MOX Systems - ტექნიკური დოკუმენტაცია

assembly-manual-mps-s-en.pdf

ტექნიკური თარგმანი: განზომილებისთვის გაეცანით ორიგინალურ ნახატებს და საცნობარო გვერდებს.

წყაროს გვერდი 1

Mps-S ASSEMBLY GUIDE

აირჩიეთ სწორი პროფილი კერამიკის სისქის მიხედვით.

2 დაიტანეთ სახსარი და შესაბამისად მოათავსეთ პროფილების სამაგრი.

3 დააჭირეთ პროფილს სახსარზე დამაგრებამდე.

დაიტანეთ სახსარი იმ ადგილებში, სადაც კერამიკა განთავსდება.

5 მოათავსეთ და გაასწორეთ კერამიკა პროფილზე.

6 პროფილების გაჭრა 45 გრადუსით გარე კუთხეებისთვის.

გაასწორეთ პროფილები გარე კუთხეებში და დააჭირეთ მათ სახსარში.

8 მოათავსეთ და გაასწორეთ კერამიკა პროფილზე.


9 დაჭერით პროფილები 45 გრადუსით შიდა კუთხეებისთვის.

10 გაასწორეთ პროფილები შიდა კუთხეებში და დააწეით სახსარში.


11 მოათავსეთ და გაასწორეთ კერამიკა პროფილზე.

გვერდი 1/1


ორიგინალური ნახატები და საცნობარო გვერდები

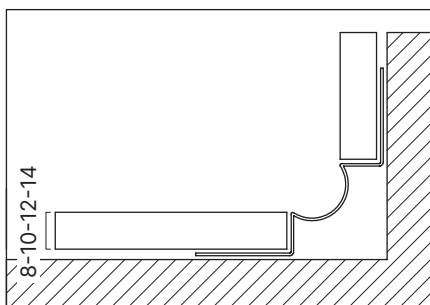


1 Pick the correct profile according to the tile thickness.

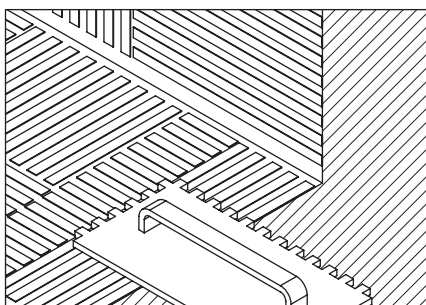


2 Apply joint and place the profiles anchor accordingly.

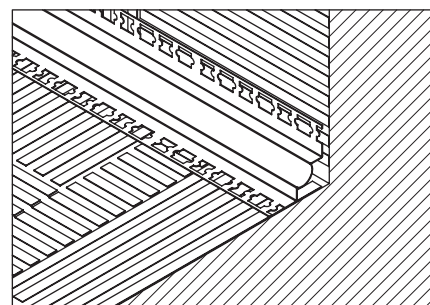


3 Press the profile until it is fixed to the joint.

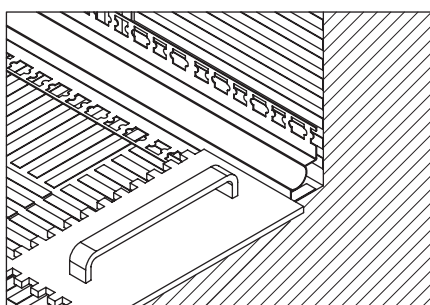


4 Apply joint to the places where the ceramics will be placed.

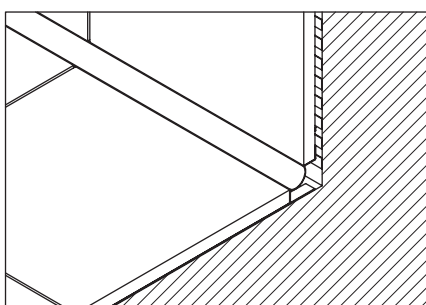


5 Place and align the ceramics to the profile.

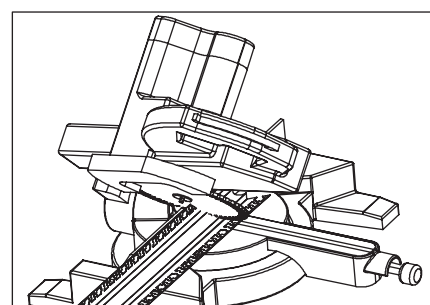


6 Cut profiles 45 degrees for external corners.

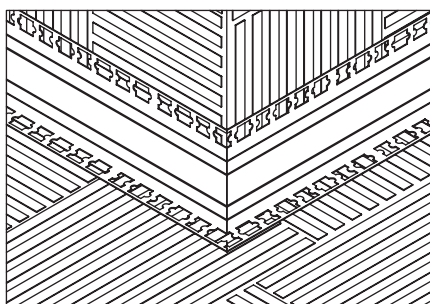


7 Align the profiles at the external corners and press them into the joint.

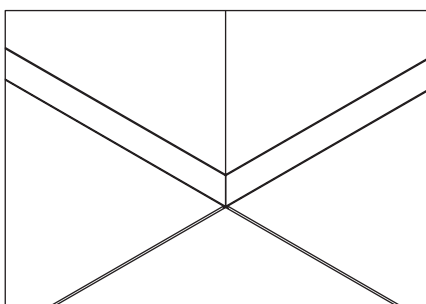


8 Place and align the ceramics to the profile.

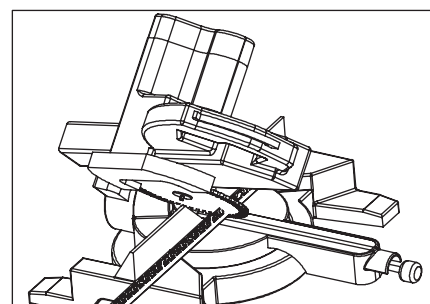

9 Cut profiles 45 degrees for internal corners.

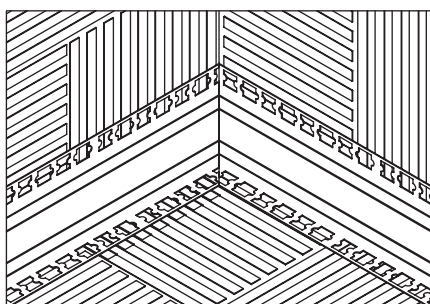

10 Align the profiles at the internal corners and press them into the joint.

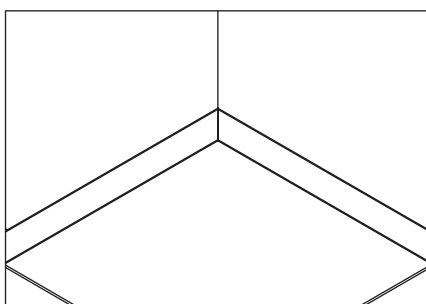

11 Place and align the ceramics to the profile.