

MOX Systems - ტექნიკური დოკუმენტაცია

assembly-manual-revio-en.pdf

ტექნიკური თარგმანი: განზომილებისთვის გაეცანით ორიგინალურ ნახატებს და საცნობარო გვერდებს.

წყაროს გვერდი 1

Revio ასამბლეის სახელმძღვანელო

გამოყენება წებოთი

- 1 პროფილზე წაისვით სილიკონი ან სახსარი.
- 2 დააფიქსირეთ პროფილი იატაკზე და დააჭირეთ მას.
- 3 მოათავსეთ ხალიჩა პროფილზე.

აპლიკაცია ხრახნით


- 11 დააფიქსირეთ პროფილი ხრახნებით.
- 2 მოათავსეთ ხალიჩა პროფილზე.

კოშე ბირლეშიმლერი


- 1 შიდა კუთხეებისთვის პროფილები 45 გრადუსით გაჭერით.
- 2 გაასწორეთ პროფილები შიდა კუთხეებში და მოათავსეთ ისინი სახსარში.
- 3 მოათავსეთ ხალიჩა პროფილზე.
- 4 პროფილების გაჭრა 45 გრადუსით გარე კუთხეებისთვის.
- 5 გაასწორეთ პროფილები გარე კუთხეებში და მოათავსეთ ისინი სახსარში.
- 6 მოათავსეთ ხალიჩა პროფილზე.

ორიგინალური ნახატები და საცნობარო გვერდები


Application with Adhesive

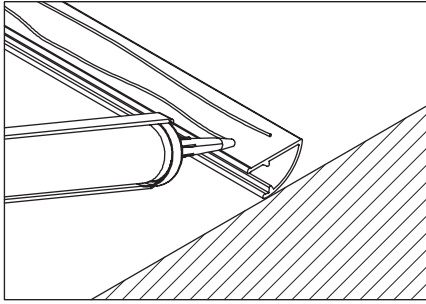

1 Apply silicone or joint to the profile.

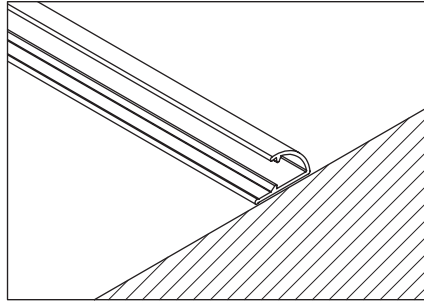


2 Fix the profile to the floor and press it.

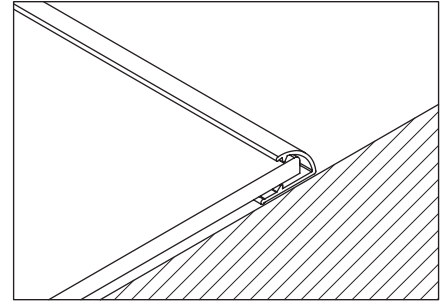


3 Place the carpet to the profile.

Application with Screw

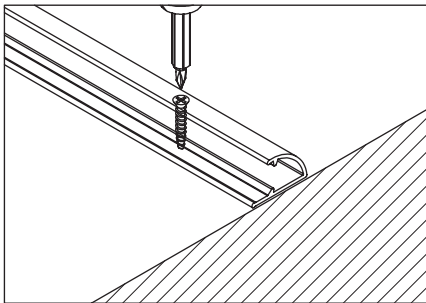


1 Fix the profile with screws.

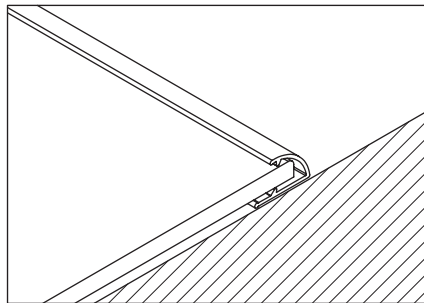


2 Place the carpet to the profile.


Köşe Birleşimleri

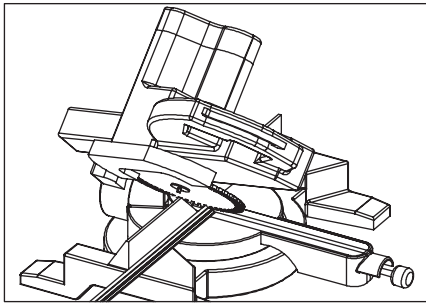


1 Cut profiles 45 degrees for internal corners.

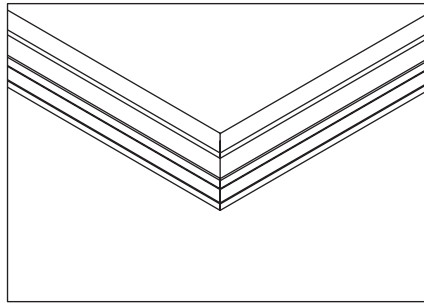


2 Align the profiles at the internal corners and place them into the joint.

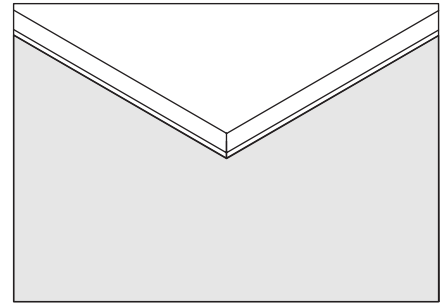


3 Place the carpet to the profile.

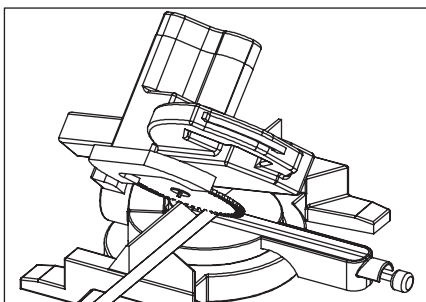

4 Cut profiles 45 degrees for external corners.

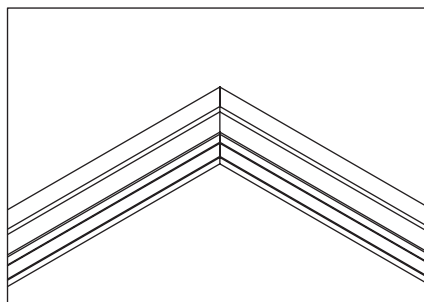

5 Align the profiles at the external corners and place them into the joint.

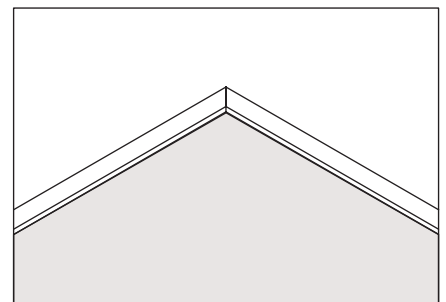

6 Place the carpet to the profile.