

MOX Systems - ტექნიკური დოკუმენტაცია

assembly-manual-sentio-en.pdf

ტექნიკური თარგმანი: განზომილებისთვის გაეცანით ორიგინალურ ნახატებს და საცნობარო გვერდებს.

წყაროს გვერდი 1

Sentio ასამბლეის გზამკვლევი

1 მოათავსეთ კედლის ფიქსაციის ხელსაწყოები 50 სმ ინტერვალით და მონიშნეთ კედელი ხრახნიანი ხვრელებისგან.

2 გაბურღეთ ის პუნქტები, რომლებიც უკვე მონიშნეთ.

3 გაბურღულ ნახვრეტებში მოათავსეთ სწორი დუელები კედლის მასალის მიხედვით.

4 კედლის ფიქსაციის ხელსაწყოები 50 სმ ინტერვალით გაბურღულ ადგილებზე გადაახვიეთ.

5 აკრიფეთ პროფილი კედლის ფიქსაციის ხელსაწყოებზე ისევე, როგორც სურათზე.

6 დარწმუნდით, რომ პროფილის ლურსმნები და ფიქსაციის ხელსაწყო ლურსმნები მთლიანად ერთმანეთთან არის დაკავშირებული და დარწმუნდით, რომ პროფილის ძირი დამაგრებულია იატაკზე.

7 გარე კუთხეებისთვის პროფილების გაჭრა 45 გრადუსით.

8 დაამაგრეთ კედლის დასამაგრებელი ხელსაწყოები ისე, რომ დახურული იქნება კუთხეებთან და აკრიფეთ მასზე 45 გრადუსით მოჭრილი პროფილები.

9 დარწმუნდით, რომ 45 გრადუსით მოჭრილი პროფილები ერთმანეთთან მთლიანად ფიქსირდება გარე კუთხეებში.


10 შიდა კუთხეებისთვის პროფილების 45 გრადუსით გაჭრა.

11 დაამაგრეთ კედლის ფიქსაციის ხელსაწყოები ისე, რომ კუთხეებში დაიხუროს და აკრიფეთ მასზე 45 გრადუსით მოჭრილი პროფილები.


12 დარწმუნდით, რომ 45 გრადუსით გაჭრილი პროფილები ერთმანეთთან მთლიანად ფიქსირდება შიდა კუთხეებში.

გვერდი 1/1


ორიგინალური ნახატები და საცნობარო გვერდები

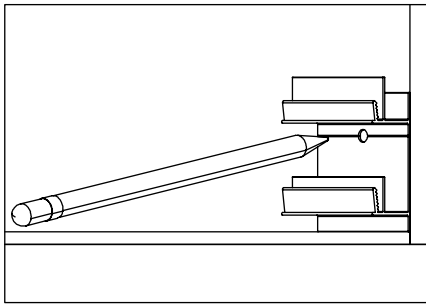


1 Place the wall fixation tools at 50cm intervals and mark the wall from the screw holes.

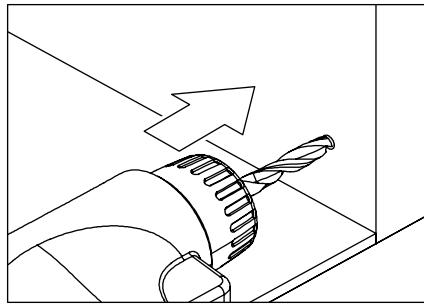


2 Drill the points that you have already marked.

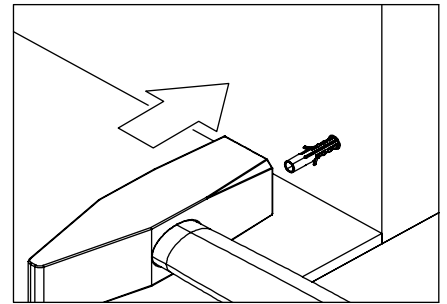


3 Place the correct dowels according to the wall material into the drilled holes.

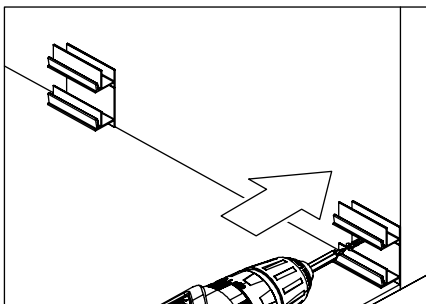


4 Screw the wall fixation tools to places that are drilled at 50cm intervals.

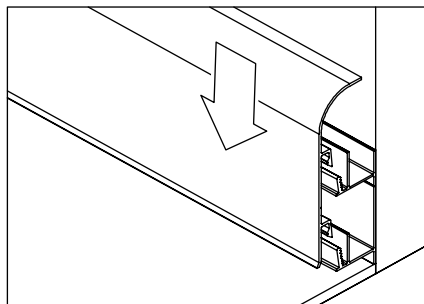


5 Assemble the profile on the wall fixation tools just like in the picture.

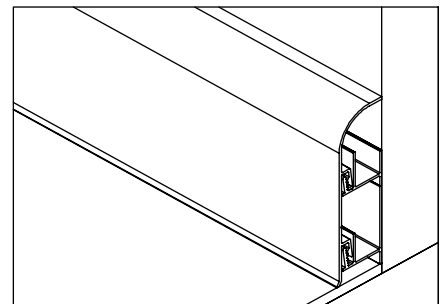


6 Make sure that the profile nails and the fixation tool's nails are completely connected to each other and be sure that the profile sole is fixed to the floor.

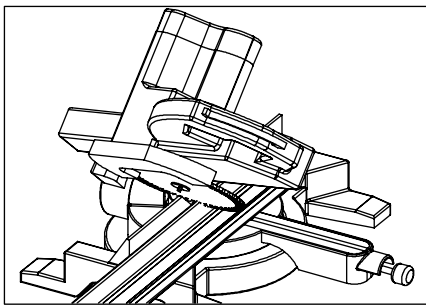


7 Cut profiles 45 degrees for external corners.

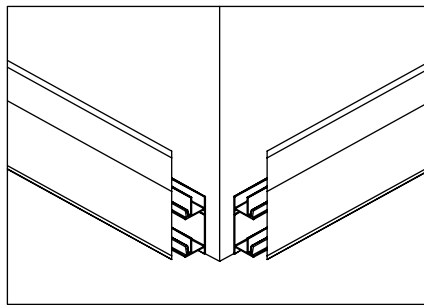


8 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

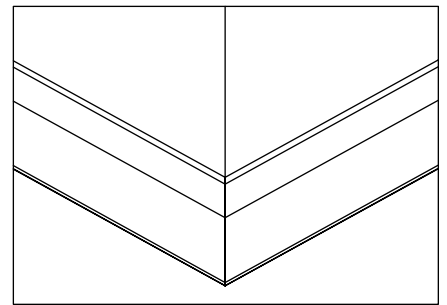


9 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

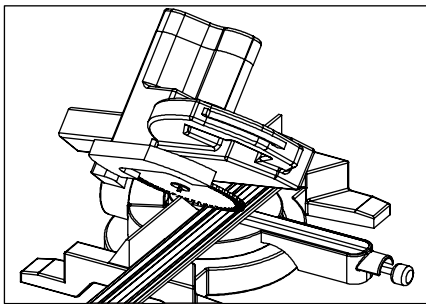

10 Cut profiles 45 degrees for internal corners.

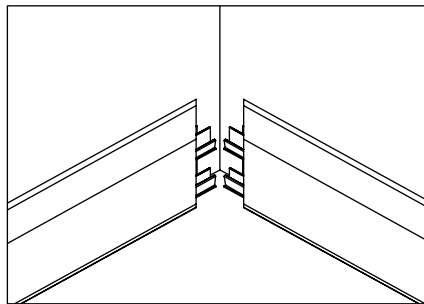

11 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

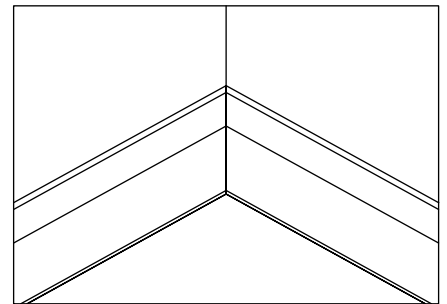

12 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.