

MOX Systems - ტექნიკური დოკუმენტაცია

assembly-manual-square-fix-en.pdf


ტექნიკური თარგმანი: განზომილებისთვის გაეცანით ორიგინალურ ნახატებს და საცნობარო გვერდებს.

წყაროს გვერდი 1


Square-Fix ASSEMBLY GUIDE

- 1 აირჩიეთ სწორი პროფილი კრამიტის სისტემის მიხედვით.
 - 2 დაიტანეთ სახსარი და შესაბამისად მოათავსეთ პროფილების სამაგრი.
 - 3 დააჭირეთ პროფილს სახსარზე დამაგრებამდე.
 - 4 დაიტანეთ სახსარი იმ ადგილებში, სადაც კერამიკა განთავსდება.
 - 5 მოათავსეთ ფილები პროფილზე, დარწმუნდით, რომ მათი კიდეები ერგება პროფილს და გასწორებულია.
 - 6 კუთხის სახსრებისთვის 45 გრადუსზე გაჭერით ორი პროფილი.
 - 7 გაასწორეთ პროფილები კუთხეებში და დააწექით სახსარში. 10
 - 8 მოათავსეთ ფილები პროფილზე, დარწმუნდით, რომ მათი კიდეები ერგება პროფილს და გასწორებულია.
- გვერდი 1/1


ორიგინალური ნახატები და საცნობარო გვერდები

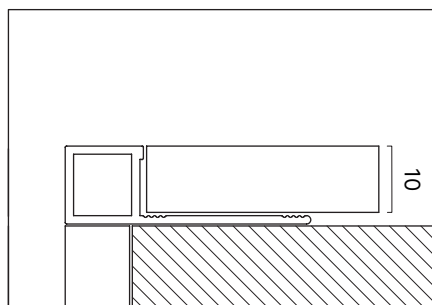


1 Pick the correct profile according to the tile thickness.

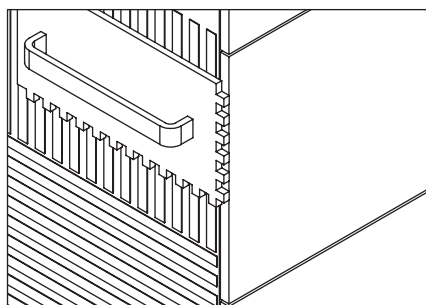


2 Apply joint and place the profiles anchor accordingly.

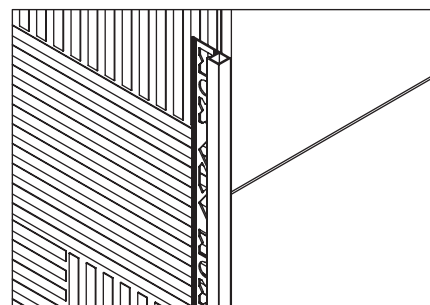


3 Press the profile until it is fixed to the joint.

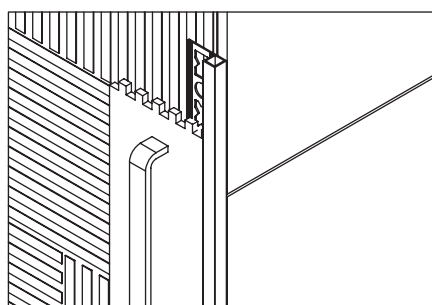


4 Apply joint to the places where the ceramics will be placed.

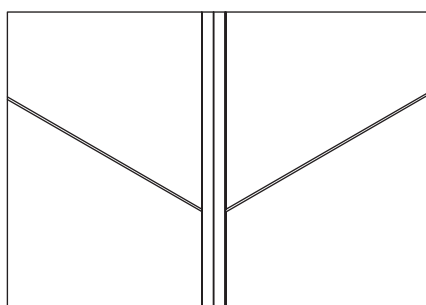


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

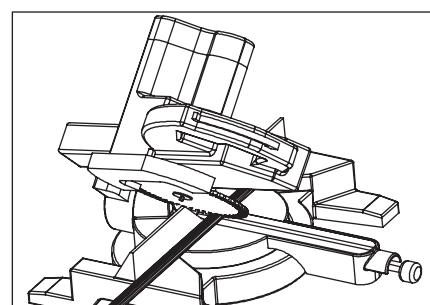

6 Cut two profiles at 45 degrees for corner joints.

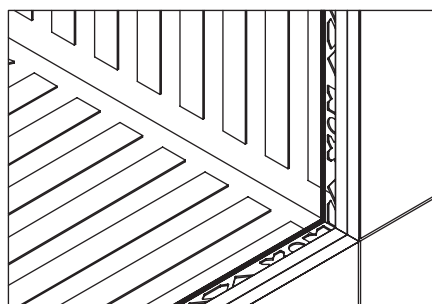

7 Align the profiles at the corners and press them into the joint.

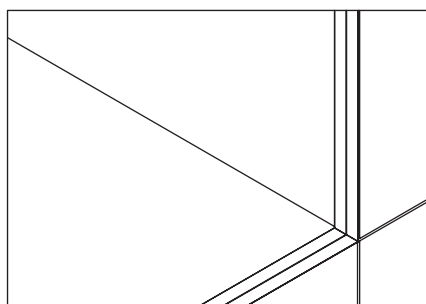

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.